

vtech®

Parent's Guide

Disney


Go! Go!  
Smart Wheels®

## Mickey Silly Slides Fire Station



# INTRODUCTION

Thank you for purchasing the **VTech® Go! Go! Smart Wheels® Mickey Silly Slides Fire Station!** Little learners will love to ring the bell, slide down the silly, rotating slide and turn the fire hydrant to save the day.

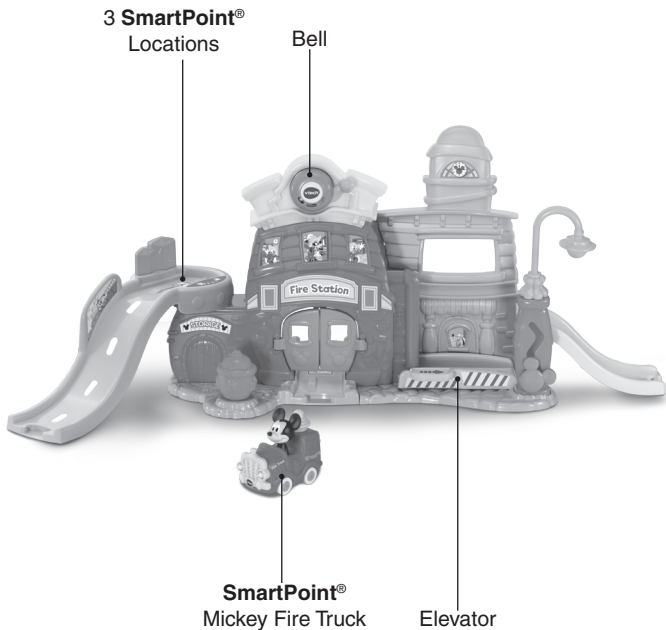


# INCLUDED IN THIS PACKAGE

**NOTE:** This toy is not intended for teething.



One **SmartPoint**<sup>®</sup>  
Mickey Fire Truck

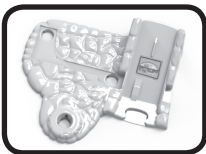

Fire station base A



Fire station base B



One fire station wall



One roof



One apartment wall



One pop-up piece




One elevator



Ramp track A



Ramp track B

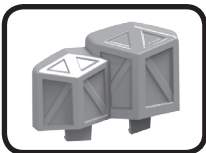

One box piece



One fire hydrant



One streetlight



One label sheet

- One parent's guide

**WARNING:**

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep this parent's guide as it contains important information.

**ATTENTION:**

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.


**NOTE:** Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

**Adult assembly required.**

**Ce jouet doit être assemblé par un adulte.**

**Unlock the packaging locks:**

- ① Turn the packaging lock counter-clockwise several times.
- ② Pull out and discard the packaging lock.

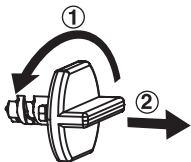


# GETTING STARTED

## BATTERY INSTALLATION

### Fire Truck

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the **Fire Truck**. Use a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.


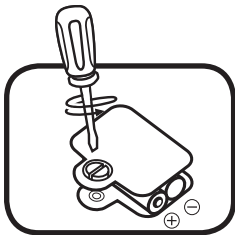


## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

# LABEL APPLICATION

Please adhere the labels to the playset securely as indicated on the following pages:

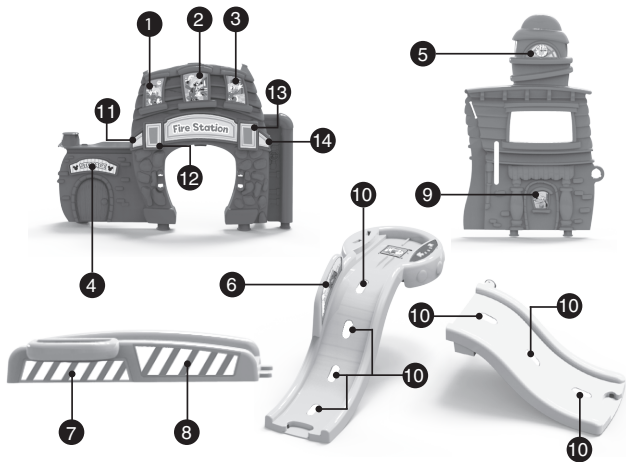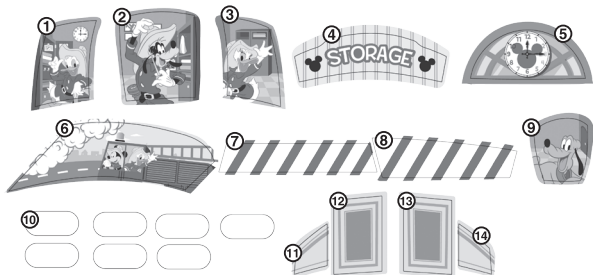


# ASSEMBLY INSTRUCTIONS


## Mickey Silly Slides Fire Station

With the VTech® Go! Go! Smart Wheels® Mickey Silly Slides Fire Station, safety comes first. To ensure your child's safety, adult assembly is required.

1. Insert the **Fire Station Wall** into **Fire Station Base A** and **B**. Then, insert the **Apartment Wall** into **Fire Station Base B**, as shown below. You will hear a “click” sound to indicate the pieces are secure. Once the pieces are connected, they cannot be detached.

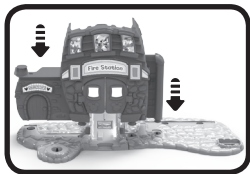


2. Connect the **Apartment Wall** to the **Fire Station Wall**, as shown below. You will hear a “click” sound to indicate the pieces are secure. Once the pieces are connected, they cannot be detached.

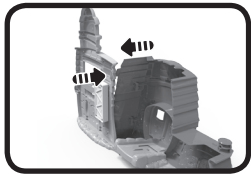




3. Attach the **Roof** to the top of the **Fire Station Wall**, as shown below. Once the pieces are connected, they cannot be detached.

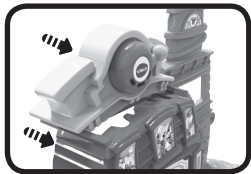


4. Insert the opening of the **Elevator** into the elevator track on the **Fire Station Wall** vertically. Then, rotate the **Elevator** to make it rest horizontally on the elevator track, as shown below.

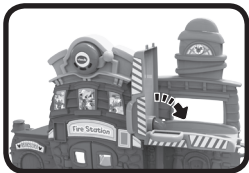


5. Insert the **Streetlight** into **Fire Station Base B**, as shown below. You will hear a “click” sound to indicate the pieces are secure. Once the pieces are connected, they cannot be detached.



6. Attach **Ramp Track B** into the **Apartment Wall** and **Streetlight Base**. You will hear a “click” sound to indicate the pieces are secure. Once the pieces are connected, they cannot be detached.

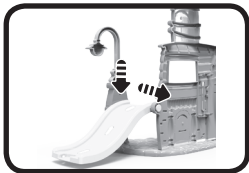


7. Insert the **Pop-Up Piece** into the back of the **Apartment Wall**, as shown below. You will hear a “click” sound to indicate the pieces are secure. Once the pieces are connected, they cannot be detached.

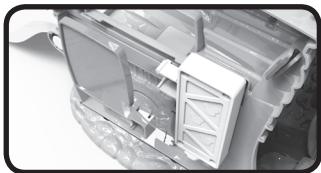

8. Insert the **Fire Hydrant** into **Fire Station Base A**, as shown below. You will hear a “click” sound to indicate the pieces are secure. Once the pieces are connected, they cannot be detached.



9. Attach **Ramp Track A** to the **Fire Station Wall**. Then, Attach the **Box Piece** into **Ramp Track A**. You will hear a “click” sound to indicate the pieces are secure. Once the pieces are connected, they cannot be detached.

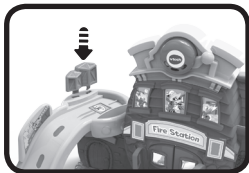

Once you've completed the above steps, you are ready to play! You can connect this playset to other **Go! Go! Smart Wheels®** playsets and tracks (each sold separately).




# PRODUCT FEATURES

## Fire Truck

### 1. ON/OFF SWITCH

To turn the **Fire Truck ON**, slide the **On/Off Switch** on the **Fire Truck** to the **ON (⏻)** position. To turn the **Fire Truck OFF**, slide the **On/Off Switch** to the **OFF (●)** position.

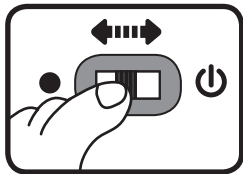

### 2. AUTOMATIC SHUT-OFF


To preserve battery life, the included **Fire Truck** will automatically power-down after approximately 60 seconds without input. The unit can only be turned on again by pressing the **Character Button**, pushing the **Fire Truck** quickly or triggering a **SmartPoint®** location.

**NOTE:** This product is in Try-Me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.


## ACTIVITIES

### Fire Truck


1. Slide the **On/Off Switch** to turn the **Fire Truck ON**. You will hear a song, fun phrases and sounds. The lights will flash with the sounds.

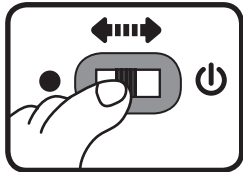

2. Press the **Character Button** to hear fun sounds, songs and phrases. The lights will flash with the sounds.

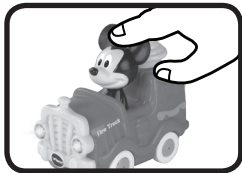

3. Push the **Mickey Fire Truck** to hear fun sounds and melodies. While a melody is playing, continue pushing the **Mickey Fire Truck** to add in fun sounds on the top of the melody. The lights will flash with the sounds.

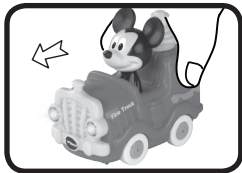

4. For added fun, the **Mickey Fire Truck** interacts with the **Go! Go! Smart Wheels® Mickey Silly Slides Fire Station**. Simply put the **Mickey Fire Truck** on one of the playset's three **SmartPoint®** locations to see the **Mickey Fire Truck's** lights flash and to hear fun sounds, short tunes and phrases. The **Mickey Fire Truck** even interacts with other **Go! Go! Smart Wheels®** playsets (each sold separately).

## ACTIVITIES

### Mickey Silly Slides Fire Station


1. Place the **Mickey Fire Truck** on any of the playset's three **SmartPoint®** locations to trigger fun sounds, phrases and music.



- Place the **Mickey Fire Truck** on the elevator and lift the elevator to the second floor. Watch as a scene rises behind the wall, and race down the track to put out the fire!



- Ring the bell to sound the alarm, spin the fire hydrant and streetlight and more for added role play fun.

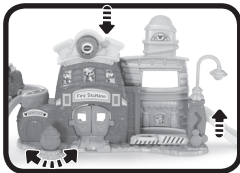

## SONGS

- A Firefighter went town to help out all the people,  
Saw a fire,  
Put it out,  
Now, I'd call that a rescue!
- Three little kittens in a tree, and I will surely save them!
- Fire alarm's ringin',  
My siren's singin',  
We're gonna race, race, race,  
Race to the call!

## MELODY LIST

- Yankee Doodle
- Three Little Kittens
- Bingo
- Camptown Races
- Ring Around a Rosy
- Bear Went Over the Mountain

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

## IMPORTANT NOTE:

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***

Read our complete warranty policy online at  
*vtechkids.com/warranty*

