

vtech[®]

User's Manual

Call & Chat Learning Phone™



© 2013 VTech
Printed in China
91-009667-000 (US)

Dear Parent,

At **VTech**®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech**® has developed the **Preschool Learning**™ series of interactive toys.

Preschool Learning™ features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**™, learning is fun from day one!

At **VTech**®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**® with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at **VTech**®

To learn more about **Preschool Learning**™ series and other **VTech**® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Call & Chat Learning Phone™**.

The **VTech® Call & Chat Learning Phone™** helps your child learn while experiencing great pretend play with their very own smart phone. 10 activities teach letters, alphabetical order, numbers, time concepts, music and more! A special microphone feature also allows your child to use real voice activation play, and a phone book allows for pretend calls to family and friends. Ready for a chat? Just pick up your **Call & Chat Learning Phone™** and start talking!

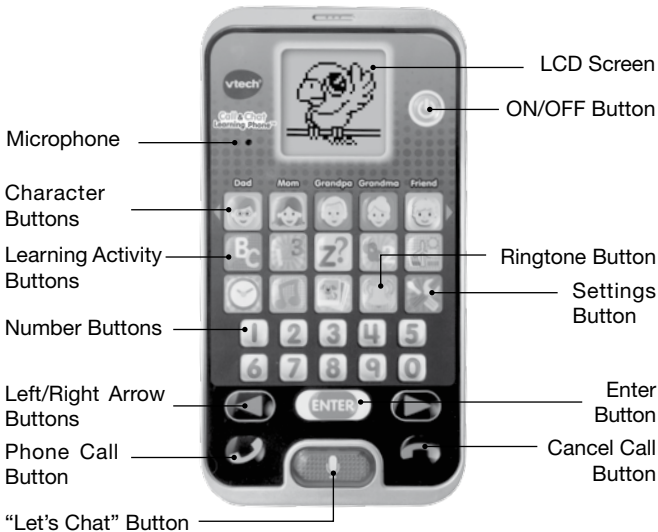

INCLUDED IN THIS PACKAGE

- One VTech® Call & Chat Learning Phone™
- One user's manual

WARNING:

All packing materials such as tape, plastic sheets, packing locks and tag are not part of this toy, and should be discarded for your child's safety.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

 
DEMO STRIP REMOVAL:

When the product is taken out of the packaging, please make sure the unit is OFF and then remove the demo strip to activate normal play mode. The volume level will be much lower in normal play mode to protect the hearing of the user.

Note:

Please keep this user's manual as it contains important information.

Unlock the packaging locks:

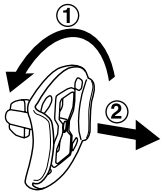


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is **OFF**.
2. Locate the battery cover on the back of the unit.
3. Use a screwdriver to open the battery cover.
4. Install 2 new “AAA” Size (AM-4/LR03) batteries following the diagram inside the battery box.
5. Replace the battery cover.

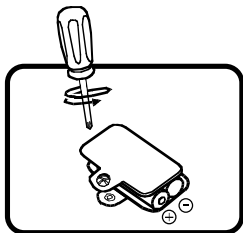

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. ON/OFF BUTTON

Press the **ON/OFF BUTTON** to turn the unit **ON** and press it again to turn the unit **OFF**.

2. 5 CHARACTER BUTTONS



Press one of the **5 CHARACTER BUTTONS** to bring up that person's phone number.

3. LEARNING ACTIVITY BUTTONS



Press the **LEARNING ACTIVITY BUTTONS** directly to play one of the 8 learning activities.

4. LET'S CHAT BUTTON

Press the **LET'S CHAT BUTTON** to enter the Let's Chat activity. This activity uses the voice activation feature.

5. RINGTONE BUTTON

Press the **RINGTONE BUTTON** to set the ringtone of your phone. There are 5 different ringtones to choose from. Use the arrow buttons to select one and then press Enter to confirm. The selected ringtone will be heard when pressing the **PHONE CALL BUTTON**.

6. SETTINGS BUTTON

Press the **SETTINGS BUTTON** to adjust the screen contrast or turn the background music on/off. Use the arrow buttons and Enter to select which item to adjust, then use the arrow buttons to make adjustments. Press Enter to confirm and exit the Settings menu.

7. PHONE CALL BUTTON

Press the **PHONE CALL BUTTON** to make a phone call. You will hear the phone ringing and then be able to leave a message on the answering machine.

8. CANCEL CALL BUTTON

Press the **CANCEL CALL BUTTON** at any time to exit the current activity and return to the opening animation.

9. MICROPHONE

This Microphone hole is used for the voice activation feature. The suggested distance to keep between the microphone and your mouth is about 4-5 inches.



10. ENTER BUTTON

Press the **ENTER BUTTON** to confirm your choice.

11. ARROW BUTTONS

Press the **ARROW BUTTONS** to make a selection in activities or menus.

12. NUMBER BUTTONS



Press the **NUMBER BUTTONS** to learn numbers or to answer number-related questions.

13. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

ACTIVITIES:

The **VTech® Call & Chat Learning Phone™** offers a total of 10 fun activities to play.

1: Phone Book

Press any of the **5 CHARACTER BUTTONS** to enter that person's phone number page. Press the Call button to call them, then use the microphone feature to leave a message when you see the light go on. You can also edit the default phone number for each person. Just press Enter when in the phone number page and use the arrow and number buttons to change the phone number.



2: Letter Chat

In this activity, you can learn the letters of the alphabet by using the arrow buttons to scroll from A to Z.



3: Number Counting

In this activity, press any number to show the number and see a counting animation. Use the arrow buttons to scroll from one number to the next.



4: Letter Quiz

In this activity, you will be asked some letter questions. Use the arrow buttons to choose your answer and then press Enter.



5: Number Quiz

In this activity, you will be asked some number questions that will gradually get more challenging. Use the arrow buttons to choose your answer and then press Enter, or press the number buttons directly to answer the question.



 
6: Charge It Up!

Uh oh! The cell phone's battery is low. Let's charge the phone by using wind power and solar power. Listen to the instructions and then blow into the microphone to spin the windmill or move the clouds away from the sun.



7: My Clock

In this activity, you can learn the different hours on a clock. Use the arrow buttons to move the clock hands and press Enter to hear the clock chime out the number.



8: Music Fun

In this activity, you can choose from 5 different melodies to enjoy. While listening to the melody, press the arrow buttons to change instruments for added fun.



9: Picture Fun

In this activity, you can choose from 8 different pictures to enjoy. Use the arrow buttons to choose another picture and press Enter to watch an animation.



10: Let's Chat

In this activity, you can press the Let's Chat button to make a call to the friendly bird. He loves to chat and will ask you questions. Use the microphone to have a chat with him and respond to his questions. Press the cancel button at any time to hang up.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit will be ready to play again.

5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have.

A support representative will be happy to assist you. Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtechkids.com

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

IMPORTANT NOTE:

Creating and developing **VTech**[®] Preschool Learning products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution : changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

