

vtech[®]
Baby

User's Manual

Touch & Learn Musical Bee™



© 2008 VTech
Printed in China

91-078900-000-006 (美)

Dear Parent:

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning** series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

 
Your Friends at **VTech**[®]

To learn more about **Infant Learning** and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Touch & Learn Musical Bee™** learning toy.

The **VTech® Touch & Learn Musical Bee™** is a soft plush toy for babies from 6 months and up. This busy little bee has plenty to teach! Touch the shapes on the legs to learn about colors, shapes, numbers and playful melodies in the play time mode. Soothing lullabies play in the sleepy time mode with a soft light that fades in and out. Play, learn and sleep with the **VTech® Touch & Learn Musical Bee™**.

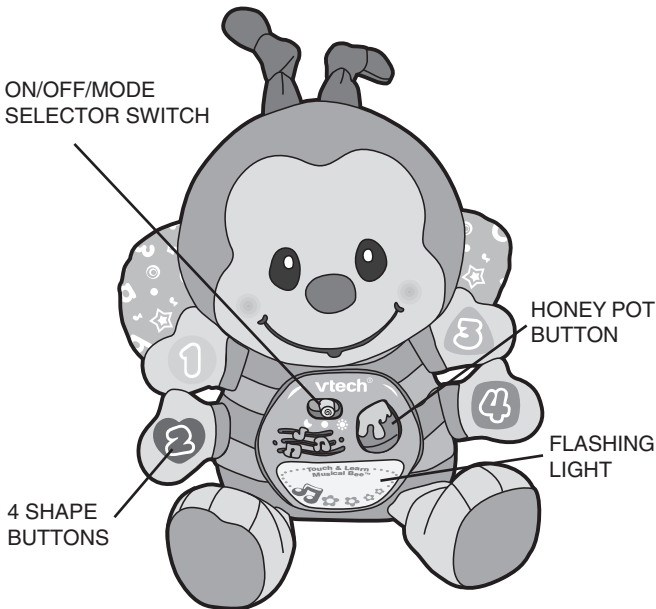


INCLUDED IN THIS PACKAGE

- One VTech® Touch & Learn Musical Bee™ learning toy
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover inside the back of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new 'AA' (UM3/LR6) batteries following the diagram inside the battery box.
4. Replace the battery cover and tighten the screw to secure.

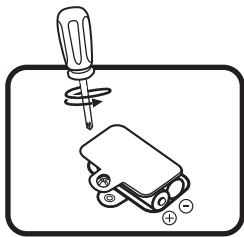

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.

 
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **PLAY TIME MODE** (☀️) or to the **SLEEPY TIME MODE** (🌙) position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** (●) position.

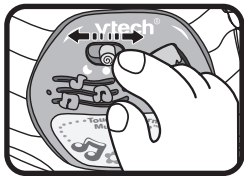

2. SOUND SENSOR

 
The **VTech® Touch & Learn Musical Bee™** is equipped with a sound sensor. Once the unit has automatically powered down, the sound sensor will activate after several seconds of continuous sound, such as baby's crying. You will hear two random melodies in the play time mode and approximately three minutes of continuous music in the sleepy time mode.

3. AUTOMATIC SHUT-OFF


To help preserve battery life, the **VTech® Touch & Learn Musical Bee™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button or by activating the sound sensor.

ACTIVITIES


1. Slide the **on/off/mode selector switch** to turn the unit on. You will hear a song and a phrase related to the selected mode. The light will flash with the sound in the play time mode and fade in and out in the sleepy time mode.

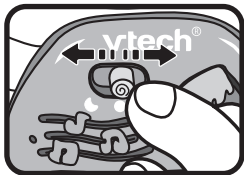

 
2. Press the **shape buttons** to learn about colors, shapes and numbers and hear a variety of fun sounds and short tunes in the play time mode. In the sleepy time mode, press the shapes buttons to hear a variety of pre-programmed melodies. The light will flash with the sound in the play time mode and fade in and out in the sleepy time mode.

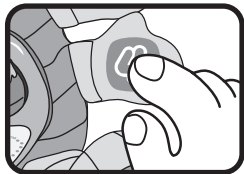

 3. Press the **honey pot button** to hear playful phrases and sounds in the play time mode. A variety of soft, soothing melodies will play for several minutes in the sleepy time mode. The light will flash with the sound in the play time mode and fade in and out in the sleepy time mode.

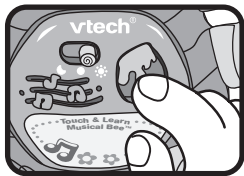

 4. Move the bee in the play time mode to activate the motion sensor and hear a bee sound, a song or a variety of melodies. The light will flash with the sound. The motion sensor will not activate in the sleepy time mode.

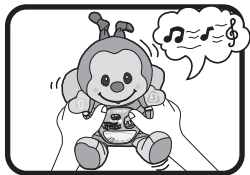

MELODY LIST

1. Flight of the Bumblebee
2. Oh! Susanna
3. Aloutte
4. Hickory Dickory Dock
5. Brahms' Lullaby
6. Rock-a-bye Baby
7. Twinkle, Twinkle, Little Star
8. Beautiful Dreamer
9. Sailing, Sailing
10. Frere Jacques
11. Moonlight Sonata
12. Greensleeves

SONG LYRICS

Song 1 (to the tune of “Here We Go Round the Mulberry Bush”)

I'm a busy little bee,
Buzzing here, buzzing there.
I'm a busy little bee,
Making honey for us to share!

Song 2

Flying up and flying down,
Smelling flowers all day long!

Song 3

Another busy day is done,
Lay down your sleepy head and rest.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ices-003.
Cet appareil numérique de la classe b est conforme à la norme nmb-003 du Canada.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.