


**vtech**<sup>®</sup>


# Instruction Manual

## Drill & Learn Workbench™

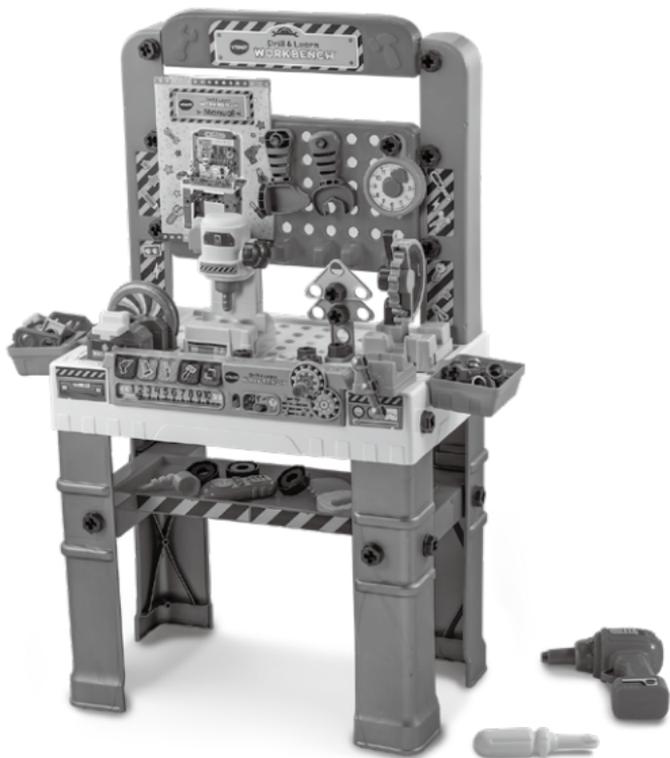



# INTRODUCTION

Thank you for purchasing the **Drill & Learn Workbench™**. Let's build! Get ready for role-play fun with the included workbench, working toy drill, hammer, wrench, sander, saw and screws. It's time to tackle the to-do list!

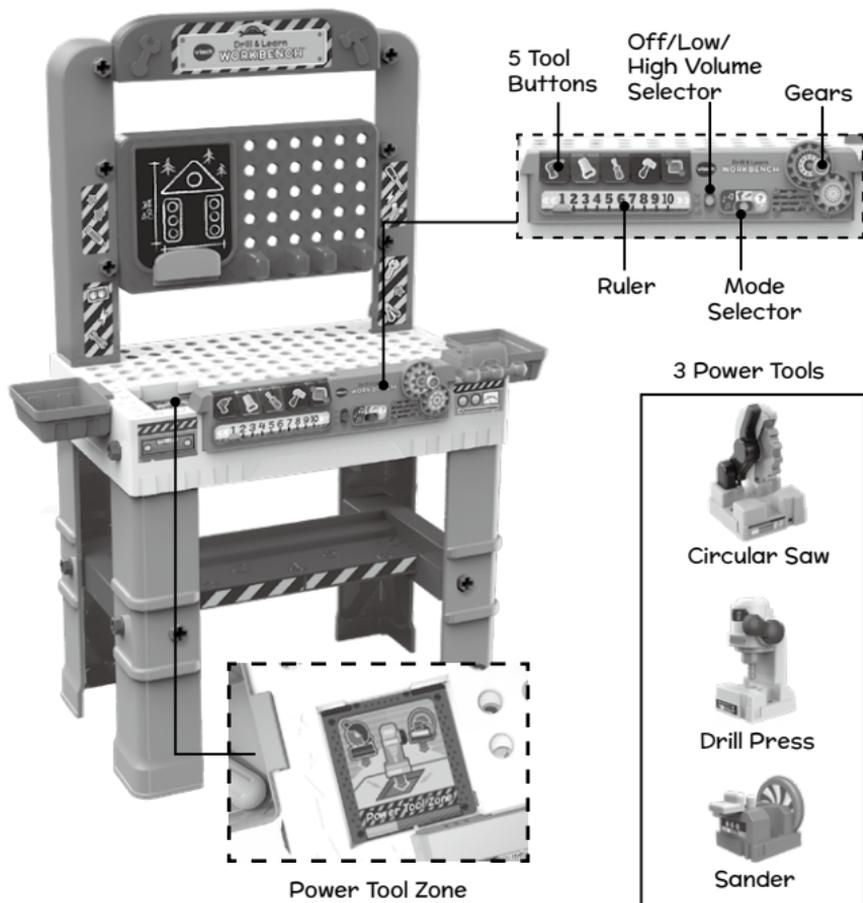


# INCLUDED IN THE PACKAGE


- 1 Workbench top
- 1 Electronic panel
- 1 Back panel

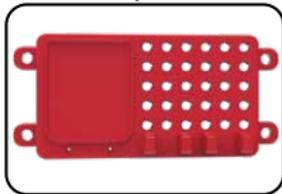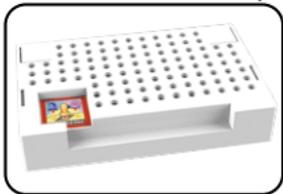

- 1 Back panel top
- 2 Panel supports
- 4 Legs

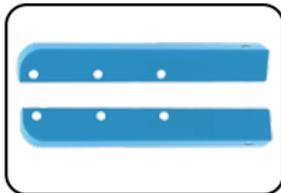

- 2 Trays
- 1 Left leg support
- 1 Right leg support

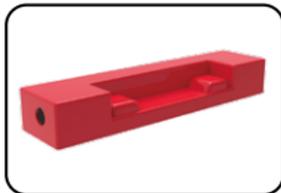

- 1 Center tray
- 1 Circular saw top
- 1 Circular saw base




• 1 Sander base



• 1 Sander top




• 1 Drill press top

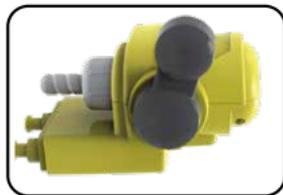

• 1 Drill press base



• 1 Project Guide holder • 1 Clock

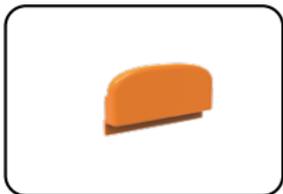

• 1 Drill



• 1 Wrench



• 1 Hammer



• 1 Walkie-Talkie



• 1 Saw



• 1 L-wrench



- 1 Vise



- 1 Screwdriver




- 1 Large gear



- 17 Building pieces



- 4 Toy pegs & 4 Toy Wheels

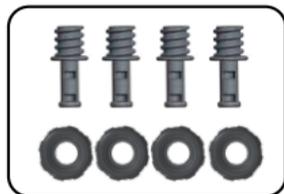

- 10 Blue toy screws & nuts




- 5 Toy bolts



## For Workbench Assembly

- 19 Gray toy screws & nuts

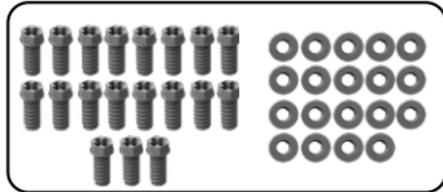

- 10 Real screws



### Note:

The gray toy screws and toy nuts are for assembly.  
The blue toy screws and toy nuts are play pieces.

• 1 Label sheet



- Project Guide
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.


## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

### Unlock the Packaging Locks

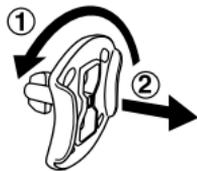

① Rotate the packaging locks counterclockwise 90 degrees.

② Pull out the packaging locks and discard.

 **CAUTION:**

Adult assembly required. This package contains small parts. For your child's safety, do not let your child play with the toy until it is fully assembled.

 **ATTENTION :**

Ce jouet contient des petites vis. Il doit être assemblé par un adulte. Pour la sécurité de votre enfant, ne pas le laisser jouer avec tant qu'il n'est pas complètement assemblé par un adulte.

 **CAUTION:**

For your child's safety, do not let your child stand or sit on the table of the Workbench.

 **ATTENTION :**

Pour la sécurité de votre enfant, ne laissez pas votre enfant s'asseoir ou se tenir debout sur le plan de travail de l'établi.

 **WARNING:**

Adult assembly required for battery installation. Keep batteries out of reach of children.


 **ATTENTION :**

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

# BATTERY INSTRUCTIONS

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the electronic panel, use a screwdriver to loosen the screws, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screws to secure.

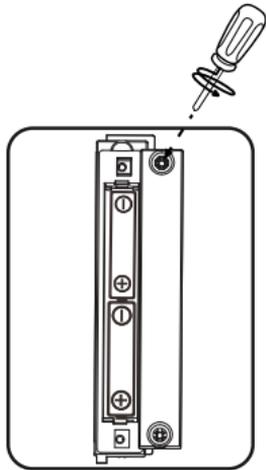

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## **IMPORTANT : INFORMATIONS CONCERNANT LES PILES**

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.


- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.



## **PILES RECHARGEABLES :**

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

# LABEL APPLICATION

Please securely stick the labels to the toy as indicated below:

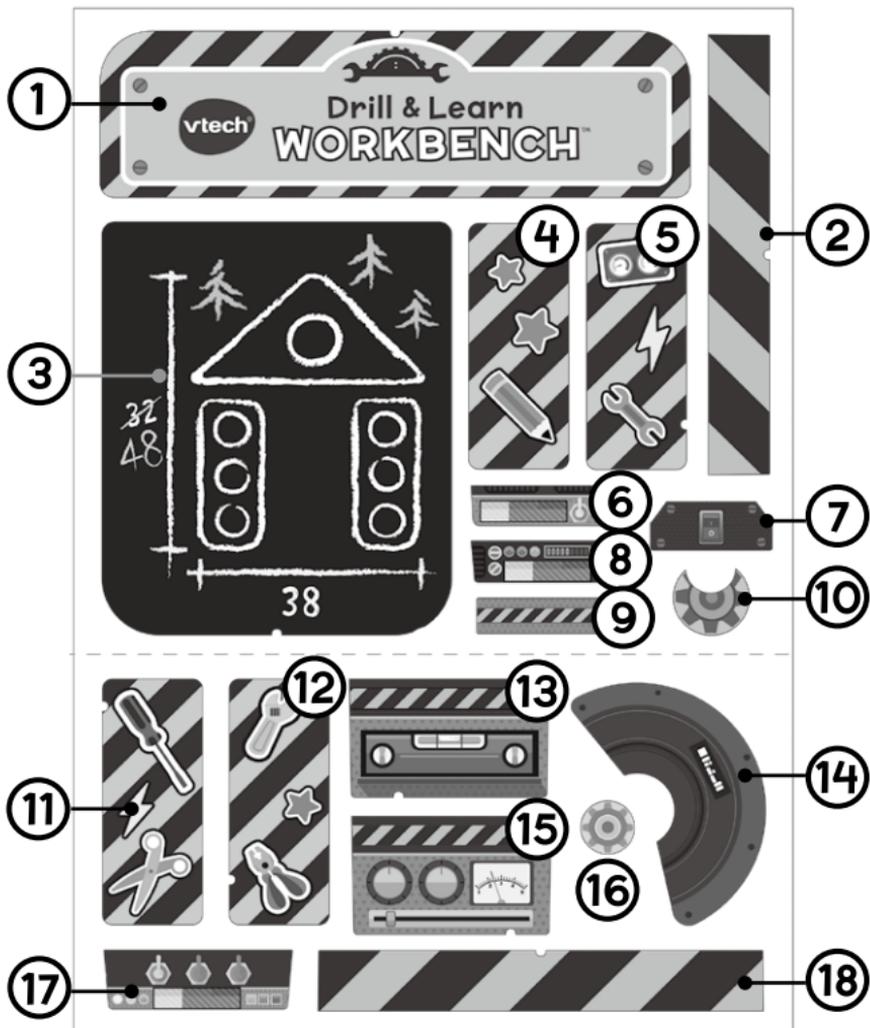


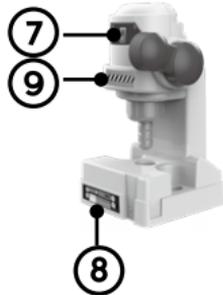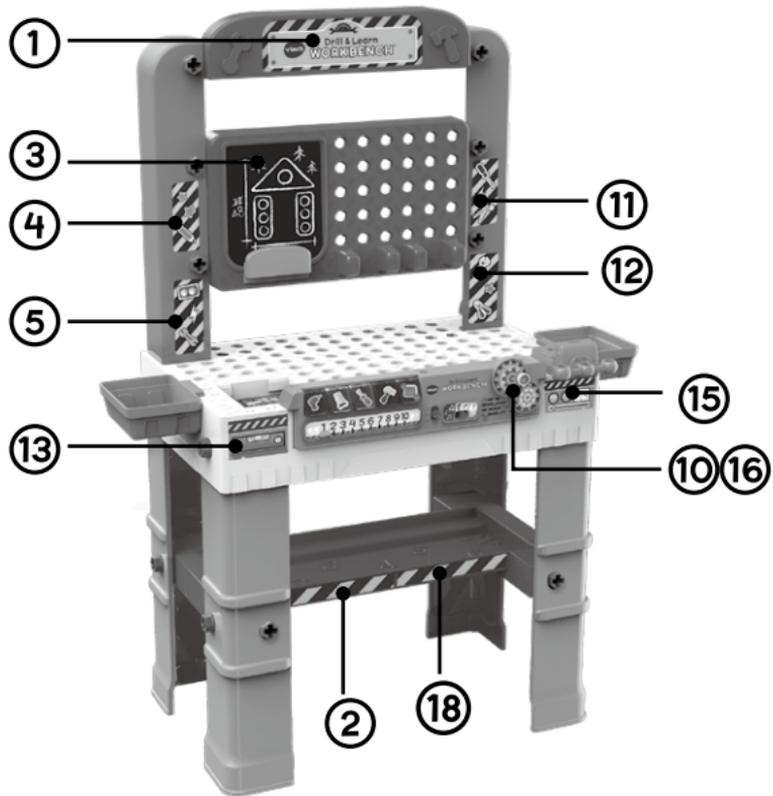


# WORKBENCH ASSEMBLY INSTRUCTIONS

Please refer to images on pages 3, 4 and 5.


1. Use the included **L-Wrench** to screw a **Gray Toy Nut** to a **Gray Toy Screw**. Repeat for all 19 **Gray Toy Nuts** and **Gray Toy Screws**.

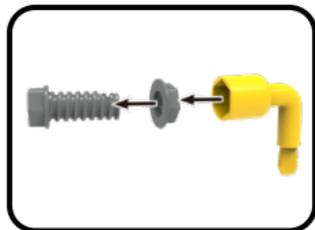


2. Use the included **Drill** or **Screwdriver** to tighten 8 **Gray Toy Screws** and **Nuts** to attach the **Right and Left Leg Supports** where the center tray will rest on the left and right legs.

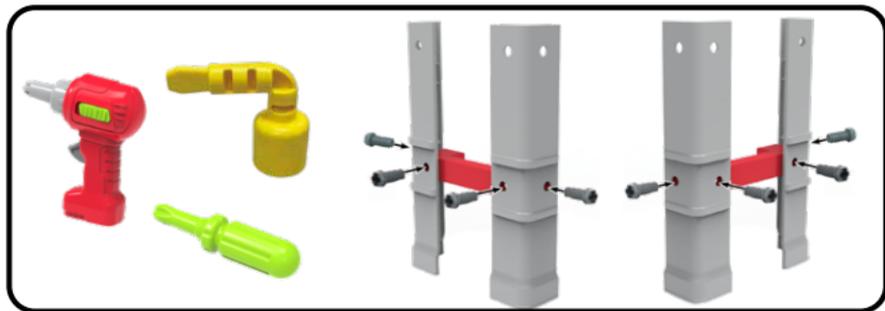


3. Insert the **Center Tray** into the two **Leg Supports**. You will hear the pieces snap together when correctly inserted.

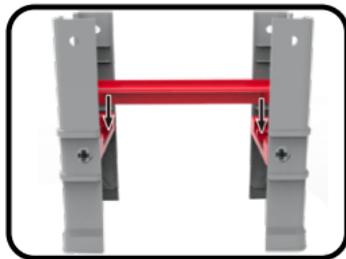

4. Insert the **Large Gear** into the **Electronic Panel**. Insert the **Electronic Panel** into the slot of the **Workbench Top**. Use four of the **Real Screws** and your own screwdriver to securely attach the **Electronic Panel**.

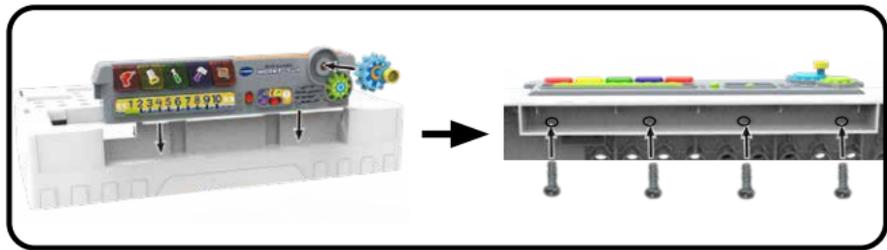


5. Use four of the **Real Screws** and your own screwdriver to securely attach the **Vise**.

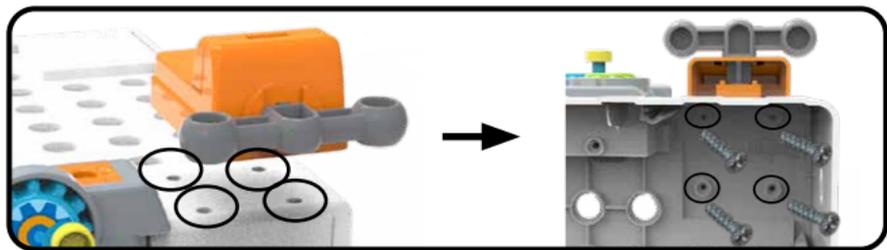


6. To secure the base to the legs, use the included **Drill or Screwdriver** to tighten two of the **Gray Toy Screws** to the **Workbench Top**.



7. Use the remaining two **Real Screws** to attach the **Project Guide Holder** to the **Back Panel** of the **Workbench**.

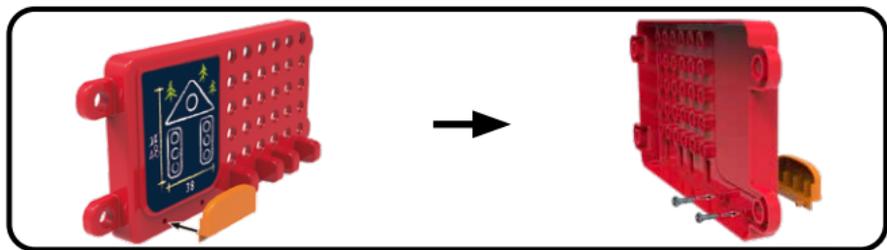


8. Use four of the **Gray Toy Screws** and the included **Drill** or **Screwdriver** to tighten the **Back Panel** of the **Workbench** to the **Panel Supports**.

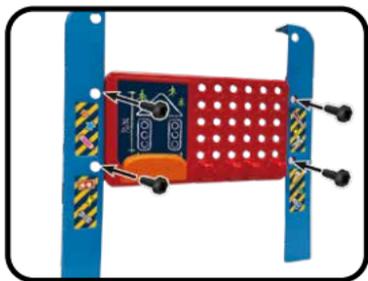

9. Use two of the **Gray Toy Screws** and the included **Drill** or **Screwdriver** to tighten the **Back Panel Top** of the **Workbench** to the **Panel Supports**.



10. Insert the **Panel Supports** into the **Workbench Top** and use two of the **Gray Toy Screws** and the included **Drill** or **Screwdriver** to tighten the supports.

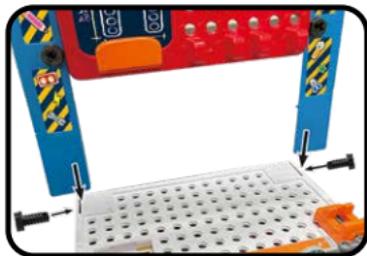

11. Clip the two **Trays** into the slots to the left and right of the **Workbench Top**.



12. Use a **Gray Toy Screw** and the included **Drill** or **Screwdriver** to attach the **Clock** to the **Panel** of the **Workbench**.




13. Screw a **Peg** to the **Panel** of the **Workbench** and hang the **Wrench** or **Hammer** on the **Peg**, or insert the **Wrench** or **Hammer** into a slot on the **Panel** of the **Workbench**.




# POWER TOOL ASSEMBLY INSTRUCTIONS

## Circular Saw, Drill Press and Sander


1. Insert the **Drill Press Top** into the **Drill Press Base**. You will hear the pieces snap into place when properly inserted.

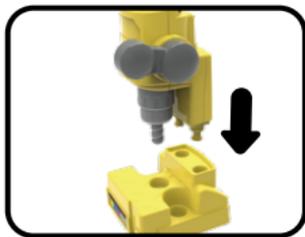

2. Insert the **Circular Saw Top** into the **Circular Saw Base**. You will hear the pieces snap into place when properly inserted.

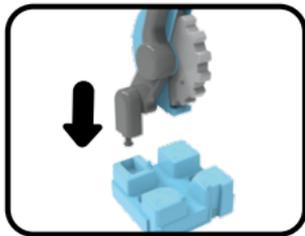

3. Insert the **Sander Top** into the **Sander Base**. You will hear the pieces snap into place when properly inserted.

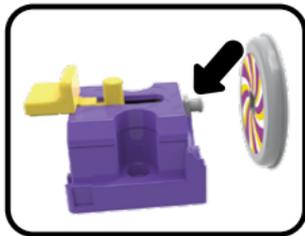

**NOTE:** The tool tops and bases cannot be disassembled after assembly.

## Activating Normal Play Mode


The first time the **Drill & Learn Workbench™** is used, you will need to exit Try-Me mode and activate Normal Play mode.

1. Turn the unit **On**.
2. Place a **Power Tool** on the **Power Tool Zone**. You will hear a sound indicating that the unit is in Normal Play mode.

## Using the Power Tools


### Drill Press

- Place the **Drill Press** in the **Power Tool Zone**.
- Place a rectangular **Building Piece** on the base of the **Drill Press**.
- Press down the **Drill Press** handle to pretend to make straight holes.

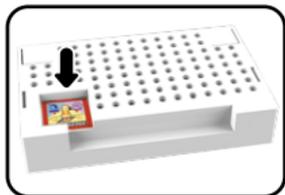

## Circular Saw

- Place the **Circular Saw** in the **Power Tool Zone**.
- Connect two rectangular **Building Pieces** together.
- Place the **Building Piece** on the **Circular Saw** base.
- Press down the gray handle of the **Circular Saw** to “cut” the **Building Piece** into two parts.

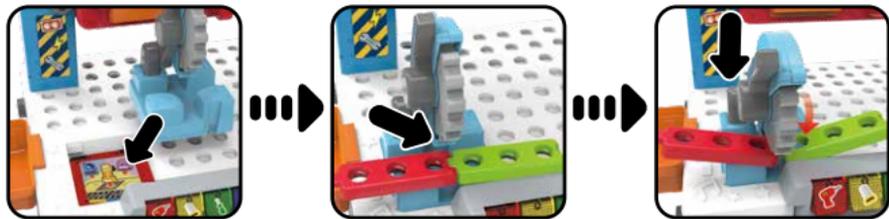

## Sander

- Place the **Sander** in the **Power Tool Zone**.
- Place a rectangular **Building Piece** on the peg of the sander.
- Push the bar forward to pretend to make the block smooth.



## TO BEGIN PLAY

Move the **Off/Low/High Volume Selector** to Low or High to turn on the unit, then move the **Mode Selector** to select a game to play.

## PRODUCT FEATURES


### 1. Off/Low/High Volume Switch

To turn the unit **On** or adjust the volume, slide the **Off ●/Low 🗨/High 🗨🗨) Volume Selector** to Low or High volume. To turn the unit **Off**, slide the selector to **Off**.




### 2. Mode Selector

Slide the **Mode Selector** to choose from three different activities.

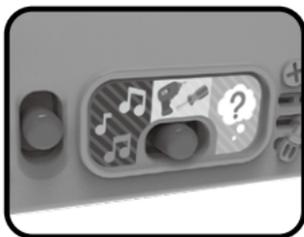

### 3. Power Tools

Place **Circular Saw, Drill Press or Sander** in the **Power Tool Zone** to learn about colors, tools facts and fun sound effects. Listen to sing-along songs or answer the activity questions.

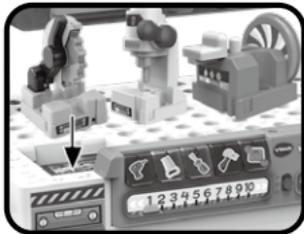


#### 4. Tool Buttons

Press the **Tool Buttons** to learn about colors and tools facts, listen to sing-along songs or to answer the activity questions. The light will flash or light up with the songs and melodies.




#### 5. Ruler

Move the ruler slider to learn about numbers and ruler facts, listen to sing-along songs or answer the activity questions.

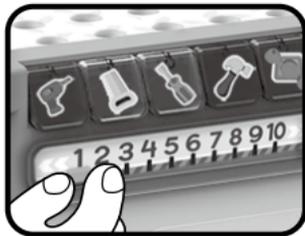

#### 6. Gears

Turn the **Gears** to learn about gear facts, listen to gear sound effects and sing-along songs or repeat question.

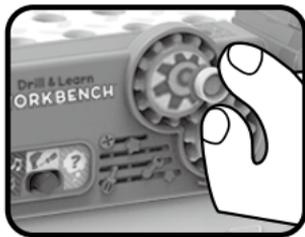

#### 7. Automatic Shut-Off

To preserve battery life, the **Drill & Learn Workbench™** will automatically shut off after approximately 1 minute without input. The unit can be turned on again by sliding the **Off/Low/High Volume Selector**.

#### NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

# ACTIVITIES


## 1. Music Mode

Move the **Mode Selector** to Music Mode  to hear fun songs. Press the buttons, or insert the circular saw, drill press, or sander tools in the Power Tool Zone, or move the ruler slider to listen to sing-along songs about tools and number facts. Turn the Gears to listen to fun music.



## 2. Free Play Mode

Move the **Mode Selector** to Free Play Mode  to enter this activity. Press the buttons, or insert the circular saw, drill press, or sander tools in the Power Tool Zone, or move the ruler slider to learn about tools, numbers, colors and measuring. Turn the Gears to learn about gear fact and to listen to gears sounds.

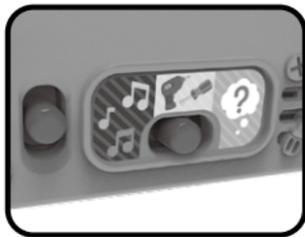

## 3. Quiz Mode

Move the **Mode Selector** to Quiz Mode  to enter this activity. The workbench will ask a series of questions about tools, colors, numbers, or recognizable tools (circular saw, drill press, and sander); press the buttons, or move the ruler slider to answer. Turn the gears to repeat the question.



# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.

5. If the unit still does not work, install a new set of batteries.

### **CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Supplier's Declaration of Conformity**  
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®  
Model: 5600  
Product Name: Drill & Learn Workbench™  
Responsible Party: VTech Electronics North America, LLC  
Address: 1156 W. Shure Drive, Suite 200,  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.  
CAN ICES-003(B)/NMB-003(B)

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***

***vtechkids.ca***

**Read our complete warranty policy online at  
*vtechkids.com/warranty*  
*vtechkids.ca/warranty***



TM & © 2023 VTech Holdings Limited.  
All rights reserved.  
IM-560000-000  
Version: 0