



**Smart Start®**

# **Sing 'n Learn™ CD Player**

**USER'S MANUAL**



*Dear Parent:*

*At VTech® we know that a child has the ability to do great things.*

 
*That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. Whether it's introducing numbers and letters, identifying colors and shapes, or stimulating senses with lights and music, all VTech® infant and toddler learning products encourage your child's natural growth and discovery skills.*

*When it comes to providing electronic learning products that enlighten, entertain and develop minds, at VTech® we see the potential in every child.*

# INTRODUCTION

Thank you for purchasing the **VTECH® Sing 'n Learn™ CD Player** learning toy! We at **VTECH®** are committed to providing the best possible products to entertain and educate your child. Should you have any questions or concerns, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada.

The **VTECH® Sing 'n Learn™ CD Player** learning toy is a characterized CD player for toddlers 6 months and up. Four light-up shape keys teach beginning colors and shapes as well as 'counting'. Turn his arms to hear unique sound effects and melodies. Toddlers will enjoy watching the CD spin and eyes move as they groove to the music.

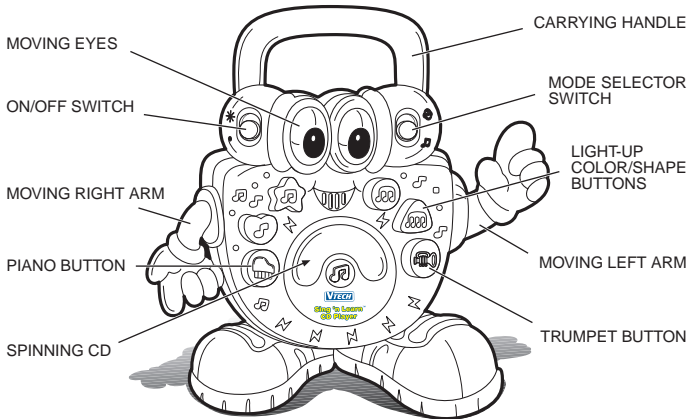


# INCLUDED IN THIS PACKAGE

- One Sing 'n Learn™ CD Player learning toy
- One instruction manual

**WARNING:** All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

## BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 2 "AA" (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

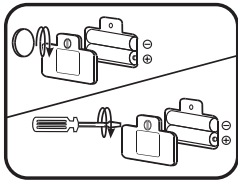

## BATTERY NOTICE

- Install batteries correctly observing the polarity ( +, - ) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types.
- Remove exhausted or new batteries from the equipment when the unit will not be used for an extended period of time.
- Do not dispose of batteries in fire.

- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.

## **WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.**

 
**NOTE:** If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.


If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada, and a service representative will be happy to help you.

## **TO BEGIN PLAY**


1. To begin play, slide the **ON/OFF SWITCH** to the **ON** (☀) position.

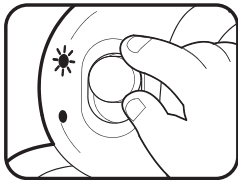

 2. To adjust the volume, slide the **VOLUME CONTROL SWITCH** located on the back of the unit to the ((▶)) position for **LOW VOLUME** or to the (◀)) position for **HIGH VOLUME**.

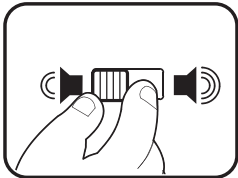

 3. To turn the unit **OFF**, slide the **ON/OFF SWITCH** to the **OFF** ( ● ) position.

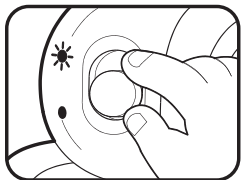

**Note:** To preserve battery life, the **Sing 'n Learn™ CD Player** learning toy will power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.


## ACTIVITIES
 
### A. TALKING MODE


1. Slide the **MODE SELECTOR SWITCH** to the **TALKING MODE** ( 😊 ) position. You will hear "Let's dance!" followed by a short tune. All the lights will flash randomly. The CD will spin and the eyes will move up and down with short tune.
2. Press the **HEART BUTTON** to hear "Red heart" followed by a fun sound effect. The corresponding light will flash with the voice, and all the lights will flash randomly with the sound effect.




3. Press the **STAR BUTTON** to hear “Yellow star” followed by a fun sound effect. The corresponding light will flash with the voice, and all the lights will flash randomly with the sound effect.

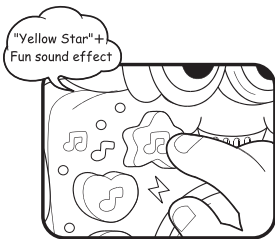

 
4. Press the **CIRCLE BUTTON** to hear “Orange circle” followed by a fun sound effect. The corresponding light will flash with the voice, and all the lights will flash randomly with the sound effect.

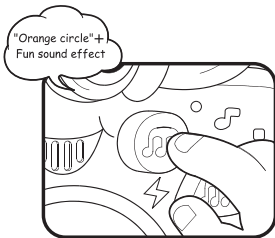

 
5. Press the **TRIANGLE BUTTON** to hear “Green triangle” followed by a fun sound effect. The corresponding light will flash with the voice, and all the lights will flash randomly with the sound effect.

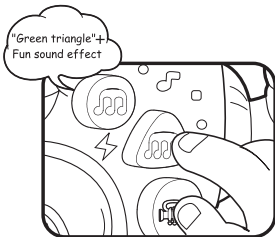

 6. Press the **PIANO BUTTON** to hear a random melody played with a piano sound. All the lights will flash randomly with the music. The CD will spin and the eyes will move up and down.

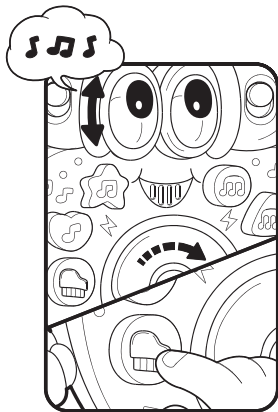


 7. Press the **TRUMPET BUTTON** to hear a random melody played with a trumpet sound. All the lights will flash randomly with the music. The CD will spin and the eyes will move up and down.

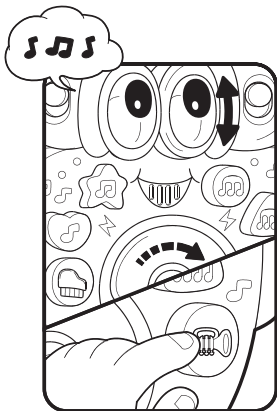




 8. Turn the **LEFT ARM** to hear a random sound effect. The lights will light up from left to right with the sound. The CD will spin and the eyes will move up and down.


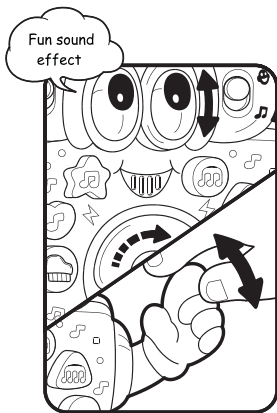


 9. Turn the **RIGHT ARM** to hear a random sound effect. The lights will light up from right to left with the sound. The CD will spin and the eyes will move up and down.

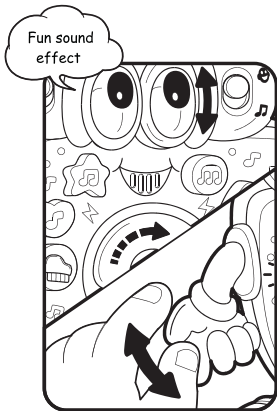


## B. Melody Mode

  
1. Slide the **MODE SELECTOR SWITCH** to the **MELODY MODE** ( 🎵 ) position. You will hear "Let's sing!" followed by a short tune. All the lights will flash randomly. The CD will spin and the eyes will move up and down with short tune.
2. Press the **HEART BUTTON** to hear one musical note played. The corresponding number of lights will light up. The CD will spin and the eyes will move up and down with short tune.
3. Press the **STAR BUTTON** to hear two musical notes played. The corresponding number of lights will light up. The CD will spin and the eyes will move up and down with short tune.
4. Press the **CIRCLE BUTTON** to hear three musical notes played. The corresponding number of lights will light up. The CD will spin and the eyes will move up and down with short tune.

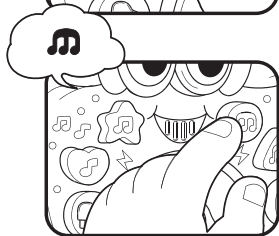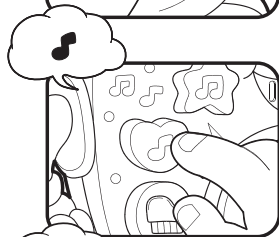

 
5. Press the **TRIANGLE BUTTON** to hear four musical notes played. The corresponding number of lights will light up. The CD will spin and the eyes will move up and down with short tune.

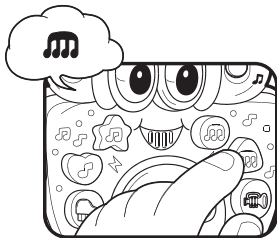

 
6. Press the **PIANO BUTTON** to hear a random melody played with a piano sound. All the lights will flash randomly with the music. The CD will spin and the eyes will move up and down.

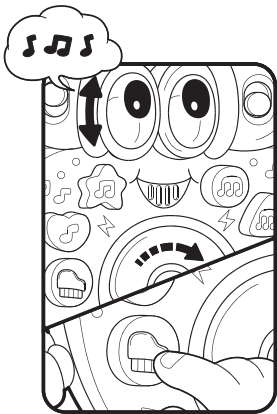

 
7. Press the **TRUMPET BUTTON** to hear a random melody played with a piano sound. All the lights will flash randomly with the music. The CD will spin and the eyes will move up and down.

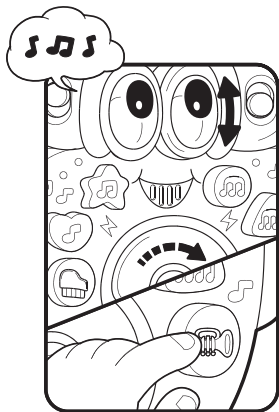

 8. Turn the **LEFT ARM** to hear a fun sound effect followed by a melody. The lights will light up from left to right with the sound effect and flash randomly with the melody. The CD will spin and the eyes will move up and down.

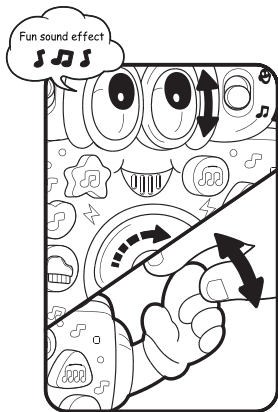

 9. Turn the **RIGHT ARM** to hear a fun sound effect followed by a melody. The lights will light up from right to left with the sound effect and flash randomly with the melody. The CD will spin and the eyes will move up and down

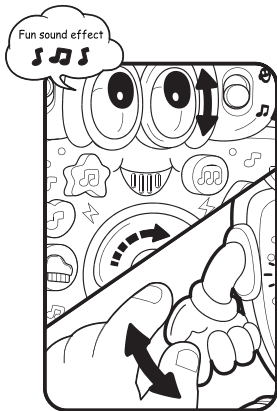

## CHEERFUL MELODIES:

- Clementine
- Twinkle Twinkle Little Star
- Old Dan Tucker
- Take Me Out to the Ball Game
- While Strolling Through the Park
- Polly Put the Kettle On
- Aloha Oe

## CARE AND MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## **IMPORTANT NOTE**

Creating and developing Infant/Toddler products is accompanied by a responsibility that we at **VTECH®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **Note:**

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient the receiving antenna
- relocate this product with respect to the receiver
- move this product away from the receiver