

vtech[®]

Instruction Manual

 
Glam & Go Puppy Salon™



INTRODUCTION

Thank you for purchasing the Glam & Go Puppy Salon™!

Take this puppy carrier wherever you go, then open to reveal a pet grooming salon! Lights and sound effects enrich playtime as you pretend to wash, comb, dry and clip this soft pup. Learn about colors and puppy grooming as you play!

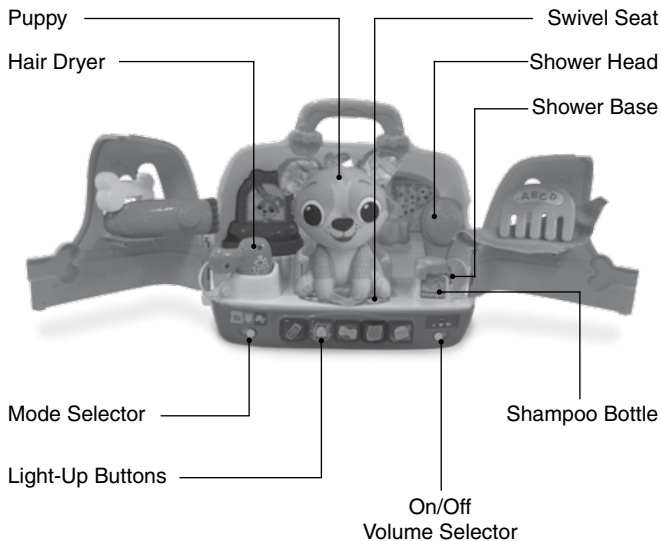

INCLUDED IN THIS PACKAGE

 
- Glam & Go Puppy Salon™



- 1 puppy



- Puppy carrier/salon

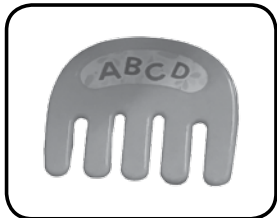


- 1 comb



- 1 clipper



 - 1 towel

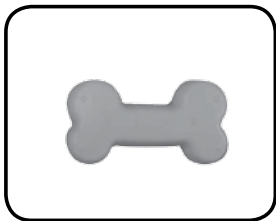

- 1 bone

- Quick Start Guide

NOTE

This toy is not intended for teething.

The infrared light sensors in the grooming set are sensitive to sunlight. The sensors may not perform properly in brightly lit, sunny rooms or under direct sunlight.

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

Unlock the Packaging Locks

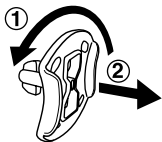


① Rotate the packaging locks 90 degrees counterclockwise.

② Pull out the packaging locks and discard.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit and use a coin or screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

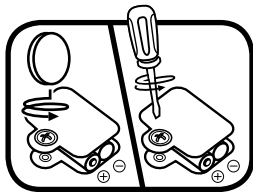

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES :

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. On/Off/Volume Selector

Slide the **On/Off/Volume Selector** to the Low volume 🗨️ position or to the High volume 🗨️ position. Slide the selector to the **Off** position to turn off the unit.



2. Mode Selector

Slide the **Mode Selector** to learn about puppy grooming and more with Learning, Grooming Fun and Sounds and Music modes.



3. Light-Up Buttons

Press the five Light-Up Buttons to learn about colors, grooming and more.



 
4. Swivel Seat

Place **Puppy** on the **Swivel Seat** to hear fun responses. Swivel the seat to the left for the styling station 🗨️. Swivel the seat to the middle for the grooming station 🐾. Swivel the seat to the right for the wash station 🚰.



5. **Hair Dryer**

Pick up the **Hair Dryer** from the slot or put it back in the slot to hear fun sounds.

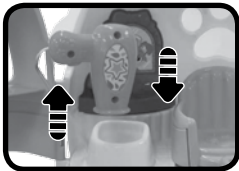

6. **Shampoo Bottle**

Press the **Shampoo Bottle** to learn about counting and hear fun sounds.



7. **Shower Base**

Press the **Shower Base** to hear fun sounds.



8. **Automatic Shut-Off**

To preserve battery life, the **Glam & Go Puppy Salon™** will automatically shut off after several minutes without input. The unit can be turned on again by sliding the **On/Off Volume Selector** to the Low or High volume position, or by sliding the **Mode Selector** to another mode.

NOTE

If the unit powers down or if the lights fade during play, please install a new set of batteries.

ACTIVITIES

1. Learning Mode

Press the five **Light-Up Buttons** to learn about colors, grooming and more. Place **Puppy** on the **Swivel Seat** and swivel the seat to any location to hear fun phrases. Use the **Hair Dryer**, **Shampoo Bottle** and **Shower** to trigger phrases and lights.



2. Grooming Fun Mode

Press the five **Light-Up Buttons**, **Shampoo Bottle**, **Shower Base** or **Hair Dryer** from the slot to guide you through puppy grooming as you play. Place **Puppy** on the seat, then swivel the seat to any location to hear fun phrases.



3. Sounds & Music Mode

Press the five **Light-Up Buttons** to hear melodies. Press the buttons again during the melodies to add fun sounds. Press the **Shampoo Bottle**, **Shower Base** or **Hair Dryer** to hear fun sounds. Place **Puppy** on the seat to hear **Puppy** sing a song or sing together with the melodies. Swivel the seat to trigger fun sounds with lights.



SONG LYRICS

Song 1

Wonderful tip-top salon,
The hairdryer went on.
The clippers cut,
The comb felt great.
Wonderful tip-top salon.

Song 2

Here I go gloomy-groom.
Here I go glammy-glam.
Here I go glowy-glow.
All at the puppy salon.

Song 3

Scrub, scrub, scrub, wash and dry my furry hair.
Brush my fur, and give me lots of care.
When I am hungry, please give me yummy treats.
We'll have lots of cuddles, this spa is so sweet!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or visit our website at **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5417
Product Name: Glam & Go Puppy Salon™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.
CAN ICES-003(B)/NMB-003(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

