

vtech[®]

Parent's Guide


Count & Win Sports Center™



INTRODUCTION

Thank you for purchasing the **Count & Win Sports Center™!**


Cheer on your little sports star with the **Count & Win Sports Center™.** Kick the soccer ball into the net to hear fun sounds, toss the basketball into the hoop to score points, and press three shape buttons to learn about shapes, color and more.

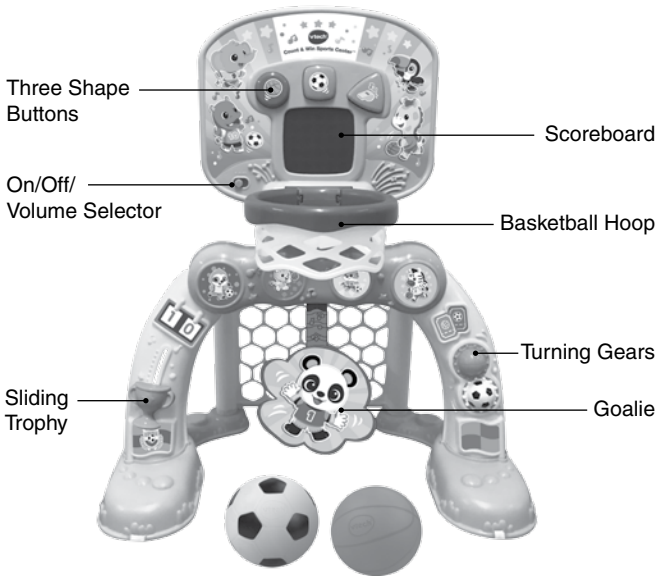

INCLUDED IN THIS PACKAGE



Scoreboard

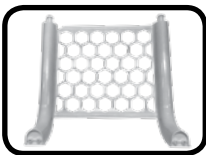

Soccer net



Two base pieces



Two support posts




Top support piece



Basketball hoop



Goalie

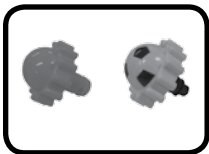

Two gears



Trophy



Basketball and soccer ball



Eight screws



Label sheet

- Parent's guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this parent's guide as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.



CAUTION:

Adult assembly required.

This package contains small parts. For your child's safety, do not let your child play with the toy until it is fully assembled.



ATTENTION !

Ce jouet doit être assemblé par un adulte.

Ce jouet contient des petites pièces. Pour la sécurité de votre enfant, ne pas le laisser jouer avec le jouet tant que ce dernier n'est pas complètement assemblé par un adulte.




NOTE

If the balls become soft, inflate them with a standard, hand-operated air pump with a standard air needle (not included) until firm. Do not over-inflate the balls.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the scoreboard and use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (LR6/AM-3) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

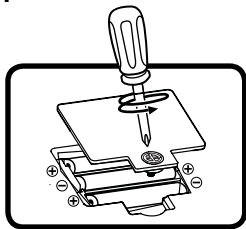

BATTERY NOTICE


- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and -).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

MISE EN GARDE

- Utiliser des piles alcalines neuves pour des performances maximales.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger des piles non rechargeables.
- Enlever les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.

LABEL APPLICATION


Please securely stick the labels to the playset as indicated below:

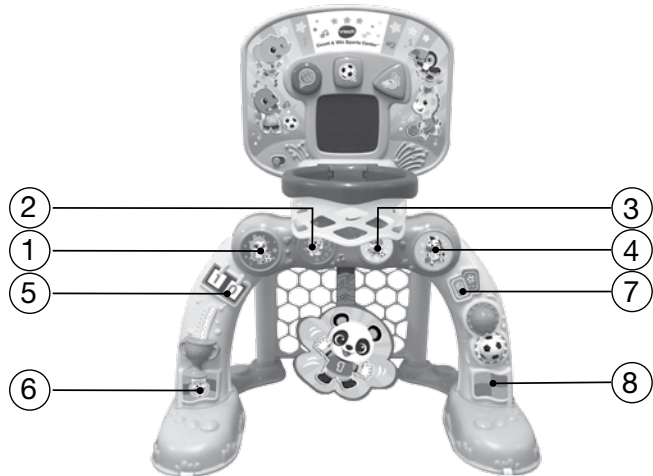

ASSEMBLY INSTRUCTIONS

With the **Count & Win Sports Center™**, safety comes first. Adult assembly required. For your child's safety, do not let them play with this toy until it is fully assembled.


1. Insert the **Goalie** into the **Top Support Piece** at a slight angle. Press down on the opposite side. You will hear the pieces snap together when connected properly.

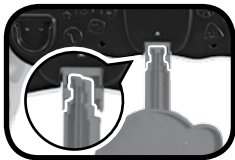

2. Insert the two **Support Legs** into the **Top Support Piece**. You will hear the pieces snap together when connected properly.




3. Insert the two **Support Legs** into the two **Base Pieces**. You will hear the pieces snap together when connected properly.

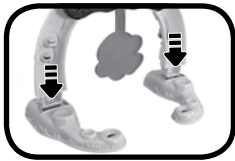


4. Insert the **Soccer Net** into the **Top Support Piece**. Next, slide the **Soccer Net** into the two **Base Pieces**. You will hear the pieces snap together when connected properly.



5. Insert the small screws and use a screwdriver to secure the **Soccer Net** to the **Top Support Piece** and the two **Base Pieces**.

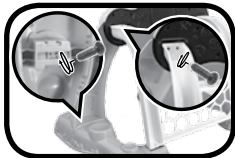


6. Insert the **Scoreboard** into the top of the **Soccer Net**. Press and turn the big screw clockwise to secure the **Scoreboard**.

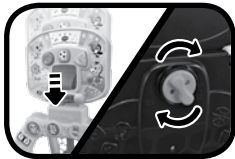

7. Insert the **Basketball Net** into the **Scoreboard**. You will hear the pieces snap together when connected properly.



8. Insert the **Trophy** and two **Spinning Gears** into the slots in the two **Support Legs**. You will hear the pieces snap together when connected properly.

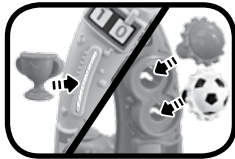

Once you've completed the above steps, you are ready to play!

PRODUCT FEATURES

1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low volume ◀ or the High volume ▶ position. You will hear a song, a phrase and fun sounds. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the Off ● position.



2. Height Adjustable Scoreboard

The animated LED **Scoreboard** can be adjusted to two different heights. Press and turn the lock counterclockwise and slide the scoreboard up or down. Press and turn the lock clockwise to secure.



3. Automatic Shut-Off

To preserve battery life, the **Count & Win Sports Center™** will automatically power down after approximately 30 seconds without input. The unit can be turned on again by pressing any button. The hoop sensor will not turn the unit back on.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES



CAUTION

Do not aim the soccer ball or basketball at eyes or face.



AVERTISSEMENT

Ne pas diriger le ballon de football ou le ballon de basket en direction des yeux ou du visage.

1. Shape Button Learning

Press the **Shape Buttons** to learn about shapes, colors and hear fun sports phrases. The **Scoreboard** will light up and play a variety of playful animations.



2. Basketball Hoop Counting

Toss the **Basketball** into the **Basketball Hoop** to hear the points count from 1 to 10. After the net has counted to 10, it will play music notes before going back to counting. The **Scoreboard** will light up and play a variety of playful animations.




NOTE

The infrared light sensor in the **Basketball Hoop** is sensitive to sunlight. The sensor may not perform properly in brightly lit, sunny rooms or under direct sunlight.

3. Slam Dunk Basketball

Slam dunk the **Basketball** into the **Basketball Hoop** to hear fun cheering sounds and phrases. The **Scoreboard** will light up and play a variety of playful animations.

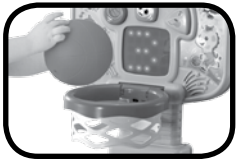

4. Soccer Net and Goalie

Kick the **Soccer Ball** into the **Soccer Net** and hear a variety of playful sounds when you connect with the **Goalie**. The screen will light up and play a variety of playful animations.



MELODIES

1. Aiken Drum
2. Boys and Girls Go Out to Play
3. Dill Pickles
4. Ding Dong Bell
5. Georgie Porgie
6. Hickory, Dickory, Dock
7. Arkansas Traveler
8. Baa, Baa, Black Sheep
9. Did You Ever See a Lassie?
10. Jack Be Nimble
11. MacNamara's Band
12. Muffin Man
13. Take Me Out to the Ballgame
14. Alexander's Ragtime Band
15. Blow the Man Down
16. Pop! Goes the Weasel
17. There Is a Tavern in the Wood
18. Ta-Ra-Ra Boom-De-Ay

SONG LYRICS

Song 1

It's a great day to play some sports,
Grab your friends and start a game.
Work together, play as a team.
Yeah! Go, team!

Song 2

Bounce, bounce, bounce the ball,
Toss the ball in the hoop,
1-2-3-4-5 points for your team!

Song 3

You're a great soccer player,
You're a great soccer player,
You're a great soccer player,
Kick the ball in the net!

Song 4

Our team is strong,
Our team works hard,
Hip-hip-hip-hooray!
We win the game!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. A service representative will be happy to help you. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

Trade Name:	VTech®
Model:	5335
Product Name:	Count & Win Sports Center™
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty



TM & © 2020 VTech Holdings Limited.
All rights reserved.

Printed in China.

91-003825-002 (S) (E)