


User's Manual

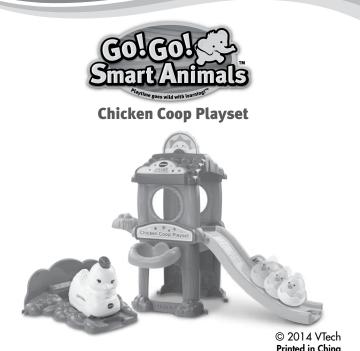

91-002993-000@GA

Dear Parent,

Welcome to the world of **Go! Go! Smart Animals™**! We're excited you've decided to go on an adventure with us and explore all that **Go! Go! Smart Animals™** has to offer. These toys have been designed to give your child a thrilling learning experience with hours of fun.

Go! Go! Smart Animals[™] features a collection of animals that interact with your child by lighting up and playing music and sounds while teaching your child letters and animal names*. But that's only the beginning of the learning excitement! When your child interacts with our innovative SmartPoint[®] technology, they will love hearing the animals respond to each SmartPoint[®] location on Go! Go! Smart Animals[™] and Go! Go! Smart Wheels[®] playsets* with different phrases, cheerful melodies, sing-along songs or sound effects.

Additionally, our **Go! Go! Smart Animals**™ playsets include tracks that can be arranged in endless ways and can be connected to other playsets including **Go! Go! Smart Wheels**® to stimulate your child's creativity. The playsets also feature buttons, gears and other manipulative elements to encourage the development of your child's fine motor skills.

With **Go! Go! Smart Animals™**, playtime goes wild with learning!

Sincerely, Your friends at **VTech®** To learn more about **VTech®** toys, visit www.vtechkids.com


*Each sold separately.

Introduction

INTRODUCTION


Thank you for purchasing the VTech[®] Go! Go! Smart Animals™ Chicken Coop Playset!

Explore the Go! Go! Smart Animals[™] Chicken Coop Playset by VTech[®]. Learn about animals, colors and more with the SmartPoint[®] chicken. Launch the chicken and rocking chick down the slide. For added fun, you can connect this playset to other Go! Go! Smart Animals[™] and Go! Go! Smart Wheels[®] playsets (each sold separately).

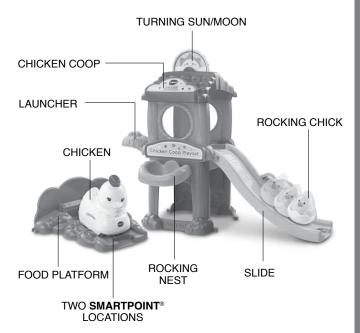

INCLUDED IN THIS PACKAGE

 - One user's manual
- One VTech[®] Go! Go! Smart Animals™ chicken
- One chicken coop roof with turning sun/moon
- Two chicken coop top supports
- · One chicken coop bottom left support with one rocking nest



- · One SmartPoint® launcher
- One launcher base
- One slide



- One SmartPoint® food platform
- One rocking chick



- WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.
- ATTENTION : Pour la sécurité de votre enfant, débarrassezvous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.
- NOTE: Please keep user's manual as it contains important information.

Unlock the packaging locks:



- Turn the packaging lock counter-clockwise several times.
- 2 Pull out and discard the packaging lock.

GETTING STARTED

BATTERY INSTALLATION - Chicken


- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the chicken. Use a coin or a screwdriver to loosen the screw.
- Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure the battery cover.




BATTERY NOTICE

- · Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- · Remove exhausted batteries from the toy.
- · Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Please adhere the labels to the playset securely as indicated below:

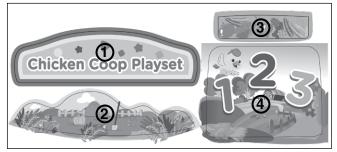

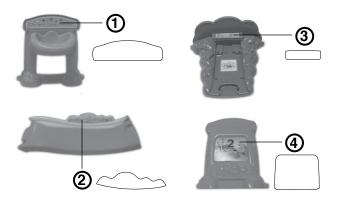


ASSEMBLY INSTRUCTIONS

With the VTech[®] Go! Go! Smart Animals[™] Chicken Coop Playset, safety comes first. To ensure your child's safety, adult assembly is required.

 - Attach the SmartPoint[®] launcher to the launcher base as shown. You will hear a "click" sound to indicate the launcher is secure.
- Attach the launcher base to the chicken coop bottom left and right supports. Once the launcher base is connected to the chicken coop bottom supports, it cannot be detached.





3. Insert the two chicken coop top supports into the roof.

4. Place the chicken coop on top of the launcher.

5. Attach the slide to the launcher. You will hear a "click" sound to indicate the slide is secure.

6. Attach the **SmartPoint**[®] food platform to the left or right supports as shown.







 




PRODUCT FEATURES - CHICKEN

1. ON/OFF SWITCH

To turn the unit ON, slide the ON/OFF SWITCH to the ON (O) position. To turn the unit OFF, slide the ON/OFF SWITCH to the OFF (O) position.




2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Go! Go! Smart Animals**[™] chicken will automatically power-down after approximately 30 seconds without input. The unit only can be turned on again by pressing the light-up button or pushing the bear quickly.

ACTIVITIES - CHICKEN

- Slide the ON/OFF SWITCH to the ON position to turn the unit on. You will hear a chicken sound, a song and a phrase. The light will flash with the sound.
- Press the LIGHT-UP BUTTON to hear fun sounds, sing-along songs and phrases. The light will flash with the sounds.

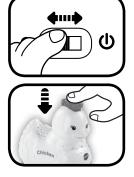

- 3 Push the chicken to hear fun sounds and melodies. While a melody is playing, push the chicken again to add in fun sounds on top of the melody. The light will flash with the sounds.
- 4. For added fun, the chicken interacts with VTech® Go! Go! Smart Animals™ playsets (each sold separately). Simply roll the chicken over one of the playset's SmartPoint® locations to see the light flash and to hear greetings, fun sounds, short tunes and sing-along songs. You can also play with your animal on Go! Go! Smart Wheels® playsets (each sold separately).



PRODUCT FEATURES – CHICKEN COOP

- Move the chicken or any SmartPoint[®] animal (each sold separately) over the chicken coop's two SmartPoint® locations to trigger fun sounds, songs, or phrases.
- 2 Place the chicken on the LAUNCHER inside the chicken coop. Lift up the LAUNCHER to send the chicken down the slide





3. Place the chicken on the **SmartPoint**[®] food platform to trigger a fun response.

4 Place the rocking chick inside the rocking nest.

5 Turn the sun/moon for day and night play.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.



TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit ON. The unit should now be ready to play again.
- 5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech**[®] at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing Infant Learning products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

