



Parents' Guide

# PAW Patrol: The Movie: Learning Watch

 


© & TM Spin Master Ltd.  
91-003986-000-000 

# INTRODUCTION

Thank you for purchasing the **PAW Patrol: The Movie: Learning Watch**.

This full-function watch includes four fun, PAW Patrol: The Movie-themed learning games that teach numbers, memory skills and hand/eye coordination. Plus, choose from a number of different PAW Patrol clock faces and alarm tones to personalize your watch.

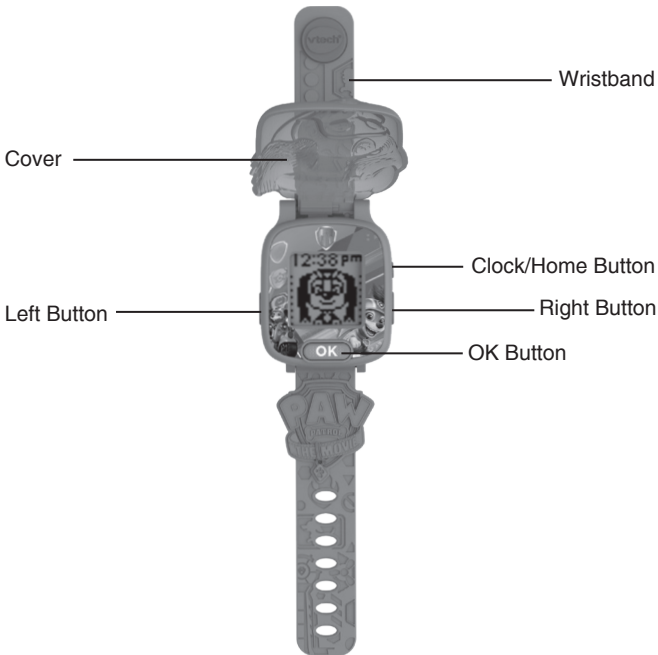

# INCLUDED IN THIS PACKAGE

- **PAW Patrol: The Movie: Learning Watch**
- One CR2450 battery
- Parents' guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please keep this parents' guide as it contains important information.

## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

# PRODUCT SPECIFICATION

Battery	One CR2450 battery
Time Format	12h or 24h
Display	Digital
Optimum Operating Temperature	32°F - 104°F (0°C - 40°C)

## Important Note

- Do not place the watch under running water.
- Do not submerge. Not suitable for showering, bathing or swimming.
- Keep the cover closed when the watch is not in use.

### Note

- Ne pas mettre la montre sous l'eau.
- Ne pas immerger la montre et ne pas l'utiliser sous la douche et dans le bain.
- Garder le clapet fermé lorsque la montre n'est pas utilisée.

## WARNING

People with very sensitive skin may notice some irritation after wearing the **PAW Patrol: The Movie: Learning Watch** for extended periods of time. The skin may become irritated when moisture, sweat, soap, or other irritants get trapped under the wristband and are left in contact with the skin. To prevent this, we suggest children remove the watch before going to bed for the night, take the watch off if it's feeling uncomfortable, and keep their wrist and the band clean and dry.

In addition, wearing the watch too tightly may also cause irritation. Make sure the fit is good—tight enough so the watch stays in place but not so tight that it's uncomfortable. If you notice any redness, swelling, or other irritation, you may want to consult a doctor before wearing the watch again.

## PRÉCAUTIONS D'UTILISATION

Comme avec d'autres objets portés près du corps de manière prolongée, la montre interactive pourrait éventuellement provoquer une irritation. L'humidité, la transpiration, l'eau savonnée ou d'autres agents irritants peuvent s'incruster sous le bracelet et rester en contact avec la peau. En prévention, nous recommandons fortement aux enfants de ne pas porter la montre

pendant la nuit, de l'enlever dès le moindre signe d'irritation, et de garder le bracelet sec et propre. Par ailleurs, vérifiez que le bracelet

de votre enfant ne soit ni trop serré, ni trop lâche. Si vous observez des rougeurs, gonflements ou autre irritation, veuillez consulter un médecin avant de remettre la montre.

 
## INSTRUCTIONS

### Power Source

The **PAW Patrol: The Movie: Learning Watch** operates using one CR2450 battery. The CR2450 battery included with the product is for demo purposes only.

### Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove the old battery by pulling up on one end of the battery.
4. Install one new CR2450 battery following the diagram inside the battery cover.
5. Replace the battery cover and tighten the screw to secure.

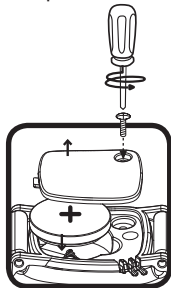

### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

### **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries from the toy before charging
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.



## **WARNING**

This product contains one or more button cell or coin batteries. If swallowed, a button cell or coin battery can cause internal chemical burns in as little as two hours and can lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention, and go straight to the nearest hospital emergency department.

## **ATTENTION**

Ce produit contient une ou plusieurs piles boutons. En cas d'ingestion, une pile bouton peut provoquer, en moins de deux heures, de graves brûlures chimiques internes pouvant conduire à la mort. Trier immédiatement les piles usagées. Tenir les piles neuves et usagées hors de portée des enfants.

Si vous pensez que des piles ont pu être avalées ou placées à l'intérieur d'une partie du corps de votre enfant, il faut consulter immédiatement un médecin aux urgences hospitalières.

### **Australia/New Zealand:**

If you suspect your child has swallowed or placed a button cell / coin battery inside any part of their body, immediately call the 24-hour Poisons Information Centre on 13 11 26 (in Australia) or 24-hour National Poisons Centre on 0800 764 766 (in New Zealand) for fast, expert advice and go straight to the nearest hospital emergency room.

## **TO BEGIN USING:**

When you use the watch for the first time, you must unlock from Try-Me mode to play. To unlock from Try-Me mode, open the **Cover**, and press the **Left + Right + OK Buttons** together for approximately five seconds. You will then hear three beeping sounds to indicate it has been unlocked. Press any button to activate the watch and set the time.

Press the **Left or Right Button** to select, then press the **OK Button** to confirm and move to the next option. A checkmark will be displayed when the setting is complete.

### **Note**

- When the battery level is low, most functions on the watch may not be activated, except for the clock display. It is recommended to install a new battery as soon as possible before further use.
- If the battery level is too low and cannot keep the clock running, you will need to enter the time again after the battery has been replaced.

# PRODUCT FEATURES

## 1. Cover

Open the **Cover** to view the time. When the **Cover** is closed, tap the bottom of the **Cover** to activate character voices and sounds with a light effect.

## 2. Left/Right Buttons

Use the **Left** or **Right Button** to select an activity or option.

## 3. OK Button

Press the **OK Button** to confirm a selection and move to the next option in different activities.

## 4. Clock/Home Button






Press the **Clock/Home Button** to return to the clock from any other function or activity.

## 5. Clock Display

When the **Clock/Home Button** is pressed, the time will be displayed. Press the **Left** or **Right Button** to display the Home Menu where other activities can be selected.

## 6. Home Menu

Press the **Left** or **Right Button** to display the Home Menu. There are five activities to choose from:

 
1. Alarm Clock 	2. Stopwatch 	3. Timer 
4. Games 	5. Settings 	

- Press the **Left** or **Right Button** to scroll through the menu options.
- Press the **OK Button** to enter the chosen activity.



## 7. Alarm Clock

- Press the **Left** or **Right Button** to select the time and choose between three alarm tones.
- Press the **OK Button** to confirm and move to the next setting.
- Press the **Clock/Home Button** to automatically save the current setting.

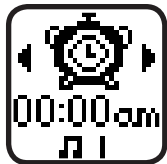

## 8. Stopwatch

- Press the **OK Button** to start the Stopwatch, press again to stop.
- When the Stopwatch is stopped, you can press the **Left** or **Right Button** to reset.



## 9. Timer

- Press the **Left** or **Right Button** to change the time.
- Press the **OK Button** to confirm.
- Press the **Clock/Home Button** to automatically save the current setting.
- Press the **OK Button** to confirm the Timer duration and the countdown will start immediately.
- While the Timer is running, press the **OK Button** to pause/resume or press the **Left** or **Right Buttons** to reset.



## 10. Settings

In the **Settings** menu, press the **Left** or **Right Button** to scroll through the various options:

### 10.1. Setting the Time

- Press the **Left** or **Right Buttons** to change the options. (The am/pm setting is only applicable in 12-hour time format)
- Press the **OK Button** to confirm.
- Press the **Clock/Home Button** to automatically save the current setting.



### 10.2. Clock Face

- Press the **Left** or **Right Button** to select from 10 different clock faces.
- Press the **OK Button** or **Clock/Home Button** to confirm and save the setting.



 
### 10.3. Chickaletta Cuckoo Clock

- Press the **Left** or **Right Buttons** to turn the Cuckoo Clock on or off.
- Press the **OK Button** or **Clock/Home Button** to confirm and save the setting.
- Please note that when the Cuckoo Clock is activated, the watch will chime at the top of each hour between 7 am and 7 pm, unless a game is currently in progress.



## 14. Automatic Shut-Off

To preserve battery life, the **PAW Patrol: The Movie: Learning Watch** will automatically shut off after approximately 30 seconds without input. The unit can be turned on again by pressing any button or opening the cover.

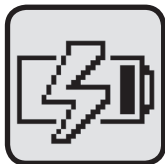

### Note

The **PAW Patrol: The Movie: Learning Watch** will not automatically power off when the Stopwatch is running.

The unit will also automatically turn **Off** when the battery power is very low. If you see the Low Battery icon appear on screen, please replace the battery.

 
## ACTIVITIES

### 1. Games

In the Games menu, press the **Left** or **Right Buttons** to scroll through the different learning game options:


#### 1.1 Adventure City Waits

Help Marshall find his way around Adventure City. Press the **Left** or **Right Button** to avoid the obstacles, and press the **OK Button** to cross the road. Then press the **Left** or **Right Button** to select the biggest or smallest number, and press the **OK Button** to confirm.

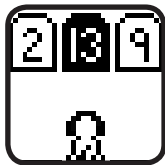

#### 1.2 Wrecking Ball Rescue

 Use Rubble's wrecking ball to hit the target and rescue Chase. When the wrecking ball points to the target, press the **OK Button** to

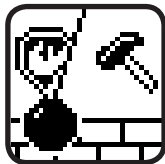

hit it.


### 1.3 Train Mission

 Solve the mystery code to save the train passengers. Remember the number sequence on the screen. Press **Left** or **Right Button** to choose the matching number sequence, then press the **OK Button** to confirm.



### 1.4. Take to the Skies

Avoid the obstacles and help Skye stop the Cloud Catcher from releasing bad weather onto Adventure City. Press the **Left** or **Right Button** to avoid the obstacles.

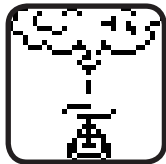

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new battery.

**IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

**NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Supplier's Declaration of Conformity**  
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®  
Model: 5255  
Product Name: PAW Patrol: The Movie: Learning Watch  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE  
FCC RULES. OPERATION IS SUBJECT TO THE  
FOLLOWING TWO CONDITIONS: (1) THIS DEVICE  
MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE  
RECEIVED, INCLUDING INTERFERENCE THAT MAY  
CAUSE UNDESIRE OPERATION.

CAN ICES-003 (B)/NMB-003(B)

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***



TM & © 2021 VTech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003986-000-000 ©