

Disney

User's Manual



## TALK & TRACE CLIPBOARD™



**2-5**  
Years

vtech®

© Disney  
Visit [DisneyJunior.com](http://DisneyJunior.com)

© 2013 VTech  
Printed in China  
91-009655-000 US

Dear Parent,

At **VTech**<sup>®</sup>, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech**<sup>®</sup> has developed the **Preschool Learning**<sup>™</sup> series of interactive toys.

**Preschool Learning**<sup>™</sup> features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**<sup>™</sup>, learning is fun from day one!

At **VTech**<sup>®</sup>, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**<sup>®</sup> with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at **VTech**<sup>®</sup>

To learn more about **Preschool Learning**<sup>™</sup> series and other **VTech**<sup>®</sup> toys, visit [www.vtechkids.com](http://www.vtechkids.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Talk & Trace Clipboard™!**

This interactive clipboard and its three detachable stencils are a great way to get started in early drawing and writing. Your child can use the attached stylus to trace letters, numbers, and objects. Encouraging phrases and health facts from Doc McStuffins add to the fun. The Doc is in, and it's time to learn!

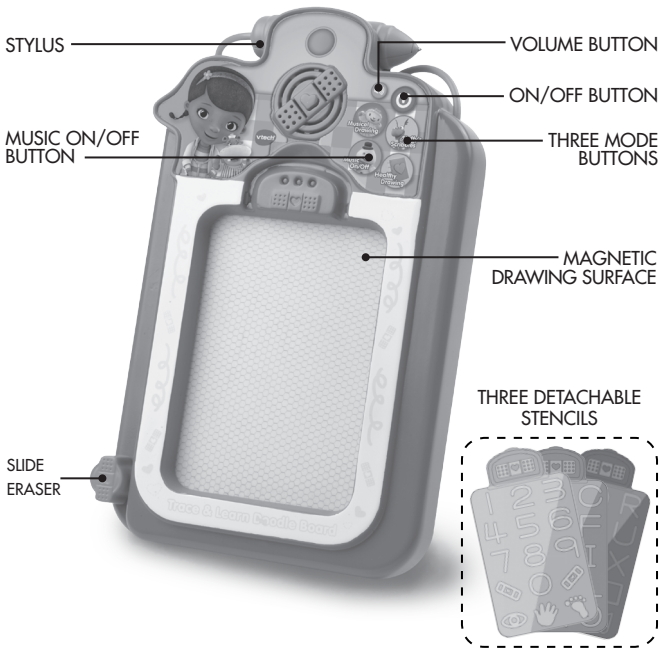

# INCLUDED IN THIS PACKAGE

 
- One VTech® Talk & Trace Clipboard™
- One user's manual
- Three detachable stencils

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

**ATTENTION** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:** Please keep user's manual as it contains important information.

**Unlock the packing locker:**

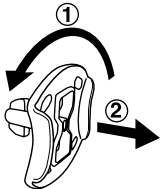


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

# GETTING STARTED
 
## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new "AAA" size (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

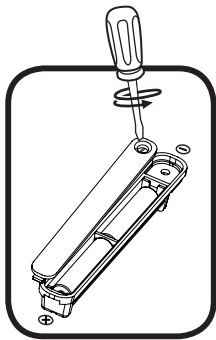

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

# PRODUCT FEATURES

## 1. ON/OFF BUTTON

Press the **ON/OFF BUTTON** to turn the unit on and press it again to turn the unit off.

## 2. VOLUME BUTTON

Press the **VOLUME BUTTON** to adjust the volume.

## 3. THREE MODE BUTTONS

Press any **MODE BUTTON** to choose a game.

## 4. MUSIC ON/OFF BUTTON

Press the **MUSIC ON/OFF BUTTON** to change the melody or turn the music off.

## 5. STYLUS

Use the **STYLUS** to trace and draw.



 
## 6. MAGNETIC DRAWING SURFACE

Use the **STYLUS** to draw on the **MAGNETIC DRAWING SURFACE**.



## 7. THREE DETACHABLE STENCILS

Put a **DETACHABLE STENCIL** in the drawing area to practice tracing letters, numbers, and shapes.

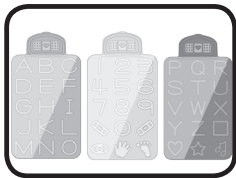

## 8. SLIDE ERASER

Move the **SLIDE ERASER** on the left side of the board to erase the drawing.



## 9. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**.

# ACTIVITIES

## Activity 1: Stuffy's Scribbles

Stuffy loves to scribble! You may draw anything you'd like in this activity. Enjoy fun sound effects as you draw!

## Activity 2: Musical Drawing

Lambie is a very good dancer. Draw to keep the music playing for her. Music will be played when you draw, and stop when you stop drawing.

## Activity 3: Healthy Drawing

Draw something healthy! Listen for some healthy objects and then try to draw them. Enjoy fun sound effects as you draw!

## Activity 4: Trace with Hallie

Hallie is helping Doc by taking notes on her clipboard. Would you help her? Put a detachable stencil in the drawing area and then use the stylus to trace letters, numbers, and shapes. Learn healthy facts as you play!

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.



# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work or the stylus does not work well, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product warranty, please call **VTech**<sup>®</sup> at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

**Caution:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## COPYRIGHT NOTICES:

Copyright ©2013 **VTech**® Electronics North America, L.L.C. All Rights Reserved. **VTech**® and the **VTech**® logo are registered trademarks of **VTech**® Electronics North America, L.L.C. All other trademarks are property of their respective owners.

### IMPORTANT NOTE

Creating and developing **VTech**® **Preschool Learning** products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.