

vtech[®]

User's Manual

Hammer Fun Learning Truck™



© 2009 VTech
Printed in China

91-100900-000-006 美


Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning**[®] series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning**[®] toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

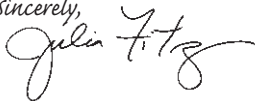


Julia Fitzgerald
Vice President, Marketing
VTech Electronics, NA

To learn more about the **Infant Learning**[®] series and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Hammer Fun Learning Truck™**!

 The **Hammer Fun Learning Truck™** is an interactive hammer toy for busy little hands! Tap on the pegs to hear letters and objects identified, phrases and fun sounds. Press the buttons on the side of the truck to hear the colors identified and fun traffic related phrases. A fun 'find it' game will ask toddlers to find, then press or hammer a specific object. Cheerful melodies and playful songs add to the fun.

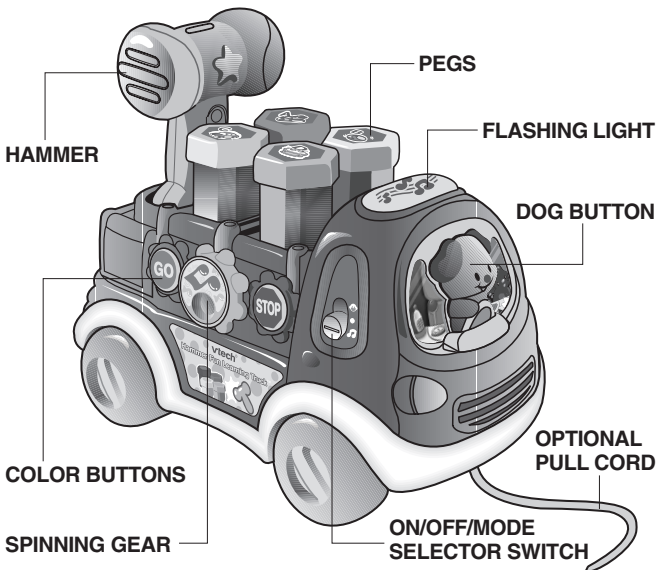

INCLUDED IN THIS PACKAGE

 
- One VTech® Hammer Fun Learning Truck™
- One hammer
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new “AA” (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

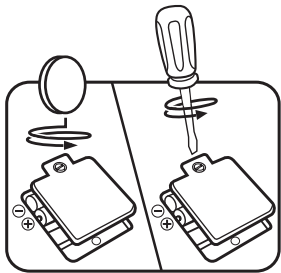

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard

(carbon-zinc) or rechargeable (nickel-cadmium).

- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

 
WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH**

to the **PLAY** (🎵) mode or the **MUSIC** (🎶) mode position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** (●) position.

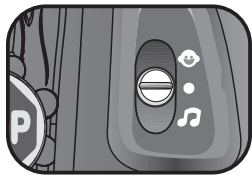


2. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Hammer Fun Learning Truck™** will automatically power-down after approximately 40 seconds without input. The unit can be turned on again by pressing any button. Please note, pushing the truck and inserting or removing the hammer from the truck quickly, will not turn the unit back on.

ACTIVITIES

 1. Slide the **on/off/mode selector switch** to choose a mode of play. You will hear fun sounds, a song and a phrase. The light will flash with the sound.

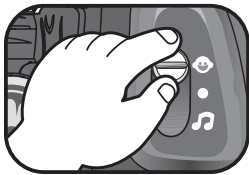

 
2. Press the **dog button** to hear fun sounds, phrases and a song in the play mode. When the dog button is pressed for the third time, you will hear a random question. Press or hammer the pegs to answer the question. Press the dog button in the music mode to hear a sing along song or melody sung by the dog. The light will flash with sound.

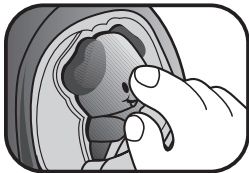


3. Turn the **spinning gear** to hear a song, fun sound effects, phrases or short tunes, depending on the selected mode. Spin the gear when a melody is playing to increase the tempo of the melody. The light will flash with the sound.



 
4. Press the **color buttons** to hear fun sound effects, a phrase and a short tune in the play mode. You will hear sing along songs or melodies in the music mode. The light will flash with sound.

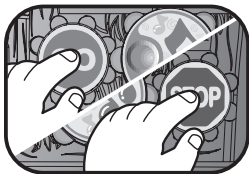

 
5. Remove the **hammer** from the truck to hear fun sound effects and a random question. Press or hammer the pegs to answer the question. Insert the hammer into the slot on the truck and hear fun sound effects and a phrase. The light will flash with the sound.

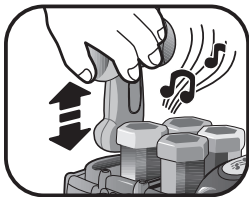

 6. Press or hammer one of the **pegs**, to hear a phrase introducing the letter and object or a fun phrase and a related sound in the play mode. You will hear a related sound or a melody in the music mode. The light will flash with the sound.

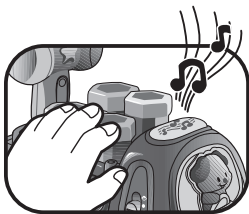

 7. Press or hammer two or more of the **pegs** at the same time, to hear a random melody. While the melody is playing, press the pegs or any other button to hear a sound effect play over the melody. The light will flash with the sound.

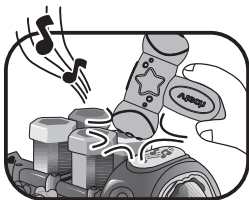

8. Push or pull the truck to hear a variety of fun phrases, sing along songs and random melodies. The light will flash with the sound.



9. If there is no input after approximately 6 seconds, you will hear a random question and a sound effect. If there is still no input after another 15 seconds, a phrase and a sound effect will play. If there continues to be no input after another 10 seconds, you will hear a sound effect, a phrase and a short tune. If there is still no input after another 10 seconds, you will hear “Bye-bye” and the unit will power down. The unit can be turned on again by pressing any button. Please note, pushing the truck and inserting or removing the hammer from the truck quickly, will not turn the unit back on.

MELODY LIST:

1. Bingo
2. Little Bo Peep
3. Pop! Goes the Weasel
4. Here We Go Round the Mulberry Bush
5. Old MacDonald
6. She'll Be Coming Round the Mountain
7. This Old Man

SONG LYRICS

SONG 1 (To tune of “Have You Ever Seen a Lassie?”)

Have you ever seen a puppy,
A puppy, a puppy?
Have you ever seen a puppy,
Driving a red truck?

SONG 2 (To the tune of “Farmer in the Dell”)

The dog is in the truck.
It's loaded up with toys.
Ball, car, drum and plane,
Are going for a ride.

SONG 3

Turn your wheels and roll along,
We are driving down the lane

CARE AND MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.