

vtech®

Parent's Guide

KidiGo™
WALKIE TALKIES



INTRODUCTION

Thank you for purchasing the **KidiGo™ Walkie Talkies**. These safe and secure two-way radios feature preset animated messages and games for fun inside and outside!



INCLUDED IN THIS PACKAGE

- Two KidiGo™ Walkie Talkies
- One parent's guide

WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

 
ATTENTION : Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit, turn the battery lock dial and slide the cover off.
3. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery compartment. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and turn the battery lock dial.

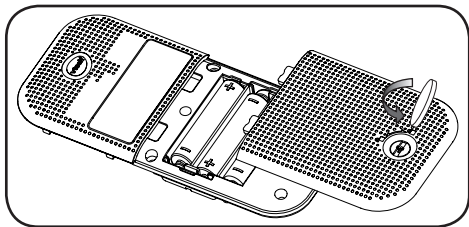


BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the unit.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the unit before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. Power Button

 Press the **Power Button** to power on the unit.
Press the button again to power off the unit.

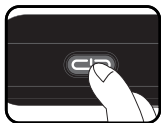


2. Game Button

Press the **Game Button** to enter the game menu and choose a game to play.



3. Walkie Talkie Button

 Press the **Walkie Talkie Button** to start the Walkie Talkie mode.



4. Message Button

Press the **Message Button** to choose an animated message to send to the other unit.



 
5. Left, Right and OK Buttons

Press the **Left, Right** and **OK Buttons** to choose options or to play games.




6. Talk Button

Press and hold the **Talk Button** in Walkie Talkie mode to transmit to the other unit.

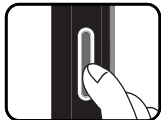

7. Volume Buttons

 Press the **Volume Buttons** to adjust the volume.

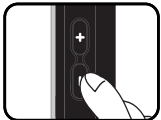

8. Automatic Shut Off

To preserve battery life, the **KidiGo™ Walkie Talkies** will automatically turn off after 30 minutes without input. Turn the units on again by pressing the **Power Button**.


Note: When battery levels are low, the units will enter a power-saving state and the LCD backlight will turn off. Please follow the instructions in the Battery Installation section to replace them.


9. Wrist Strap Slot

Insert a strap here (not included) to secure the **KidiGo™ Walkie Talkies** to your wrist.



SET UP

The first time a unit is turned on, it will enter setup mode . Press the **Left Button** at the same time on both units to connect them.

You can enter setup mode at anytime by pressing the **Game Button** followed by the **Left Button** until you come to the setup icon . Then, press the **OK Button** to enter setup mode.

ACTIVITIES

1. Walkie Talkie Mode

In this mode, you can send and receive voice messages between units. To talk, press and hold the **Talk Button**. Release the **Talk Button** when you are not speaking. Speak closely to the microphone for the best performance.

2. Message Mode

In this mode, send an animated message to the other unit. Press the **Left and Right Buttons** to select a message. Press the **OK Button** to send.

3. Game Mode

In this mode, choose between four two-player games to play with both units. Press the **Left** and **Right Buttons** to choose a game. Press the **OK Button** to confirm and send an invitation to the other unit.

Card Matching Game

Players take turns turning over cards looking for matching pairs. When a player reveals a pair correctly, they continue to turn over cards until they miss a match. The player with the most pairs when all the cards are gone wins.

Guessing Game

The player who initiates the game hides an object in one of the three containers and then the other player guesses which container the object is in.

Racing Game

Press the **Left** and **Right Buttons** to avoid obstacles. The player who reaches the finish line first or passes the most checkpoints wins.

Treasure Hunt Game

Players take turns opening treasure chests to look for prizes and avoid traps. Finding a treasure is worth one point, and a trap is worth minus one. The first player to five points, or whoever has the most when time runs out, wins.

4. Incoming Messages or Game Invitation

You can receive an incoming message, Walkie Talkie conversation invitation, or game invitation anytime the units are on. To read a message or accept an invitation, press the **Left** or **OK Buttons**. To reject, press the **Right Button**.



CARE & MAINTENANCE

1. Keep the units clean by wiping them with a slightly damp cloth.
2. Keep the units out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the units are not in use for an extended period of time.
4. Do not drop the units on a hard surface and do not expose the units to excess moisture.

TROUBLESHOOTING

If for some reason the Walkie Talkies stop working or lose connection, please follow these steps:

1. Turn the units **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the units stand for a few minutes, then replace the batteries in both units and switch them on again.
4. Enter **Set Up** mode on both units by following the instructions in the **Set Up** section above. Once in Set Up mode, press the **Left Button** at the same time on both units to connect them.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.



IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

Trade Name:	VTech®
Model:	5185
Product name:	KidiGo™ Walkie Talkies
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5185 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.vtech.com/re-directive

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5185 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.vtech.com/re-directive

Radio Frequency Band : 2408MHz – 2474MHz

Maximum RF power : 107.23dBuV/m

IC STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device is compliance with RF field strength limits, users can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme de ce matériel aux conformités ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité d'acquérir les informations correspondante.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

CAN ICES-3 (B)/NMB-3(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty

