

vtech®

# Instruction Manual

**Go! Go!**  
**CORY**  
**CARSON**®

## 3-in-1 Motorssori Playground™




91-004019-001 ©

# INTRODUCTION

Thank you for purchasing the **Go! Go! Cory Carson® 3-in-1 Motorssori Playground™!**

Are you ready to have fun? Launch Cory down the slide and watch him go. Rearrange the slides for three different ways to play. Create a super slide, dual slide or a stunt slide!

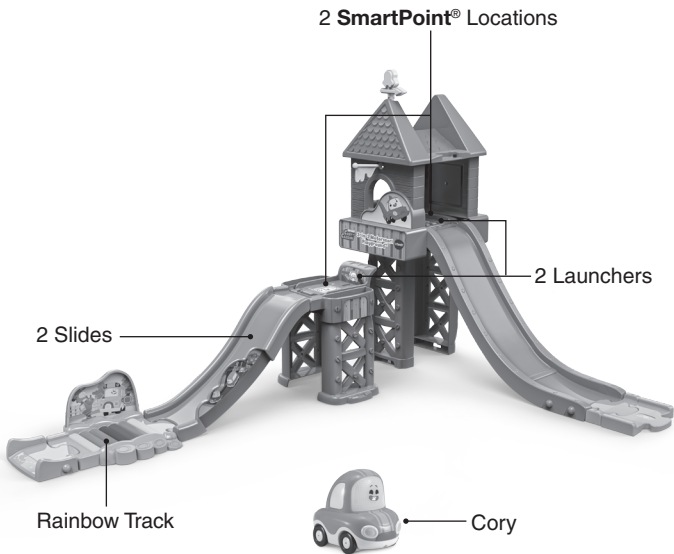


# INCLUDED IN THIS PACKAGE



One interactive  
Cory




One small platform with  
**SmartPoint®** launcher

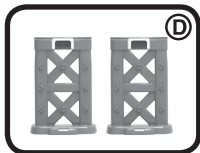

Two small platform  
supports




One large platform with  
**SmartPoint®** launcher

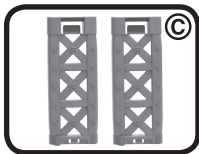


Two large platform  
supports




One rainbow  
track wall

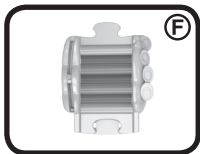


One rainbow track

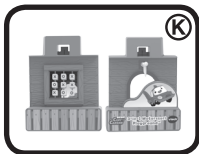

Two house walls

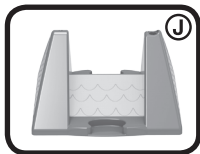


One house top

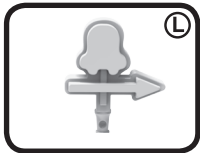


One weather vane



One small ramp track

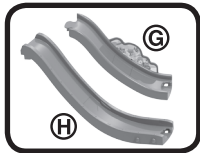

Two slide tracks

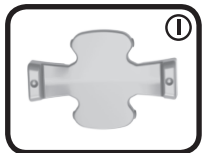

One connector track



One male/female  
connector track

- One label sheet
- One Quick Start Guide

### **WARNING**

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

### **NOTE**

Please save this Instruction Manual as it contains important information.

### **ATTENTION**

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.


### **NOTE**

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

# INSTRUCTIONS

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new LR44 batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

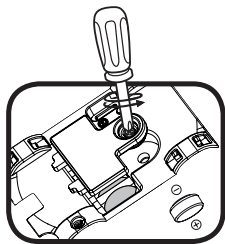

### **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### **ATTENTION :**

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.



## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries from the toy before charging.

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Symbol	Meaning
	Warning: Contains coin battery
	Read instruction manual

### **WARNING**

This product contains one or more button cell or coin batteries. If swallowed, a button cell or coin battery can cause internal chemical burns in as little as two hours and can lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention, and go straight to the nearest hospital emergency department.

### **ATTENTION**

Ce produit contient une ou plusieurs piles boutons. En cas d'ingestion, une pile bouton peut provoquer, en moins de deux heures, de graves brûlures chimiques internes pouvant conduire à la mort. Trier immédiatement les piles usagées. Tenir les piles neuves et usagées hors de portée des enfants.



Si vous pensez que des piles ont pu être avalées ou placées à l'intérieur d'une partie du corps de votre enfant, il faut consulter immédiatement un médecin aux urgences hospitalières.

### **Australia/New Zealand**

If you think batteries might have been swallowed or placed inside any part of the body, immediately call the 24-hour Poisons Information Centre on 13 11 26 (in Australia) or 24-hour National Poisons Centre on 0800 764 766 (in New Zealand) for fast, expert advice and go straight to the nearest hospital emergency room.

# LABEL APPLICATION


Please securely stick the labels to the playset as indicated below:

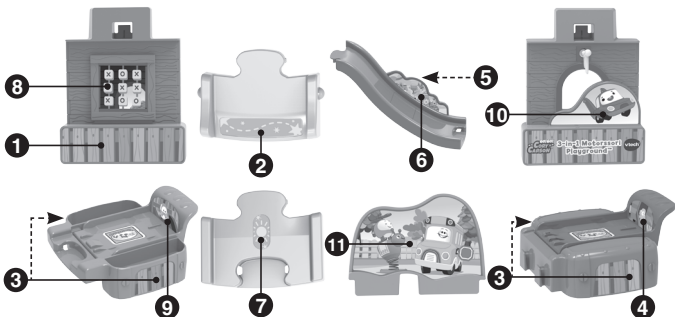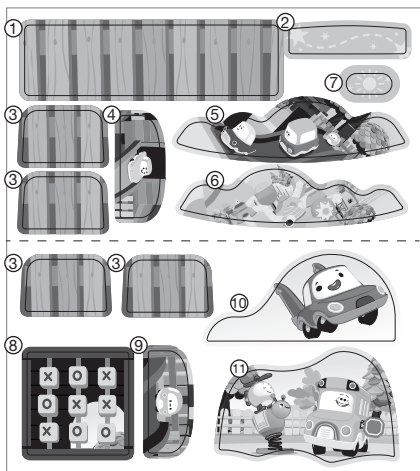


# ASSEMBLY INSTRUCTIONS

With the **Go! Go! Cory Carson® 3-in-1 Motorssori Playground™**, safety comes first. To ensure your child's safety, adult assembly is required.


1. Attach the Small Platform Supports (D) to the Small Platform With SmartPoint® Launcher (A). You will hear a click to indicate the pieces are secure.

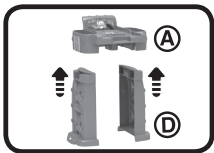

2. Attach the Large Platform Supports (C) to the Large Platform With SmartPoint® Launcher (B). You will hear a click to indicate the pieces are secure.

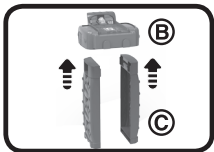


3. Insert the Rainbow Track Wall (N) to the Rainbow Track (F).

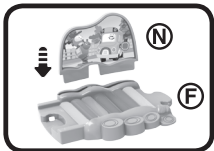





4. Insert the House Walls (K) into each side of the House Top (J). You will hear a click to indicate the pieces are secure.

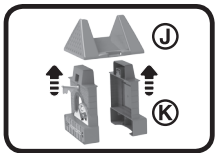

5. Insert the Weather Vane (L) to the House Top (J). You will hear a click to indicate the pieces are secure. Once the pieces are connected, they cannot be detached.

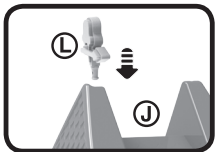


After the above steps, you may connect the included track pieces and configure them into different arrangements.

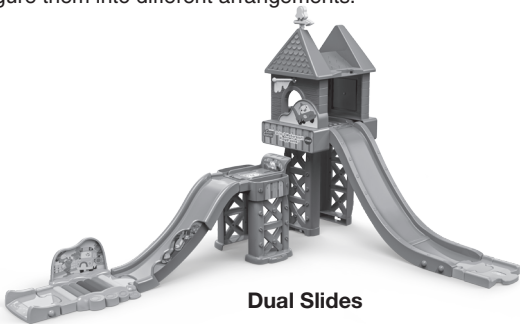

**Dual Slides**



**Stunt Slides**

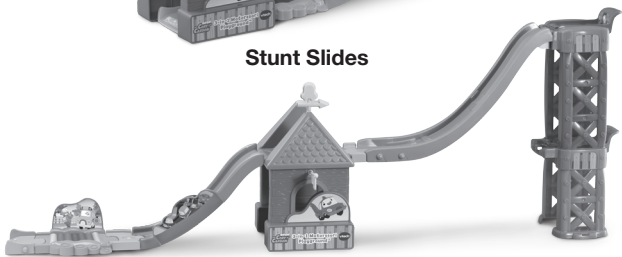

**Super Slide**


You are ready to play! Connect the track pieces together or use them to connect to other **Go! Go! Cory Carson®** playsets (each sold separately).

**Note:** **SmartPoint®** vehicles (sold separately) respond to **SmartPoint®** locations with different phrases, music or fun sound effects.

# PRODUCT FEATURES

## 1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On** ⏻ position. To turn the unit **Off**, slide the **On/Off Switch** to the **Off** ● position.

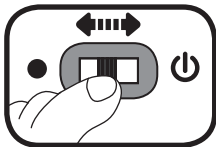

## 2. Automatic Shut-Off


To preserve battery life, the **Go! Go! Cory Carson®** character will automatically power down after approximately 30 seconds without input. The unit can be turned on again by pressing the **Light-Up Button**, or by rolling the character quickly.

**NOTE:** This product is in a Try-Me mode in the packaging. After opening the packaging, turn the character **Off** and **On** again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

# CORY ACTIVITIES


## 1. Light-Up Button

Press the **Light-Up Button** to hear sounds, songs, phrases and melodies. The light will flash with the sounds.

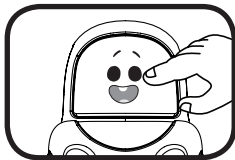

## 2. Sounds and Melodies

Push to hear fun sounds. If a melody is already playing, push the character to add fun sounds on top of the melody. The light will flash with the sounds.

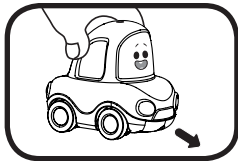

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

## IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## **NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **Supplier's Declaration of Conformity**

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®  
Model: 5274  
Product Name: Go! Go! Cory Carson® 3-in-1  
Motorssori Playground™  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

