

vtech[®]

Instruction Manual

 
Tune & Learn Boombox[™]



INTRODUCTION

Thank you for purchasing the **Tune & Learn Boombox™**!

This baby boombox-themed music player is a great way to introduce little ones to the world of music! Press the instrument buttons to hear musical instruments, turn the dial to learn about animals and numbers and turn the music dial to listen to different styles of music.

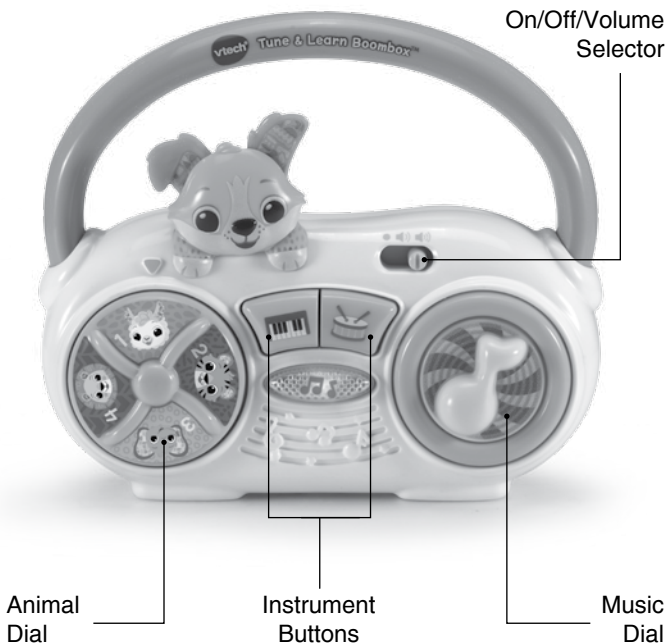

INCLUDED IN THE PACKAGE

- Tune & Learn Boombox™
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

Unlock the Packaging Locks

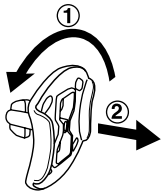


- ① Rotate the packaging locks counterclockwise 90 degrees.
- ② Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

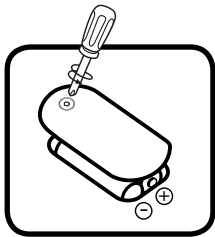

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES




- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

 
PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low volume  or the High volume  position. You will hear a song, welcoming phrases and a short tune. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off**  position.

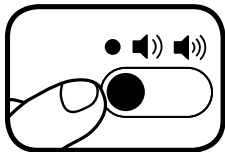

2. Automatic Shut-Off

To preserve battery life, the **Tune & Learn Boombox™** will shut off after approximately 45 seconds without input. The unit can be turned on again by pressing the instrument buttons, or by turning one of the dials.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

 
1. Instrument Buttons

Press the **Instrument Buttons** to learn instrument names and sounds. The light will flash with the sounds.



2. Animal Dial

Turn the **Animal Dial** to learn animal names, animal sounds, numbers and counting. When a melody is playing, turn the dial to hear animal sounds on the top of the melody. The light will flash with the sounds.

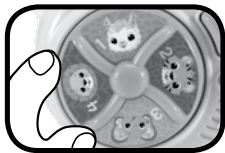

3. Music Dial

Turn the **Music Dial** to hear playful songs and melodies. When a song or melody is playing, turn the **Music Dial** to hear fun sounds on the top of the song or melody. The light will flash with the sounds.



MELODY LIST

1. Oats, Peas, Beans and Barley Grow
2. Daring Young Man on the Flying Trapeze
3. Diddle, Diddle Dumpling
4. Hey, Diddle Diddle
5. Where Has My Little Dog Gone?
6. Old MacDonald
7. Aiken Drum
8. On Top of Old Smokey
9. One Man Went to Mow
10. Do You Know the Muffin Man?
11. Here We Go 'Round the Mulberry Bush
12. Little Bo Peep
13. Looby Loo
14. Skip to My Lou
15. Bicycle Built for Two
16. The Entertainer
17. Toyland
18. Yankee Doodle
19. Alphabet Song
20. Bingo
21. Glow Worm
22. Au Clair de la Lune
23. For He's a Jolly Good Fellow
24. MacNamara's Band

25. Pussy Cat, Pussy Cat
26. Humpty Dumpty
27. Riddle Song
28. Pat-a-Cake
29. Polly Put the Kettle on
30. Hickory, Dickory, Dock

SONG LYRICS

Song 1

Let's dance to the music, move your body to the beat.
Sing with the music and tap your feet.
Wiggle, wiggle, shake it, shake it, dancin' n' movin'!
Come on everybody, let's get groovin'!

Song 2

One, two, three, four and five,
It's time to come alive,
Tap, snap, and clap along!
Tap the beat with your feet!

Song 3

I play songs and music,
We can sing together.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5333
Product Name: Tune & Learn Boombox™
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty



TM & © 2020 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003945-005  