 


vtech®

Instruction Manual

SWITCH&GO® T-REX MUSCLE CAR

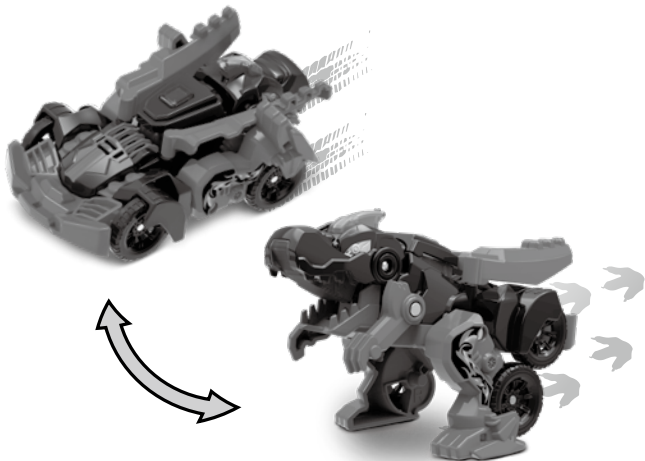

 
91-003915-004 US

INTRODUCTION

Thank you for purchasing **Switch & Go® T-Rex Muscle Car**.

Engage your imagination with this tough T-Rex that switches into a super cool muscle car! The **T-Rex Muscle Car** can also project light which makes him look like he is breathing fire!

Head Trigger

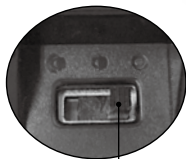

Off/Low Volume/High Volume Selector

INCLUDED IN THIS PACKAGE

- Switch & Go® T-Rex Muscle Car
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

 
NOTE

Il est conseillé de conserver ce manuel car il comporte des informations importantes.

INSTRUCTIONS

Battery Removal and Installation

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw. Then, remove the cover.
3. If a depleted battery is present, remove it by pulling up on one end of the battery.
4. Install a new AA (LR6/AM-3) battery following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

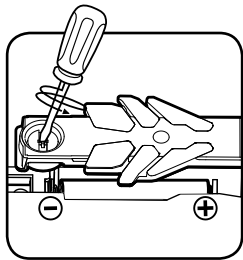



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

 
- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

1. Off/Low Volume/High Volume Selector



To turn the unit **ON** or adjust the volume, slide the switch to **LOW** (◀) / **HIGH** (▶). To turn the unit **OFF**, slide the switch to **OFF** (○).

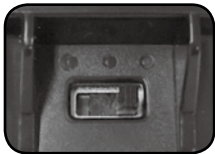

2. Head Trigger

Tilt the **HEAD TRIGGER** back to hear fun phrases, dinosaur facts and cool dinosaur sounds in Dino mode. In Vehicle mode, tilt the head to hear fun phrases and great vehicle sounds. The light projection will show with the response.



 
3. Motion Sensor

Move the T-Rex to hear wild dinosaur sounds and phrases in Dino mode. In Vehicle mode, roll the muscle car to hear cool vehicle sounds.


4. Automatic Shut-Off

To preserve battery life, the unit will automatically turn off after approximately 30 seconds without input. The unit can be woken up again by tilting the Head Trigger, or by switching the unit between Dino and Vehicle modes. The unit will also automatically turn off when battery power is very low.


HOW TO SWITCH BLAZE

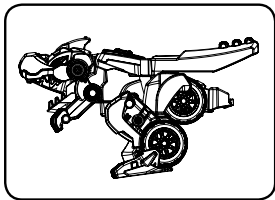

 
1. Dino mode.

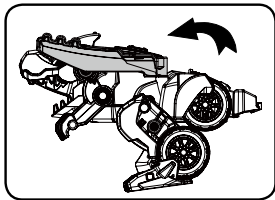

 
2. Separate the tail by rotating the tail sections toward the head.

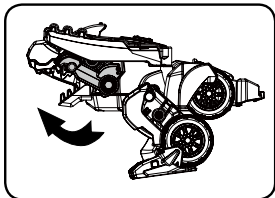

 3. Pull the arms up and toward the head.

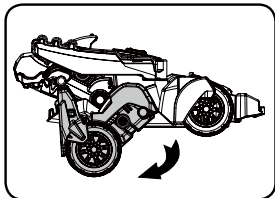

 4. Pull the legs towards the head.

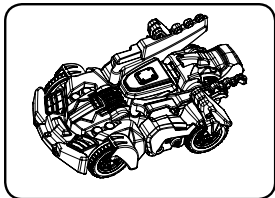

5. Vehicle mode.

NOTE

To switch the unit back into a dinosaur, follow the above steps in reverse order.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, insert a new set of batteries.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®
Model: 5379
Product Name: Switch & Go® T-Rex Muscle Car
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty



TM & © 2020 VTech Holdings Limited.
All rights reserved.

Printed in China.

91-003915-004 (US) (CA)