

vtech[®]

User's Manual

Rock & Bop Music Player™



© 2017 VTech
All rights reserved
Printed in China
91-003292-000 US

Dear Parent,

At VTech®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, VTech® has developed the **Preschool Learning™** series of interactive toys.

Preschool Learning™ features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning™**, learning is fun from day one!

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

Your friends at VTech®

To learn more about VTech® toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Rock & Bop Music Player™!**
Your child will love listening to the music, playing games, singing along with the songs and dancing around!



- | | |
|---------------------------|----------------------------------|
| ① LETTER SONGS BUTTON | ⑪ ON/OFF BUTTON |
| ② NUMBER SONGS BUTTON | ⑫ CLOCK CHIMES BUTTON |
| ③ CLASSICAL MUSIC BUTTON | ⑬ WHAT LETTER COMES NEXT? BUTTON |
| ④ HIP HOP MUSIC BUTTON | ⑭ ANIMAL REMIX BUTTON |
| ⑤ INSTRUMENT REMIX BUTTON | ⑮ ROCK MUSIC BUTTON |
| ⑥ PREVIOUS BUTTON | ⑯ BOOGIE DANCE BUTTON |
| ⑦ TEMPO BUTTON | ⑰ NEXT BUTTON |
| ⑧ PLAY/PAUSE BUTTON | ⑱ VOLUME BUTTON |
| ⑨ LIGHT-UP MUSIC BUTTON | |
| ⑩ LCD SCREEN | ⑲ LED LIGHT |

INCLUDED IN THIS PACKAGE

- One **Rock & Bop Music Player™**
- One set of headphones
- User's manual

WARNING:

All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION:


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE:

Please keep this user's manual as it contains important information.

Unlock the packaging lock:


- ① Turn the packaging lock counter-clockwise several times.
- ② Pull out and discard the packaging lock.

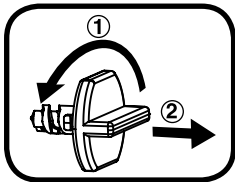

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit.
3. Install 2 new “AAA” size (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover to secure it.

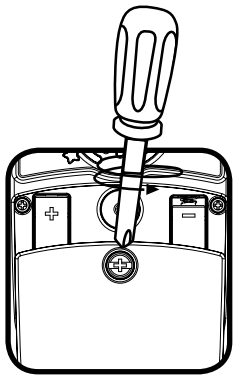

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. ON/OFF BUTTON

Press the **ON/OFF BUTTON**  to turn the unit **ON**. Press the **ON/OFF BUTTON** to turn the unit **OFF**.

2. FUNCTION BUTTONS

A) PLAY/ PAUSE BUTTON

Play or pause the music by pressing the **PLAY/ PAUSE BUTTON**.

B) PREVIOUS BUTTON & NEXT BUTTON

Press the **PREVIOUS BUTTON** & **NEXT BUTTON** to make a selection.

C) LIGHT-UP MUSIC BUTTON

Press the **LIGHT-UP MUSIC BUTTON** to hear music or confirm your selection.

D) TEMPO BUTTON


Press the **TEMPO BUTTON** to adjust the tempo of the melodies.

E) VOLUME BUTTON

Press the **VOLUME BUTTON** to adjust the volume.

3. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically power off after several minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**.

When you see this low battery icon  on the screen or the unit repeatedly powers down, please insert new batteries and try switching it on again.

ACTIVITIES

1. LETTER SONGS MODE

Learn letters and phonics while listening to letter songs. Press the **PREVIOUS & NEXT BUTTONS** to select different songs.

2. NUMBER SONGS MODE

Listen to number songs while watching cute animations to learn about numbers and counting.

3. WHAT LETTER COMES NEXT? MODE

Listen to the ABC song. When the music stops, use the **PREVIOUS & NEXT BUTTONS** to choose the letter that comes next.

4. CLOCK CHIMES MODE

Listen to the clock chimes and press the **PREVIOUS & NEXT BUTTONS** to select the correct number of chimes.

5. CLASSICAL MUSIC MODE

Listen to classical music by pressing the **PREVIOUS & NEXT BUTTONS** to select different melodies.

6. HIP HOP MUSIC MODE

Enjoy some hip hop music by pressing the **PREVIOUS & NEXT BUTTONS** to select different melodies.

7. ROCK MUSIC MODE

Hear rock music by pressing the **PREVIOUS & NEXT BUTTONS** to select different melodies.

8. ANIMAL REMIX MODE

Listen to the animals sing cute songs by pressing the **PREVIOUS & NEXT BUTTONS** to select different animals.

9. INSTRUMENT REMIX MODE



Remix the melody by pressing the **PREVIOUS & NEXT BUTTONS** to select different instruments.

10. BOOGIE DANCE MODE



Dance and “freeze” when the music stops. Listen to the words in the song and boogie down!

SONGS

SONG 1

It's dancin' time, let's boogie down!
Move and groove and shake all around!
C'mon now, let's turn up the beat!
Play it again, put it on repeat!

SONG 2

1 little, 2 little, 3 little penguins
4 little, 5 little, 6 little penguins
7 little, 8 little, 9 little penguins
10 will waddle away

SONG 3

Clap, clap, clap your hands!
Bounce, bounce, bounce around!
Stomp, stomp, stomp your feet!
Jump, jump, touch the sky!
Boogie, boogie, boogie down!

SONG 4

Dance, dance, dance it out!
Wave, wave, wave your arms!
Dance, dance, dance all day!
Slow, slow, slow it down!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by going to our web site at www.vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.