 


vtech®

Parent's Guide

DIGIART

Spirals & Sounds™

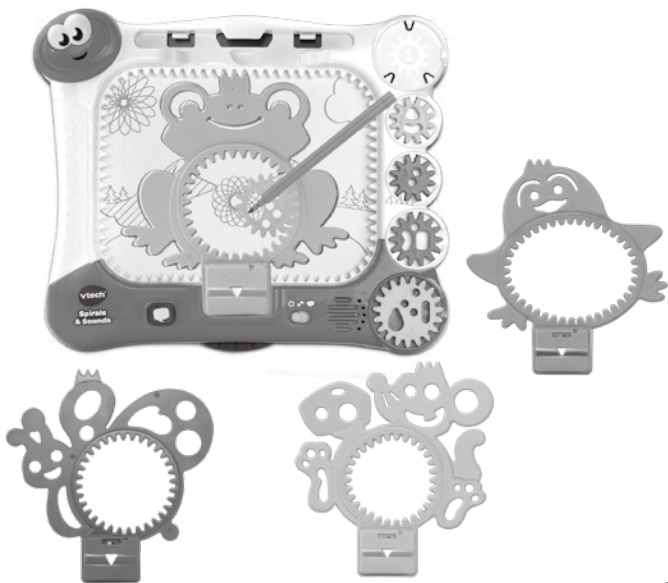

91-003531-005 US

INTRODUCTION

Thank you for purchasing the **VTech® DigiArt Spirals & Sounds™**.

Create unique spiral designs using the four animal stencils and five gears on the spiral art board. Hear playful responses, learn fun facts about animals or listen to melodies while you create your masterpiece!

INCLUDED IN THIS PACKAGE

- One Spiral Art Board
- Four animal stencils
- Five spiral gears
- One back board
- One marker
- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

 
NOTE: Please keep this parent's guide as it contains important information.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

Unlock the packaging locks:

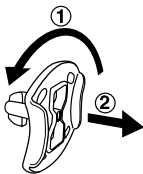


① Rotate the packaging locks 90 degrees counterclockwise.

② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit.
3. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover.

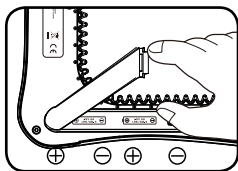

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

 
Low Battery

When the batteries are exhausted, the DigiArt Spirals & Sounds™ may shut off or restart suddenly. Please replace the batteries with a full set of new batteries before further use.

TRY ME MODE

If you've just taken the **DigiArt Spirals & Sounds™** out of the packaging for the first time, you need to disable Try Me mode before playing. To disable Try Me mode, insert one of the animal stencils and the program will be reset to normal mode.

PRODUCT FEATURES

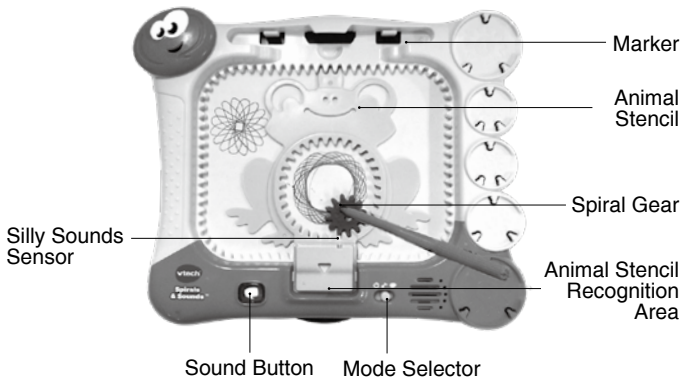


BACK BOARD INSTALLATION

1. Start with the spiral art board face down.
2. Insert the back board first into the upper left-hand corner and then the right-hand corner.



STENCILS & GEARS STORAGE

 Stack the four stencils together with the frog stencil on the top, then insert the stacked stencils into the frame. All of the gears can be stored on the side of the spiral art board, as illustrated below.

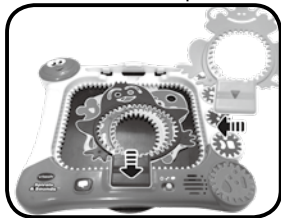



Snap the stencils together with the frog on top.



Note that the top of the frog stencil should be under the lip of the marker holder.


Paper Installation

  1. Unclip the frame from the back board, and insert a sheet of letter-sized paper.
2. Clasp the frame to the back board to keep the paper secure.
3. Only use one piece of paper at a time.

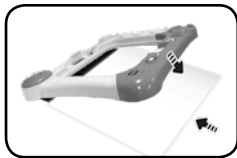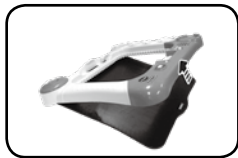

Animal Stencil Installation

 1. Locate the **Animal Stencil Recognition Area**.
2. When installing a stencil, be sure the bottom is firmly inserted into the **Animal Stencil Recognition Area** and that the top is firmly inserted into the teeth of the frame.

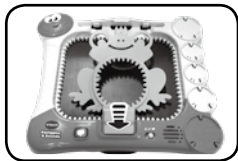

Mode Selector

To turn the unit **ON**, slide the **Mode Selector** to the Music Mode or the Drawing Mode position. To turn the unit **OFF**, slide the **Mode Selector** to the **OFF** position.

Sound Button

In Music Mode, press this button to play melodies. Press it again to play the next melody.

In Drawing Mode, press this button to hear fun responses.

Silly Sounds Sensor

Roll a gear across the **Silly Sounds Sensor** within the **Animal Stencil** to trigger fun sounds.



Automatic Shut Off

To preserve battery life, the **DigiArt Spirals & Sounds™** will automatically power down after approximately two minutes without input. The unit can be turned on again by pressing the **Sound Button**.

ACTIVITIES:

1. Drawing Mode

Insert one of the animal stencils and use any spiral gear to draw. Roll the gear inside the animal stencil to hear funny sounds. Or press the **Sound Button** to hear the animal talk, give fun facts or say a funny rhyme!

2. Music Mode 🎵

In this mode you can listen to 20 melodies. Press the **Sound Button** to play the next melody.

RHYMES:

Frog

I'm a jumping frog, jump, jump, jump
From my lilypad to the tree stump
I love flies, yummy and delicious!
I eat them every day, they're so nutritious!

Mouse

I'm a squeaky mouse, squeak, squeak, squeak
When people see me, they give a little shriek!
I'm a friendly mouse, just looking for some cheese
If you have any, will you give it to me please??

Penguin

 
 
 
 
 
 
I'm a little penguin, in the snow
Sliding on my tummy, here I go, whoa!
I love eating fish from the deep blue sea
Let's be friends, you and me!

 
 
 
 
 
 
Butterfly

 
 
 
 
 
 
I'm a butterfly who loves to fly
I use my wings to soar sky high!
I love to flutter and smell the flowers
I could play with you for hours and hours!

 
 
 
 
 
 
SPIRAL ART GUIDELINES:

The table below shows the basic patterns you can draw with the included gears and stencils:

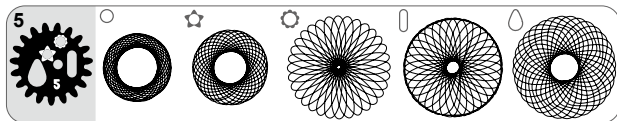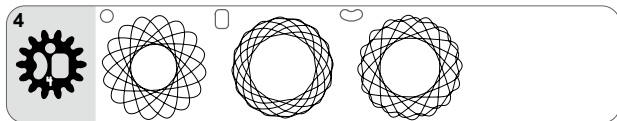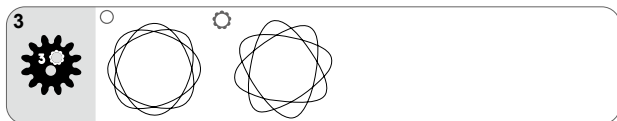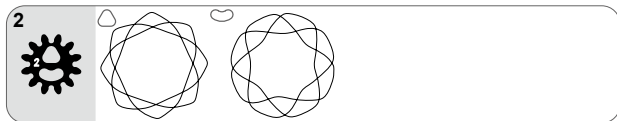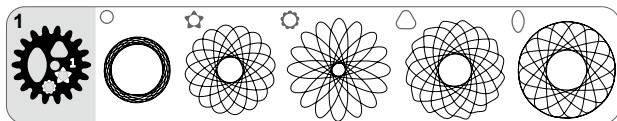
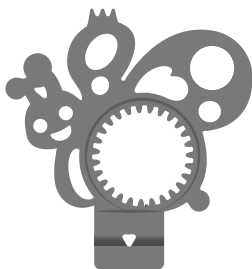


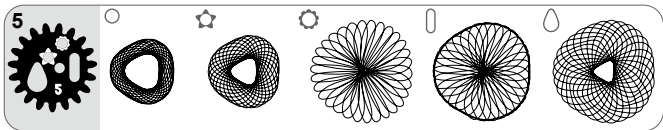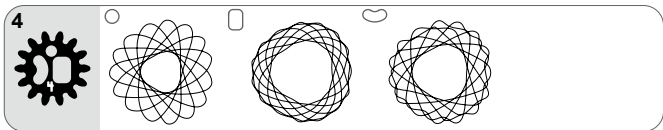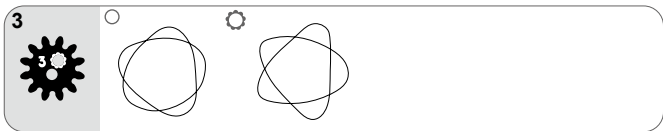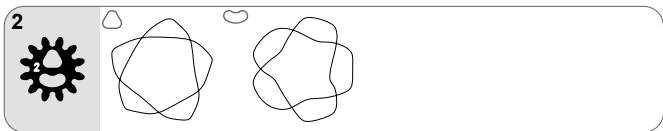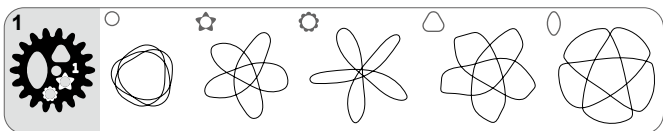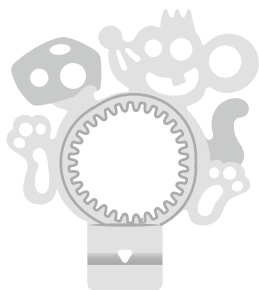


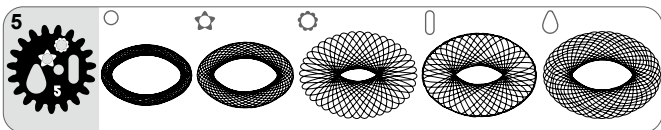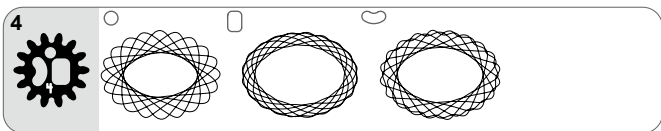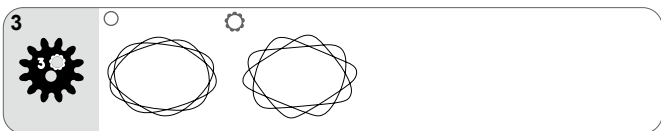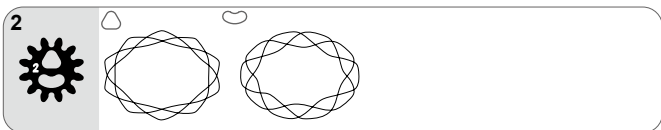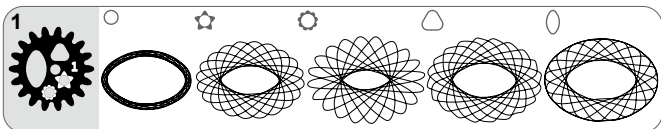
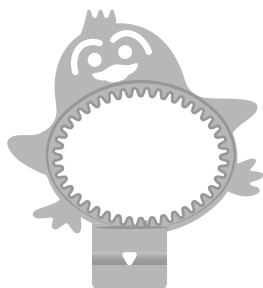


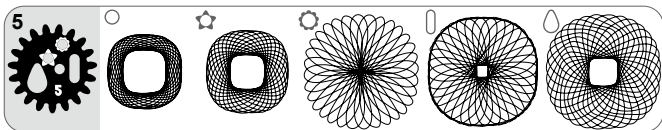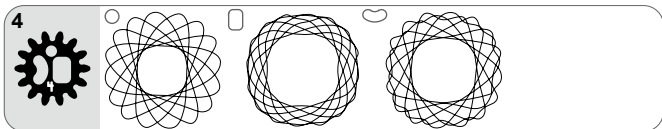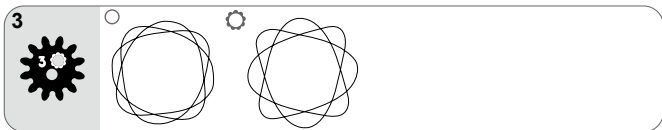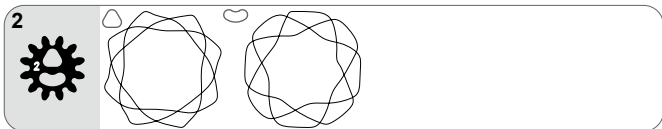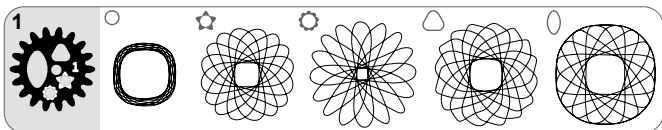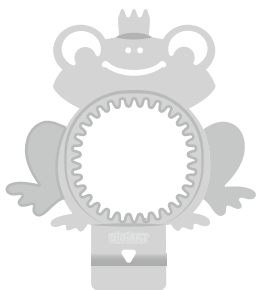

See below designs for more inspiration!

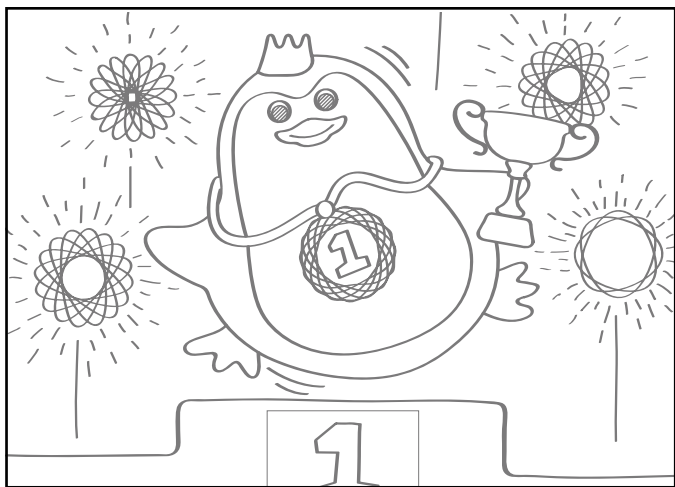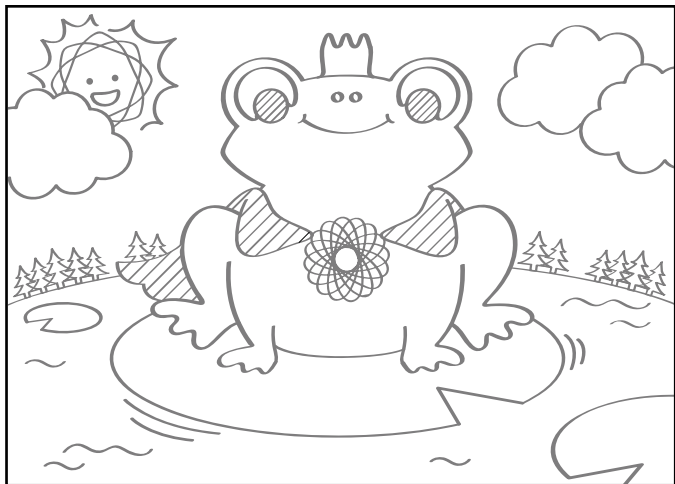  

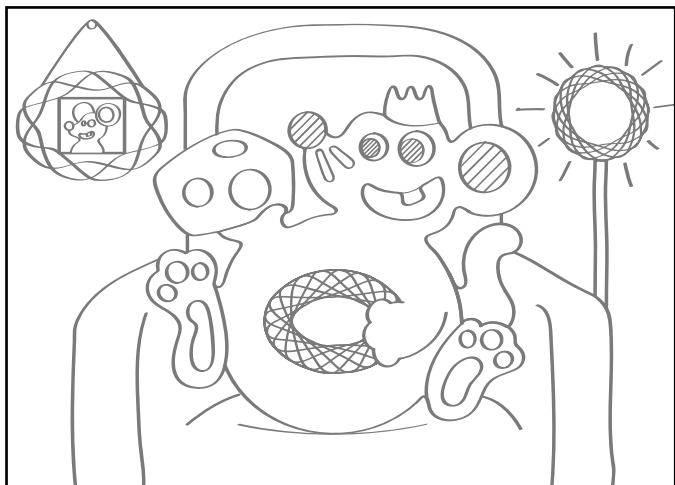 

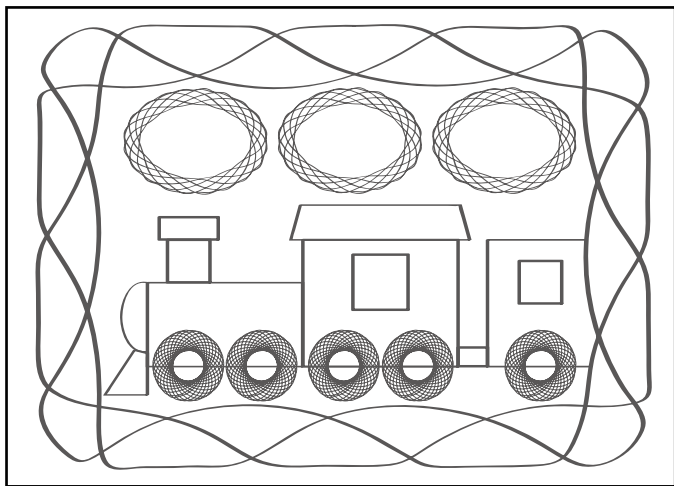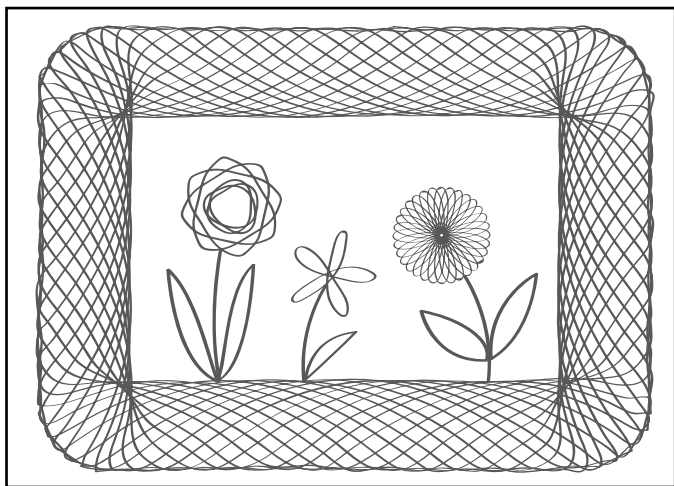  

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

Trade Name: VTECH®
Model: 1690
Product name: DigiArt Spirals & Sounds™
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Conforms to ASTM D-4236.



**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty

