

vtech®

Parent's Guide

Kid  
SuperStar™



91-003251-020 ©

 
# INTRODUCTION

Thank you for purchasing the **VTech® Kidi Super Star™!** Grab the microphone and sing along to eight great songs. Once you're ready, reduce or remove the main vocal track and sing the songs by yourself. The disco light spins 180 degrees for a superstar effect.




## PRODUCT FEATURES



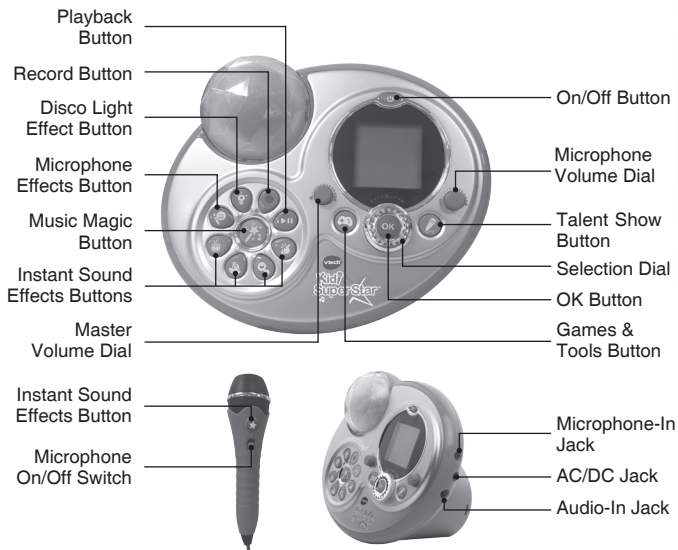

### PRODUCT LAYOUT AND BUTTONS





























## BUTTONS ON MAIN UNIT



<b>On/Off</b> 	Press this button to turn the unit <b>On</b> and <b>Off</b> .
<b>Master Volume Dial</b> 	This controls the master volume of the whole unit, including the microphone volume. Turn this dial to adjust the whole unit's volume at any time.
<b>Microphone Volume Dial</b> 	Adjust the microphone volume at any time by turning this dial. If the master volume is turned <b>Off</b> , the microphone output cannot be heard.

<p><b>Music Magic Button</b> </p>	<p>Music Magic mode is for sing-along use only. It reduces or removes the main vocal track from most songs. This allows you to perform like a super star and sing along to the music as the lead. Press the <b>Music Magic Button</b> to toggle between Music Magic mode and Normal mode.</p> <p><b>Music Magic Mode:</b> Reduces or removes the main vocal track from sing-along songs.</p> <p><b>Normal Mode:</b> Normal music playback.</p> <p><b>Note:</b> Music Magic mode may not work for all songs. Its effectiveness varies depending on the song. For the best results, studio recorded songs are recommended. Unfortunately we cannot guarantee Music Magic mode will work for every song. We do not recommend using Music Magic mode with mono recordings or live concert performances, etc.</p>								
<p><b>Record</b> </p>	<p>Press to start or stop recording. <b>Note:</b> Records up to a maximum of 5 minutes.</p>								
<p><b>Playback</b> </p>	<p>Press to play or pause the recording. <b>Note:</b> When recording, please do not remove the batteries or unplug the power adapter or the recording will be erased.</p>								
<p><b>Disco Light Effect</b> </p>	<p><b>Changing Light Effects:</b> In Games &amp; Tools mode, press this button to switch the light <b>On</b> and <b>Off</b>. In Talent Show mode, press this button to toggle between different disco light effects:</p> <table border="1" data-bbox="393 1064 844 1218"> <tbody> <tr> <td>• Disco</td> <td>• Peaceful</td> </tr> <tr> <td>• Voice</td> <td>• Dreamy</td> </tr> <tr> <td>• Starry</td> <td>• Party</td> </tr> <tr> <td>• Preset</td> <td>• Light Off</td> </tr> </tbody> </table>	• Disco	• Peaceful	• Voice	• Dreamy	• Starry	• Party	• Preset	• Light Off
• Disco	• Peaceful								
• Voice	• Dreamy								
• Starry	• Party								
• Preset	• Light Off								

	<p><b>Brightness settings:</b> Hold down the <b>Disco Light Effect Button</b> for approximately two seconds to enter the Brightness Settings menu. From here, turn the <b>Selection Dial</b> left or right to adjust the brightness of the unit. Press the <b>OK button</b> to save when finished.</p>						
<p><b>Microphone Effects</b> </p>	<p>Press this button to switch between different microphone effects when using the microphone:</p> <table border="1"> <tr> <td>• Squeaky </td> <td>• Deep </td> </tr> <tr> <td>• Robot </td> <td>• Echo </td> </tr> <tr> <td>• Normal </td> <td></td> </tr> </table>	• Squeaky 	• Deep 	• Robot 	• Echo 	• Normal 	
• Squeaky 	• Deep 						
• Robot 	• Echo 						
• Normal 							
<p><b>Instant Sound Effects</b> </p>	<p>There are four <b>Instant Sound Effects Buttons</b> on this unit. Press any of these buttons to add a sound effect over your performance:</p> <table border="1"> <tr> <td>• Intro Drum</td> <td>• Applause</td> </tr> <tr> <td>• Laughter</td> <td>• Cheering</td> </tr> </table>	• Intro Drum	• Applause	• Laughter	• Cheering		
• Intro Drum	• Applause						
• Laughter	• Cheering						
<p><b>Games &amp; Tools</b> </p>	<p>Press this button to enter Games &amp; Tools mode for different activities.</p>						
<p><b>Talent Show</b> </p>	<p>Press this button to enter Talent Show mode for Singing Fun, Free Play and External Music Connection.</p>						
<p><b>Selection Dial</b> </p>	<p>Turn the <b>Selection Dial</b> to make a selection.</p>						
<p><b>OK Button</b> </p>	<p>Press this button to confirm your selection.</p>						
<p><b>Microphone-In Jack</b> </p>	<p>Used to plug in your microphone. <b>Note:</b> Please ensure a firm connection.</p>						
<p><b>Audio-In Jack</b> </p>	<p>Used to plug in an MP3 player (not included) using the included 3.5mm jack audio cable. <b>Note:</b> Please ensure a firm connection on both ends of the audio cable.</p>						

<b>AC/DC Jack</b> <small>DC7.5V=400mA</small> 	Used to plug in a <b>VTech®</b> 7.5V AC power adapter (sold separately).
--	--

## BUTTONS ON MICROPHONE



 

 


<b>Microphone On/Off</b> 	Use this switch to turn the microphone <b>On</b> or <b>Off</b> . Slide the switch up (I) for <b>On</b> and down (O) for <b>Off</b> . <b>Note:</b> To avoid picking up any unnecessary harsh sounds from the microphone, place the microphone away from the speaker and switch the microphone <b>Off</b> whenever it is not in use.
<b>Instant Sound Effects</b> 	Press this button to add a sound effect over your performance.

## INCLUDED IN THIS PACKAGE

- One **VTech® Kidi Super Star™**
- One microphone
- One 3.5mm jack audio cable
- One microphone stand
- One parent's guide

**Note:** Includes three poles to adjust height. Ensure the stand is assembled using the correct number of poles for your child's height.
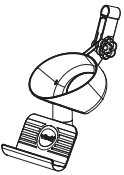
### STAND PARTS:

 x 1	 x 1	 x 1
 x 2	 x 3	
 x 1	 x 3	

### WARNING:


All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

 
## NOTE:

Please keep this parent's guide as it contains important information.

This product is only to be connected to equipment of Class II (marked on the marking plate with a symbol ).


## Unlock the packaging lock:

- ① Turn the packaging lock counterclockwise several times.
- ② Pull out and discard the packaging lock.

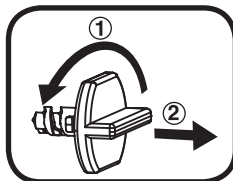


## STAND ASSEMBLY

 Adult assembly required. For your child's safety, do not let your child play with this product until it is fully assembled.

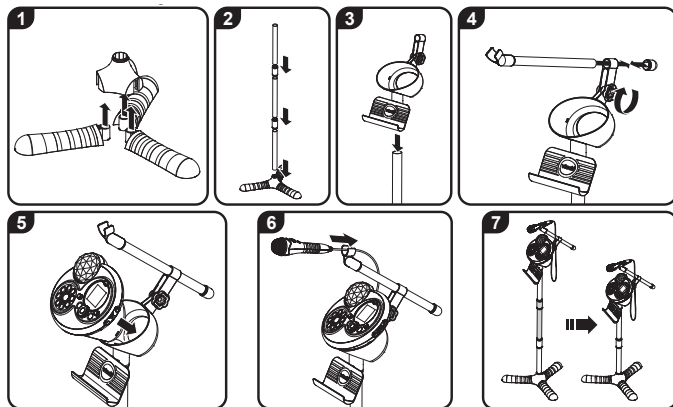

 For the best stability, we recommend positioning any foot of the stand perpendicular to the back of the **Kidi Super Star™** unit. Please refer to the illustration on the next page:

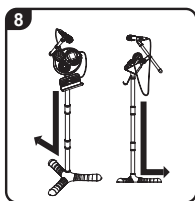


## GETTING STARTED

### BATTERY INSTALLATION

Kidi Super Star™ uses 4 AA (AM-3/LR6) batteries or a VTech® 7.5V adapter (sold separately).

 - Make sure the unit is turned **OFF**.
- Locate the battery cover on the bottom of the unit.
- Remove the battery cover and install 4 AA batteries as illustrated.
- Close the battery cover.

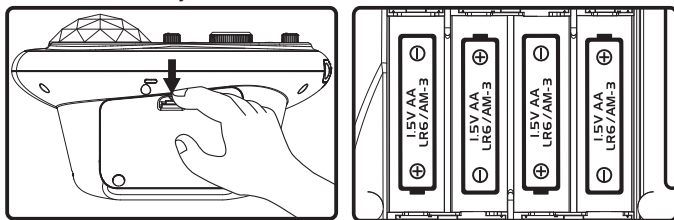

### BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.




- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## POWER ADAPTER CONNECTION

- Make sure the unit is turned **OFF** and ensure no batteries remain inside the unit.
- Locate the **AC/DC Jack** on the side of the unit.
- Connect the power adapter into the unit's **AC/DC Jack**.
- Insert the other end of the power adapter into a plug socket.
- Turn the unit **ON**.

## TRANSFORMER SAFETY NOTICE

- Using a **VTech®** adapter (AC/DC 7.5V  400mA) is recommended but sold separately.
- This product should only be used with a transformer for toys.
- The transformer is not a toy.
- This product is not intended for use by children under the age of three.
- Do not connect this product to more than the recommended number of power supplies.
- Never clean this product with liquid when it is plugged into a power supply.
- Please regularly examine the transformer, checking for damage to the cord, plug and other areas. Do not use the transformer if there is any damage to it.


**Note:** If the unit stops working or the sound becomes weak, it may be because of a fault with the power adapter connection.

Turn the unit **OFF** and unplug the adapter for 15 seconds. Then plug the adapter back in and turn the unit **ON**. If the problem persists, the adapter you are using may be faulty.


# TO BEGIN USING KIDI SUPER STAR™

## GETTING STARTED

Follow the steps below to begin using **Kidi Super Star™**,

1. Connect the microphone into the **Microphone-In Jack** on the side of the unit.
2. Press the **On/Off Button**  to turn on the unit.

## Low Battery Icon


When the batteries are exhausted, the low battery icon  will display and the unit will automatically shut off. Please replace the batteries with a full set of new batteries before further use.

If the product is frequently used, the batteries will drain at a faster rate. We recommend using a power adapter (sold separately) if this product is to be used frequently.

## Automatic Shut Off

To preserve battery life, **Kidi Super Star™** will automatically power off if there is no operation for a period of time. You can change the Auto Power Off time in External Music Connection mode. To do this, simply enter External Music Connection mode and press the **OK Button** to bring up the Auto Power Off menu, from here use the **Selection Dial** to change the time. We recommend the use of a power adapter (sold separately) whenever possible.

## ACTIVITIES

<b>Games &amp; Tools</b> 	<ul style="list-style-type: none"><li>• Funky Monkey</li><li>• Beat Catcher</li><li>• Silly Beat, Silly Song</li><li>• Beat Boxer</li><li>• Play That Instrument</li><li>• Tongue Twisters</li></ul>
<b>Talent Show</b> 	<ul style="list-style-type: none"><li>• Singing Fun</li><li>• Free Play</li><li>• External Music Connection</li></ul>

# 1. Games & Tools

Press the **Games & Tools Button** (Ⓜ) to enter the Games & Tools menu. From here, turn the **Selection Dial** to choose an activity and press the **OK Button** to confirm.

 
## Funky Monkey

To play this fun party game, dance along with the monkey and freeze when the monkey freezes. There is no right or wrong way to dance; this is just a fun party game to play either on your own or with friends! Enjoy and have an amazing monkey time!



## Beat Catcher

In this game, try to catch the music note on the right beat. Press the **Instant Sound Effects Buttons** to play. When the music note is in the target area, push the corresponding button to catch it. Try and catch them all!



## Silly Beat, Silly Song

When there is a smiling face in the target area, make a silly sound into the microphone. Record yourself when playing this game to hear how silly the sounds you made were!



## Beat Boxer

Beat Boxer provides different musical beats for your own beat box creation. You can create, sing and beat box along to a beat and record it. Play it back to see how great your beat boxing creation was!



## Play That Instrument

Turn the **Selection Dial** to choose a piece of music and press the **OK Button** to confirm your selections. Blow into the microphone to perform your music. Change the instrument while you play using the **Selection Dial**.



## Tongue Twisters

Challenge yourself to master all of these tricky Tongue Twisters! Turn the **Selection Dial** to select a twister, and press the **OK Button** to confirm. Listen to the instructions and repeat the Tongue Twister. Press the **OK Button** when you've finished and select your next Tongue Twister! Can you master them all?



**Note:** For all of the Tongue Twisters, please refer to the **APPENDIX**.

## 2. TALENT SHOW

Press the **Talent Show Button**  to enter the Talent Show menu. Then turn the **Selection Dial** to choose an activity and press the **OK Button** to confirm.

### Singing Fun

Choose the Singing Fun activity to learn and sing along with eight built-in songs. Turn the **Selection Dial** to choose a song and press the **OK Button** to begin. When you are ready, press the **Music Magic Button** to remove the main vocal track from the built-in songs and sing by yourself like a super star!



**Note:** For the lyrics to the eight built-in sing-along songs, please refer to the **APPENDIX**.

### Free Play

Use your imagination to create your own concert, talk show, talent show, or to just play around and have fun! It's show time!



### External Music Connection

Plug in an MP3 player or external music player (not included) via the provided 3.5mm jack audio cable to listen to your own music. From here, you can press the **Music Magic Button** to reduce or remove the main vocal track from the current song. Now you can sing along and be a super star!



You can also set an auto-off timer in this mode. To do so, simply press the **OK Button** and turn the **Selection Dial** to choose your desired auto-off time: 60 minutes, 90 minutes, 120 minutes, 180 minutes or disable auto-off. Please note that the disable auto-off option can only be selected when using a power adapter.

The volume controls on the **Kidi Super Star™** do not control the volume of external devices. Please use the volume controls on your MP3 player or external music player to increase or decrease volume.

Music Magic mode may not apply for all songs. For details, you may refer to the Music Magic section under **PRODUCT FEATURES**.

**Note:** Please disconnect your MP3 player or external music player and the provided 3.5mm jack audio cable from **Kidi Super Star™** when not in use.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Handle the device carefully.
3. Keep the device away from dusty or dirty areas.
4. Keep the device away from moisture or extreme temperatures.
5. Do not disassemble the device. If a problem occurs, remove and replace the batteries to reset the device, or try new batteries.
6. Do not drop the device on a hard surface and do not expose it to or immerse it in water.

## TROUBLESHOOTING

Please refer to this section if you are experiencing difficulty operating your **Kidi Super Star™**.

Problem	Possible Cause	Correction
Your <b>Kidi Super Star™</b> has stopped working or does not turn on	Incorrect battery polarities	Ensure that the batteries are installed using the correct polarity.
	Depleted batteries	Replace with new batteries.
	Power adapter issue	Ensure that the adapter is connected correctly.
Microphone output is not loud enough	The microphone volume is low	Turn up the microphone volume on the unit using the <b>Microphone Volume Dial</b> .
Harsh sounds coming from the speaker	The microphone may be too close to the speaker	Ensure that the microphone is kept away from the speaker and that the microphone is switched <b>Off</b> whenever it is not in use.

Microphone output cannot be heard	The microphone is not plugged in correctly	Ensure that the microphone is connected to the unit firmly and correctly.
	The microphone is not switched on	Turn the <b>On/Off Switch</b> on the microphone to the (I) <b>On</b> position.
	The microphone volume is low	Turn up the microphone volume on the unit using the <b>Microphone Volume Dial</b> .
	The master volume is low	Turn up the master volume on the unit using the <b>Master Volume Dial</b> .
Music Magic mode is not functioning correctly	The MP3 player or external music player is not correctly connected to <b>Kidi Super Star™</b>	Make sure that your MP3 player or external music player is well connected to <b>Kidi Super Star™</b> at both ends of the provided 3.5mm jack audio cable.  <b>Note:</b> If your MP3 player or external music player is inside a case, we recommend removing it to allow a firm connection with the audio cable.
	Unsuitable song source	The Music Magic feature may not work for all songs. Its effectiveness varies from song to song. For best results, studio recorded songs are recommended. It is not recommended to use Music Magic for mono recordings or live concert performances, etc.

# APPENDIX

## Tongue Twisters

1	Double bubble gum, bubbles double.
2	She sells seashells on the seashore.
3	If a dog chews shoes, which shoes does he choose?
4	She sees cheese, she sees cheese, she sees cheese.
5	Rolling red wagons, rolling red wagons, rolling red wagons.
6	Freshly fried flying fish.
7	A proper copper coffee pot.
8	I scream, you scream, we all scream for ice cream.
9	Which wristwatches are Swiss wristwatches?
10	The beaming baby bluebirds blinked.
11	How much wood would a woodchuck chuck if a woodchuck could chuck wood?
12	Peter Piper picked a peck of pickled peppers. A peck of pickled peppers Peter Piper picked.
13	Fuzzy Wuzzy was a bear. Fuzzy Wuzzy had no hair. Fuzzy Wuzzy wasn't fuzzy, was he?
14	Any noise annoys an oyster, but a noisy noise annoys an oyster more.
15	If two witches were watching two watches, which witch would watch which watch?

## Singing Fun

### 1. Wiggle 'Till the Night

We jump to the left, we jump to the right.  
We jump up high and wiggle till the night.  
We dance to the left, we dance to the right.  
We dance in the light, and wiggle till the night.

Come on friends, don't be shy!  
Take my hand, and we wiggle...

We clap to the left, we clap to the right.  
We clap up high, and wiggle till the night.  
We laugh to the left, we laugh to the right.  
We laugh in the light, and wiggle till the night.

Come on friends, don't be shy!  
Take my hand, and we wiggle...

We jump to the left, we dance to the right.  
We clap up high and wiggle till the night.  
We wiggle to the left, we giggle to the right.  
We wiggle at night, and we wiggle, wiggle till the night.  
Oh, yeah!



## **2. You're My Friend!**

Buddy, friend, amigo  
Let's go have a good time.  
If it's cold,  
Why not go build a snowman?

Even if it's raining,  
We'll still have a good time.  
You're my friend,  
And we love to do everything, simple.

Blue sky, daydream, flowers,  
Let's lay in the sunshine.  
You're my friend,  
And we love to go everywhere, simple.

See-saw, hee-haw, yee-ha,  
We're having a good time.  
You're my friend,  
We share everything, simple.

## **3. Shake Your Body!**

Work, work, work a little bit harder!  
Move, move, move a little bit faster!  
Dance, dance, dance a little bit longer!

Are you ready to sweat? Get ready and let's go again!

Shake, shake, shake your hips!  
Use your legs to jump, jump, jump!  
Wave, wave, wave your hands!

Are you ready to sweat? Get ready and let's go again!

Shake, shake, shake your hips!  
Use your legs to jump, jump, jump!  
Rub, rub, rub your tummy!  
And we're done!

#### 4. Sing a Super Hit!

Drop a beat and hit play,  
Playing music makes my day,  
Write a hip new song,  
Hope you'll sing along!

Sing, sing, sing along,  
To the words of our favorite song.  
Sing, sing, sing along,  
It's sure to be a super hit!

Find a cool outfit to wear,  
You look great now get out there.  
Come on friends, let's get loud,  
And make our super fans proud!

Sing, sing, sing along,  
To the words of our favorite song.  
Sing, sing, sing along,  
It's sure to be a super hit!

## 5. Cats and Dogs!

At school, thinking about home.  
My pet dog is all alone.  
Barking, making the neighbors mad.  
Not to mention Mom and Dad.

He's a friendly, loving doggy.  
We also have a kitty named Auggie.

Cats and dogs are the best,  
They give hugs better than the rest.  
Cats and dogs are lots of fun,  
They love playing in the sun.

Auggie is the cutest cat,  
Always there on the mat.  
She loves eating all her food,  
And is always in a playful mood.

She loves sitting on our laps,  
For super-long kitty naps.

Cats and dogs are the best,  
They give hugs better than the rest.  
Cats and dogs are lots of fun,  
They love playing in the sun.

## 6. Wake Up!

Wake up, get up, go outside!  
Let's even go for a ride!  
The sun is shining, the birds are singing,  
The bells are ringing, let's go outside!

Wake up, wake up,  
It's a big world out there!  
Wake up, wake up,  
Let's get some air!

Wake up, get up, go explore!  
Don't want to hear you snore!  
It's a big world, many things to see,  
Time for adventure for you and me!

Wake up, wake up,  
It's a big world out there!  
Wake up, wake up,  
Let's get some air!

## 7. Never Gonna Stop

I am alive,  
And I've been told,  
You gotta do it all,  
You better be bold.

I have a gift,  
But I'm just one,  
And a change will come,  
From everyone.

So watch us rise up to the top,  
We are never gonna stop.  
Oh, no!

## 8. Dance for the Show!

Shake your body, gotta go with the flow.  
Move your head and the next thing you know  
You're out there spinning, and you're ready to go.  
On the floor, the lights are aglow.

Dance, dance, dance for the show!  
Dance, dance, dance for the show!  
Dance, dance, dance for the show!  
Oh yeah! Look at you go!

Shake your body, gotta go with the flow.  
Move your head and the next thing you know  
You're out there spinning, and you're ready to go.  
On the floor, the lights are aglow.

Dance, dance, dance for the show!  
Dance, dance, dance for the show!  
Dance, dance, dance for the show!  
Oh yeah! Look at you go!

### **IMPORTANT NOTE:**

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*



## **WARNING:**

**CHOKING HAZARD**-Small parts.  
Not for children under 3 yrs.

CLASS 1  
LED PRODUCT



## PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our website at [vtechkids.com](http://vtechkids.com), filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

Register your product online at [vtechkids.com/warranty](http://vtechkids.com/warranty).

TM & © 2016 VTech Holdings Limited.  
All rights reserved.  
Printed in China.  
91-003251-020