

vtech®

Instruction Manual

*Race & Discover*  
**DRIVER™**



# INTRODUCTION

Thank you for purchasing the **Race & Discover Driver™!**  
Start your engines, zoom around exciting racetracks, go on special road trips, help friends and pick up preschool skills on the way! Turn the wheel, slide the turn signal, press the dashboard buttons and more. Let's cruise!



# INCLUDED IN THIS PACKAGE

- Race & Discover Driver™
- 2 Support Legs



- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

 
## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

## Unlock the Packaging Locks

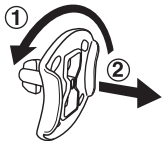


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

# GETTING STARTED
 
## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the side of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni- MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

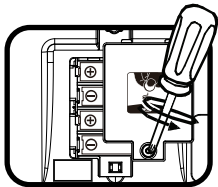

### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Exit Try-Me Mode

Attention: The unit is in Try-Me mode in the package. To exit this mode, follow the steps below:

 
1. Turn the **Starter** right to the **START** position to turn on the unit.
2. Next, slide the **Turn Signal Lever** down.
3. The **Hazard Button** and **Turn Signal Lights** will flash 3x with horn sounds to indicate Normal Play mode is active. The unit will restart.



## ASSEMBLY INSTRUCTIONS

With the **Race & Discover Driver™**, safety comes first. Adult assembly required. For your child's safety, do not let them play with this toy until it is fully assembled.

1. Insert the **Yellow Support Legs** into the Driver base as shown.

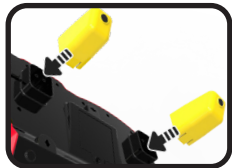

# PRODUCT FEATURES

## 1. Starter

Turn the **Starter** right to the **START** position to turn on the unit.

Turn the **Starter** left to the **OFF** position to turn off the unit.



## 2. Shifter



Shift up to **P** (park) to stop the car.

Shift down to **1** to start driving.

Shift down to **2** to drive faster.

Shift back up to **1** to drive slower.



## 3. Turbo Boost

Use the Turbo Boost for a blast of super speed when driving (except **Drive Around Mode**).



## 4. Steering Wheel

When driving, use the **Steering Wheel** to turn the car.

In menu screens or games, turn the **Steering Wheel** to make selections.

Press the **Horn** to confirm your choices.



## 5. Horn

When driving, press the **Horn** to make honking sounds.

In menu screens or games, press the **Horn** to confirm choices.



## 6. Turn Signal Lever

Slide the **Lever** up to turn on the **Right Turn Signal Light**.

Slide the **Lever** down to turn on the **Left Turn Signal Light**.

Move the **Lever** to the middle to turn off the **Turn Signal Lights**.

## 7. Mode Selector

Slide the **Mode Selector** to choose from three activities: Pretend Play, Drive Around or Racing mode.

## 8. Wiper Button

Press the **Wiper Button** to clean the windshield.

## 9. Hazard Button

Press the **Hazard Button** to turn on the **Hazard Signal Lights** and pull the car over to the side.

## 10. A/C Button

In **Pretend Play** and **Drive Around Mode**, press the **A/C Button** to adjust the temperature.

## 11. Dashboard Buttons



### Call

In **Pretend Play Mode** press **Call** to hear phone calls from friends.

In **Drive Around Mode** press **Call** to go on errands for friends.



### GPS

In **Pretend Play Mode**, press **GPS** to select a location.

In **Drive Around Mode**, press **GPS** to select a location and follow the directions to your destination.



### Auto Pilot

In **Drive Around Mode**, press **Auto Pilot** to drive to your chosen location automatically.



### Horn Selector

Press the **Horn Selector** to choose a horn sound.



### Radio

Press the **Radio Button** to hear traffic, weather and music.

Press the **Radio Button** again to turn off the music.



### Volume Control

Use the **Volume Control** to adjust the sound level.





## Exit

In **Drive Around Mode**, press **Exit** to leave **Learning Games** and return to driving.

In **Racing Mode**, press **Exit** to leave the race and return to the race selection menu.



## Help

Press the **Help Button** to hear hints and instructions.



## Progress

In the **Drive Around Mode**, press the **Progress Button** to check your game progress.

In the **Racing Mode**, press it to view earned trophies and collectibles.

## Battery Status

When the batteries are almost depleted, a low battery icon will flash few times on the **LCD Screen**. Then, the unit will automatically power off.

New batteries should be inserted before further use.

 
## Automatic Shut-Off

To preserve battery life, the unit will automatically power down after approximately three minutes without input.

# ACTIVITIES

## 1. Pretend Play Mode

In pretend play mode, children focus on manipulative play by turning the **Steering Wheel**, honking the **Horn**, using the **Turn Signal Lever** and exploring **Dashboard Buttons**.

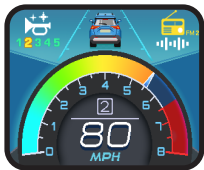

## 2. Drive Around Mode

Receive fun missions as you explore the city, country and town. Learn about car parts, maintenance and repair while running errands and helping friends.



 
### Mini Games in Drive Around Mode

For fun mini games, drive to the: **Gas Station**, **Farmers Market**, **Service Station** or **Wildlife Park**.

#### Gas Station

Fill 'er up! Do you have a flat tire?  
Low on gas? Count the missing  
bars to learn how much gas or air  
is needed.

Curriculum: Numbers, Counting,  
Simple Addition & Subtraction

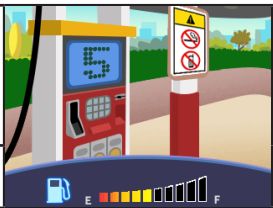

## Farmers Market

Drop by the **Farmers Market** and help the farmer identify colors, sizes, and letters as you shop for a friend.

Curriculum: Colors, Size Comparison, Beginning Letters, Vocabulary



## Service Station

Time for a tune up? Our friendly mechanic will explain the problem while you find the missing part.

Curriculum: Problem Solving



## Wildlife Park

Visit the **Wildlife Park** to look for animals and take their pictures.

Curriculum: Animals (names, sounds, features)



## Friend Missions









Press the **Call Button** to talk with friends, run errands, give rides and meet for fun outings.

## Driving Events



The Car System will guide young drivers through a variety of **Driving Events** from basic AC adjustment and windshield cleaning to low tires and mechanical issues. Follow voice prompts or GPS directions to resolve the issues.

## Game Progress - Scoring Guide

 Avoid hitting other cars. Reduce speed in the city.	<b>Progress</b>   
 Give rides to your friends and help them with errands to get likes.	
 Play learning games and level up to earn points.	

### 3. Racing Mode

Participate in 9 unique races that include 3 track styles with 3 levels on each track.

Each track begins with Level 1. Win races to level up and unlock new track levels.



Win races to earn trophies and unlock collectibles.



## RESET INSTRUCTIONS

To erase game save data, follow the steps below:

Move the selector to **Racing Mode**. In the race selection menu, press the following buttons in this order:

**Call - Auto Pilot - Exit - A/C - Wiper - Exit.**

When sequence is entered correctly, a horn sound will play and the unit will restart.

**NOTE:** This will erase all progress records, trophies and collectibles from the game file.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the product out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the product on a hard surface and do not expose the product to excess moisture or water.

# TROUBLESHOOTING

If the unit still isn't functioning, or if for some reason the unit stops working, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in

accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Supplier's Declaration of Conformity**

#### **47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®  
Model: 5589  
Product Name: Race & Discover Driver™  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.**

**CAN ICES-003 (B)/NMB-003(B)**

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

