

vtech®

User's Manual

Spin & Learn Color Flashlight®



© 2016 VTech
Printed in China

91-003166-005

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**® created the **Infant Learning**® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**® with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at **VTech**®

To learn more about **VTech**® toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Spin & Learn Color Flashlight®** learning toy!

Shine a light on learning with the **Spin & Learn Color Flashlight®**. The cute turtle button plays happy phrases and turns on the flashlight. 6 different colored lights and animals attract baby's attention. Turn the ring to change the colored lights and discover the sounds the animals make. Press the buttons to play games, learn letters or listen to music.

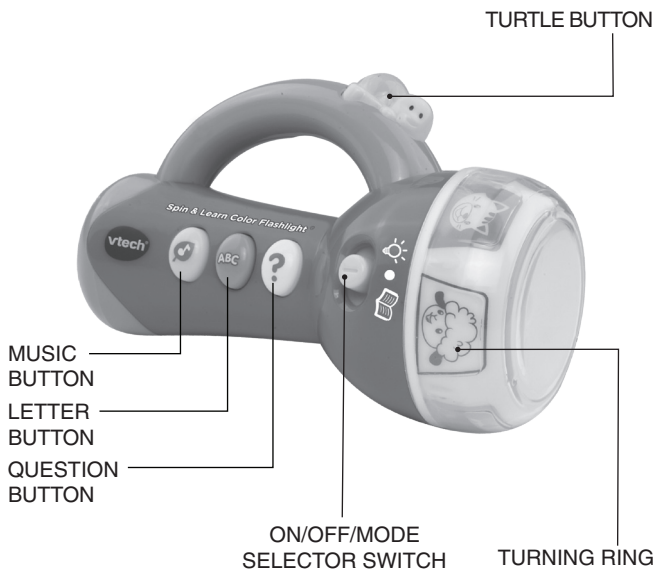

INCLUDED IN THIS PACKAGE

- One VTech® Spin & Learn Color Flashlight®
- One user's manual

 
WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION: Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep this user's manual as it contains important information.

GETTING STARTED


Unlock the packaging locks:

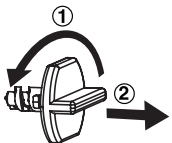

- ① Turn the packaging lock counter-clockwise several times.
- ② Pull out and discard the packaging lock.

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. Install 3 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box.
4. Replace the battery cover and tighten the screw to secure the battery cover.

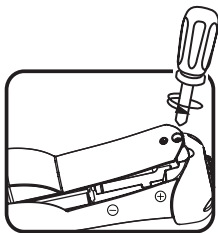


BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. ON/OFF/MODE SELECTOR SWITCH

 To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **FLASHLIGHT MODE** (☀️) or **PLAY MODE** (📖) position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** (●) position.


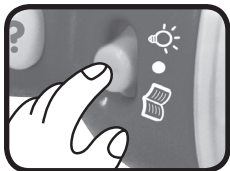


2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Spin & Learn Color Flashlight®** will automatically power-down after approximately 65 seconds without input. The unit can be turned on again by pressing any button or turning the ring.

ACTIVITIES

  
- Slide the **on/off/mode selector switch** to the play mode position and hear a short tune, a phrase and a song. The lights will flash with the sound. Slide the switch to the flashlight mode position and hear a fun sound. The light will flash with the sound.
- Press the **turtle button** in the play mode to hear playful phrases and sounds. The lights will flash with the sound. In the flashlight mode, hold down the turtle button to turn on the flashlight. The flashlight will remain on when the turtle button is being pressed. To preserve battery life, the flashlight will automatically power-down after being on for 2 minutes.

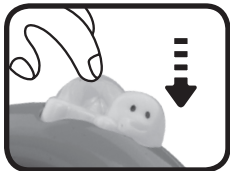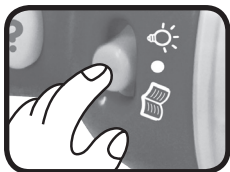

3. Press the **music button** in the play mode to hear melodies with nature sounds. The lights will flash with the sound. In the flashlight mode the music button will play a sound and the turning ring will light up in the related color.



 4. Press the **letter button** in the play mode to hear a song or melody. The lights will flash with the sound. In the flashlight mode the letter button will play a sound and the turning ring will light up in the related color.

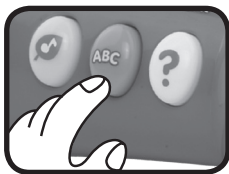

5. Press the **question button** in the play mode to hear a question, turn the turning ring to answer the question. The related light will flash. In the flashlight mode the question button will play a sound response and the turning ring will light up in the related color.



6. Turn the **turning ring** so one of the animals is positioned in front of the pointer. In the play mode, you will hear the color or the animal identified or hear a fun phrase related to the animal. The lights will flash with the sound. Turn the ring while a melody is playing to hear the animal sound play over the melody. In the flashlight mode, you will hear a sound and the spinning ring will light up in the related color.





MELODY LIST:

1. Alphabet Song
 2. Farmer in the Dell
 3. Blow The Man Down
 4. Camptown Races
 5. Are You Sleeping?
 6. The Entertainer
 7. Goosey Goosey Gander
 8. Hickory Dickory Dock
 9. Froggy Went a Courtin'
 10. Down By the Riverside
 11. Glow Worm
 12. Oh! Susanna
 13. Polly Wolly Doodle
 14. Old MacDonald Had a Farm
 15. Lazy Mary Will You Get Up?
- 


SUNG SONG LYRICS

SONG 1

I like to explore, there's lots for me to see.
Turn on my light and we'll go on an adventure.

SONG 2

A, B, C, D, E, F, G.
Come along, explore with me.





CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Interrupt the power supply by removing the batteries.
2. Let the unit stand for a few minutes, then replace the batteries.
3. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.







Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help



THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.
CAN ICES-3 (B)/NMB-3(B)



Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



vtech[®]

PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

Register your product online at vtechkids.com/warranty.

91-003166-005 ©