


**vtech**<sup>®</sup>

**User's Manual**

**Flipsies**

# **Sandy's House & Ocean Cruiser**



© 2015 VTech  
Printed in China  
91-003081-001 

*Dear Parent,*

*Welcome to the world of **Flipsies™**! We're so glad you and your little one are able to dream with us and experience everything the **Flipsies™** have to offer! These dolls were designed to offer an engaging two-in-one experience with endless ways to play and dream.*

*The **Flipsies™** are collectible dolls and playsets (each sold separately) that come to life with **MagicPoint™** technology. Each doll is programmed with special phrases that bring out each **Flipsies™** doll's personality and reacts to the **MagicPoint™** on the playsets. Each set also transforms to a completely different toy allowing children to live out their dreams and engage in imaginative role play.*

*Let your dreams shine with **Flipsies™**!*

*Sincerely,*

*Your friends at **VTech®***

 
*For more **Flipsies™** fun go to [flipsies.com](http://flipsies.com) to learn all about the **Flipsies™**, play games, do fun activities, watch videos and more!*

*To learn more about **VTech®** toys, visit [www.vtechkids.com](http://www.vtechkids.com)*

# INTRODUCTION


Hooray! Thanks for purchasing the **Flipsies™ Sandy's House & Ocean Cruiser!**

Let your dreams shine with **Flipsies™ Sandy's House & Ocean Cruiser!** This 2-in-1 playset transforms from a house where Sandy lives, into an ocean cruiser so she can live out her dream of being a marine biologist.

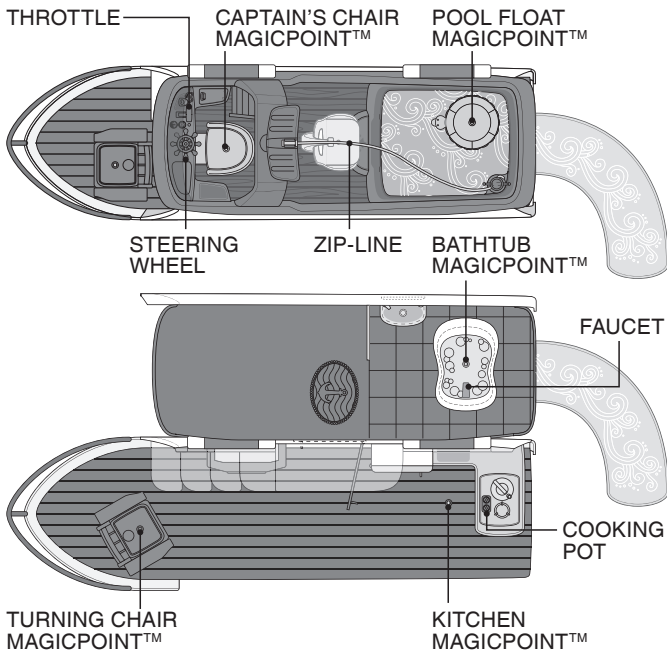


# INCLUDED IN THIS PACKAGE

 
- One Flipsies™ Sandy doll

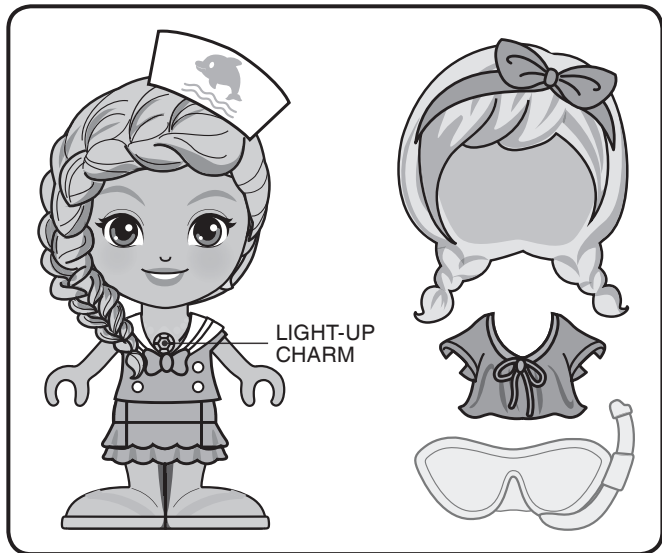


- DOLPHIN, HARNESS, LIFEBOAT

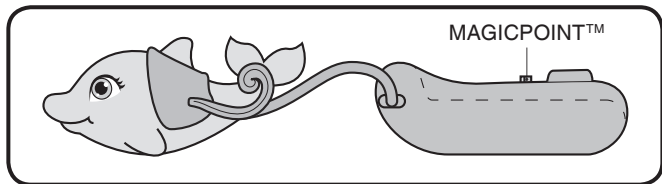 


- DINING TABLE

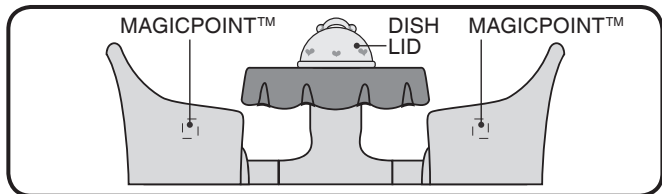 


- BED

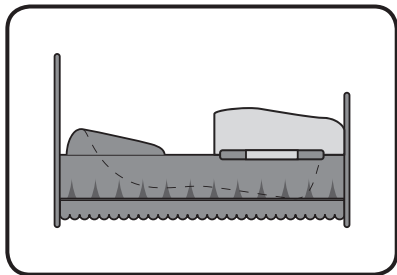 


- ZIP LINE

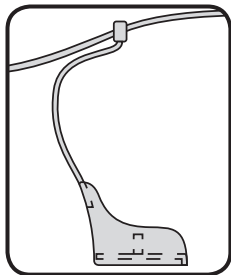 

- PLAY ACCESSORIES

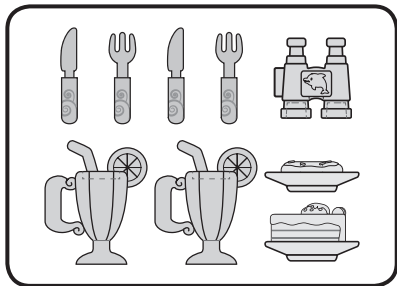 

- WARDROBE

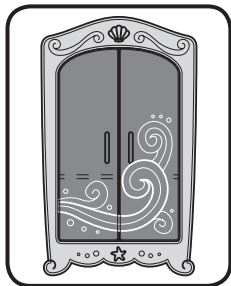 

- One **Flipsies™ House & Ocean Cruiser**
- One label sheet
- User's manual

**WARNING:**

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

**ATTENTION:**

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:**

Please keep this user's manual as it contains important information.



**WARNING:**

**CHOKING HAZARD**—small parts.  
Not for children under 3 yrs.



 
**ATTENTION:**

**Danger d'étouffement** — petits éléments.  
Ne convient pas aux enfants de moins de 3 ans.

# GETTING STARTED

## BATTERY INSTALLATION


1. Locate the battery cover on the back of the doll's head. Use a screwdriver to loosen the screw.
2. Install 3 new button cell batteries (LR44) following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
3. Replace the battery cover and tighten the screw to secure.

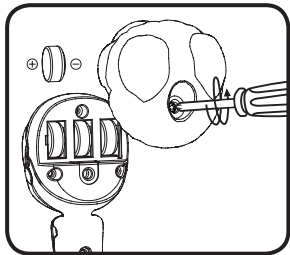

## BATTERY NOTICE


- Use three LR44 alkaline button cell batteries only for this toy.
- The button cell batteries used with this product should be kept away from small children who might still put things in their mouths. If the button cell batteries are swallowed, consult a doctor immediately.
- Insert the button cell batteries with the correct polarity.
- Do not use damaged button cell batteries.
- Do not short-circuit the button cell battery terminals.
- Remove exhausted button cell batteries from the product.
- Remove button cell batteries during long periods of non-use.
- Do not dispose of button cell batteries in fire.
- Do not charge non-rechargeable button cell batteries.
- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
 
# LABEL INSTRUCTIONS

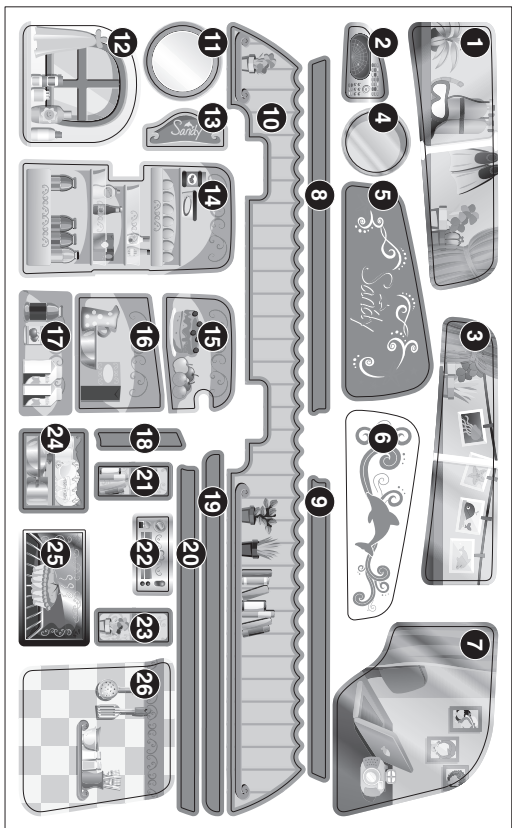



 
Please attach the labels to the playset securely as indicated below:

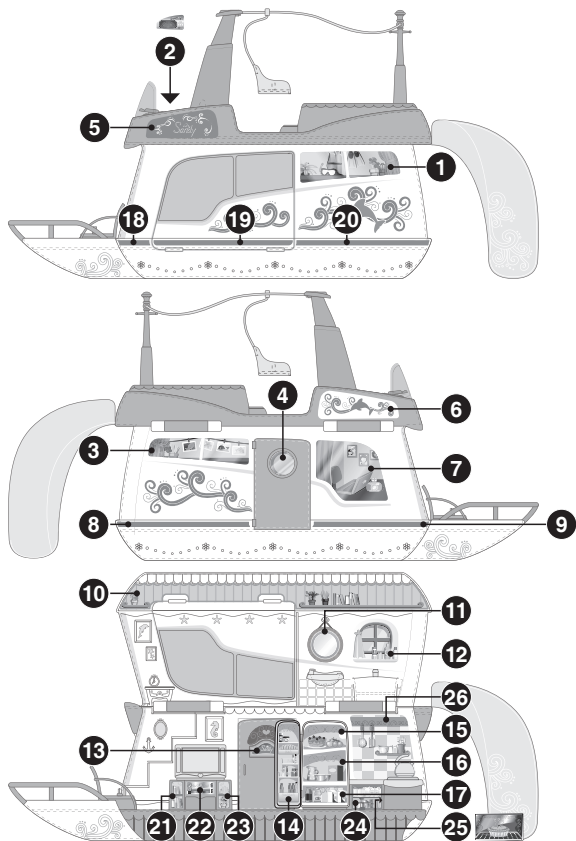

# ASSEMBLY INSTRUCTIONS

With the **Flipsies™ Sandy's House & Ocean Cruiser**, safety comes first. To ensure your child's safety, adult assembly is required.

 Insert the pieces as the arrows indicate.

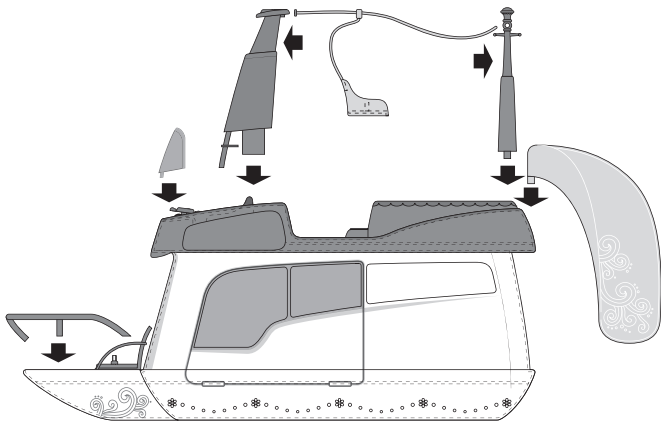

## PRODUCT FEATURES

### LIGHT-UP CHARM

Press the **LIGHT-UP CHARM** located on Sandy's necklace to hear her introduce herself with fun phrases. The **LIGHT-UP CHARM** will flash with the sounds.



 
### AUTOMATIC SHUT-OFF

To preserve battery life, the **Flipsies™** doll will automatically power down after one minute of no input. The doll can be turned on again by pressing the **LIGHT-UP CHARM** or placing it on a **MagicPoint™** location.


**Note:** The light-up charm button will flash and the unit will turn off automatically when the batteries are very low.

## Ocean Cruiser Mode


1. Place your **Flipsies™** doll on the **CAPTAIN'S CHAIR** or **POOL FLOAT MagicPoint™** on the ocean cruiser to see her charm flash and to hear fun phrases and sounds.

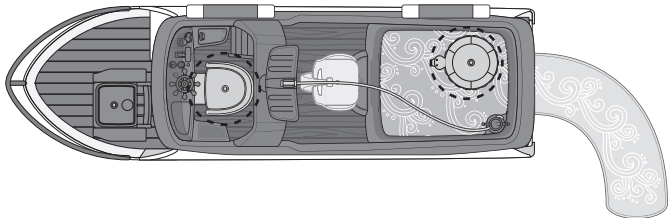

 
2. Turn the **POOL FLOAT** to hear a fun sound and phrases after placing your **Flipsies™** doll on the **POOL FLOAT MagicPoint™**.

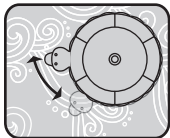

 3. Press the **STEERING WHEEL** to hear a fun sound and phrases after placing your **Flipsies™** doll on the **CAPTAIN'S CHAIR MagicPoint™**.


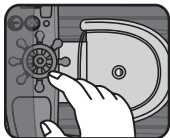


 4. Slide the **THROTTLE** to hear a fun sound and phrases after placing your **Flipsies™** doll on the **CAPTAIN'S CHAIR MagicPoint™**.

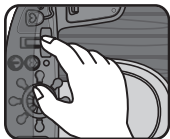


## House Mode

  
1. Place your **Flipsies™** doll on the **BATHTUB** or **KITCHEN MagicPoint™** in the house to see her charm flash and to hear fun phrases and sounds.

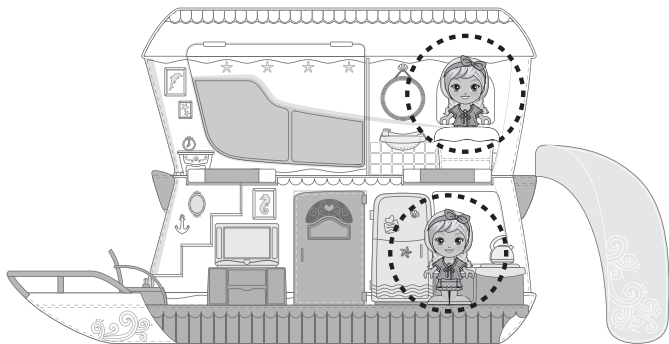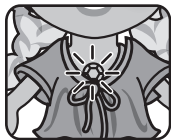

 2. Press the **FAUCET** to hear a fun sound and phrases after placing your **Flipsies™** doll on the **BATHTUB MagicPoint™**.

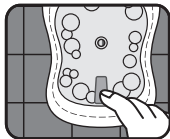


 3. Press the **COOKING POT** to hear a fun sound and phrases after placing your **Flipsies™** doll on the **KITCHEN MagicPoint™**.

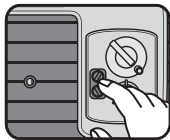


## Dining Table

 
1. Place your **Flipsies™** doll on the **DINING TABLE MagicPoint™** to see her charm flash and to hear fun sounds and phrases.

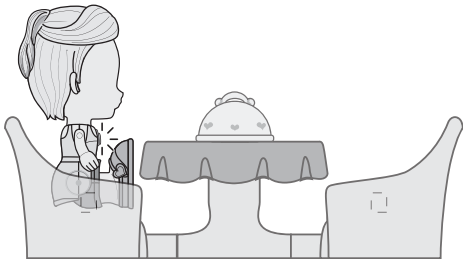

 When two dolls are placed on the **MagicPoint™** locations at the **DINING TABLE**, they will have a conversation with each other. (Additional dolls are sold separately.)

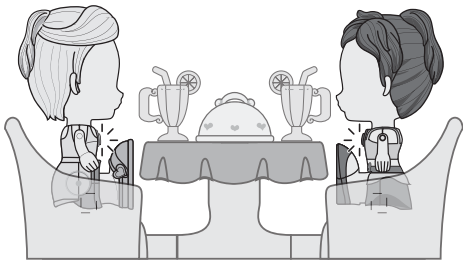


 2. Open the **DISH LID** to hear a fun sound and phrases.

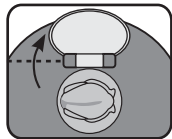

## Turning Chair

 
1. Place your **Flipsies™** doll on the **TURNING CHAIR MagicPoint™** to see her charm flash and to hear fun sounds and phrases in house and ocean cruiser modes.

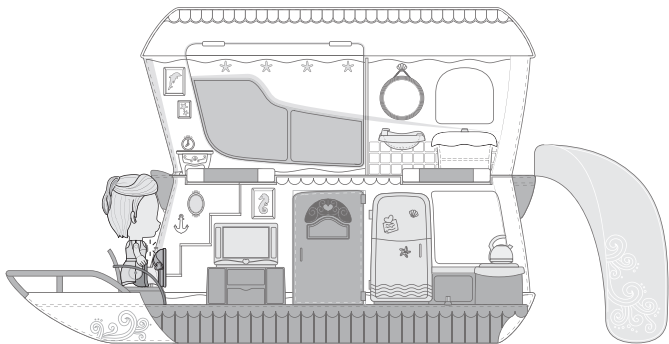

2. Turn the **TURNING CHAIR** towards the TV to see it light-up and hear fun sounds and phrases.
3. Turn the **TURNING CHAIR** towards the ocean to hear fun sounds and phrases.

## Lifeboat

 
1. Place your **Flipsies™** doll on the **LIFEBOAT MagicPoint™** to see her charm flash and to hear a fun sound and phrases.

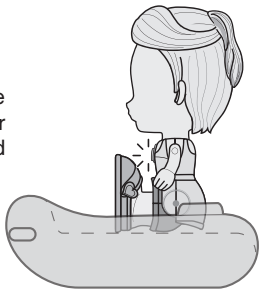


# HOW TO TRANSFORM FROM OCEAN CRUISER TO HOUSE

Remove the slide and lift the ocean cruiser's side to transform into the house, then replace the slide.

 1. Ocean cruiser mode.

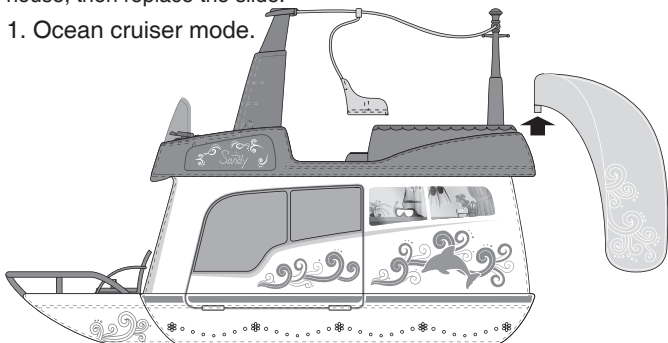

 2. House mode.

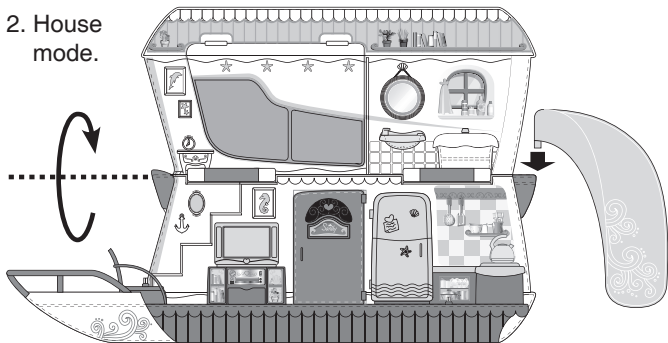

**Note:** To change the house back into an ocean cruiser, reverse the order of the steps above.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions while playing with the **MagicPoint™** playset, please remove the doll from the playset and place the doll back onto the **MagicPoint™**.

If the unit still does not function, or if for some reason the unit stops working or malfunctions on its own, please follow these steps:

1. Interrupt the power supply by removing the batteries.
2. Let the doll stand for a few minutes, then replace the batteries. The unit should now be ready to play again.
3. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

### IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.



## NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*



## PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to [vtechkids@vtechkids.com](mailto:vtechkids@vtechkids.com) or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

**THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.**

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.