

vtech[®]

Parent's Guide


Cutie Paws Puppy Stroller™



91-003536-003 

INTRODUCTION

Thank you for purchasing the **VTech® Cutie Paws Puppy Stroller™**. Little ones can place the adorable plush puppy in the stroller and take it for a walk. The stroller features an adjustable canopy with attached flip book for extra play, while the tray on the handle holds the accessories.

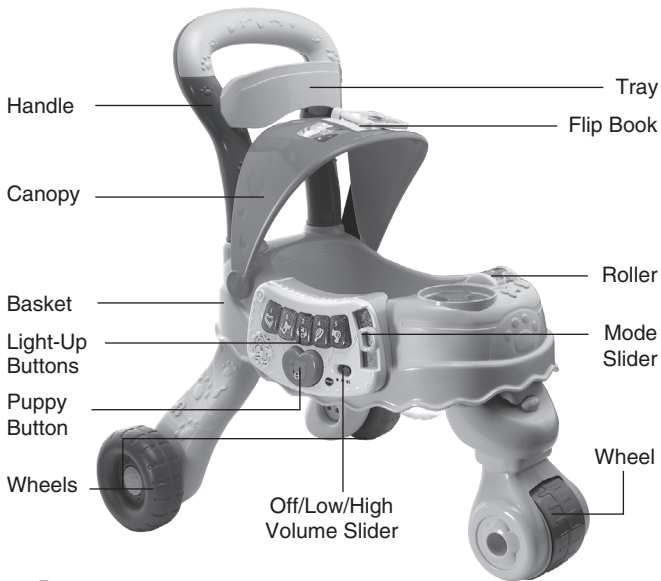

Puppy



Hair Dryer



Brush



Shampoo



Food Bowl



INCLUDED IN THIS PACKAGE

- One plush puppy with removable bandana




- One electronic panel



- One handle



- One tray

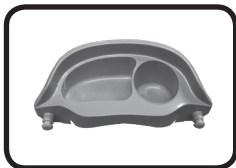


- One basket



- One canopy



- One front wheel

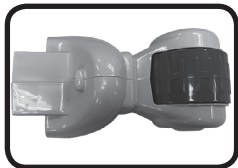

- Two rear wheels



- One hair dryer




- One shampoo bottle




- One food bowl



- One brush

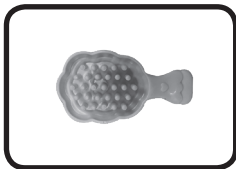

- One label sheet

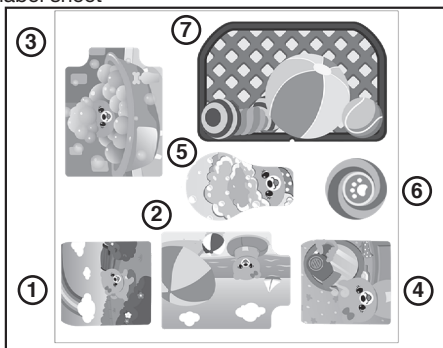

- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

Adult assembly required.



Ce jouet doit être assemblé par un adulte.

Remove the Cable Ties:


There are two cable ties on the puppy. Use a pair of scissors to cut these cable ties.

1. One is located at the back of the puppy's head.
2. One is located at the bottom of the puppy's feet.

WARNING: The cable ties are not part of this toy and should be removed and discarded for your child's safety.

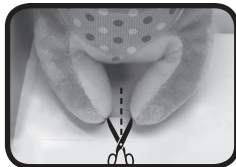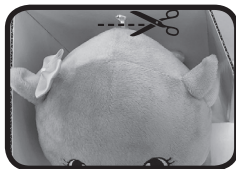

Unlock the packaging lock on the electronic panel:

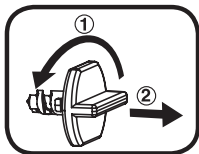


To unlock the packaging lock on the electronic panel:


- ① Rotate the packaging lock 90 degrees counterclockwise.
- ② Pull out the packaging lock.

GETTING STARTED


BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Use a screwdriver to loosen the screw and open the battery cover.

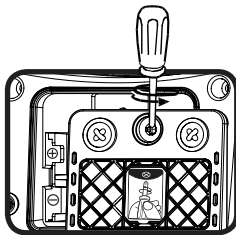

- 
4. Install 2 new AA (AM-3/LR6) batteries into the battery box as illustrated. (The use of new, alkaline batteries is recommended for maximum performance.)
 5. Replace the battery cover and tighten the screw to secure.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
 - Use only batteries of the same or equivalent type as recommended.
 - Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
 - Do not use damaged batteries.
 - Insert batteries with the correct polarity.
 - Do not short-circuit the battery terminals.
 - Remove exhausted batteries from the toy.
 - Remove batteries during long periods of non-use.
 - Do not dispose of batteries in fire.
 - Do not charge non-rechargeable batteries.
 - Remove rechargeable batteries from the toy before charging (if removable).
 - Rechargeable batteries are only to be charged under adult supervision.
- 


ASSEMBLY INSTRUCTIONS

With the **VTech® Cutie Paws Puppy Stroller™**, safety comes first. To ensure your child's safety, adult assembly is required.




STEP 1 WHEELS

1. Each leg matches to one of the mounting holes on the bottom of the basket. Slide the leg wheel into its matching hole.
2. Push the wheels to be sure they are securely in place. The wheels will click into place when properly inserted.

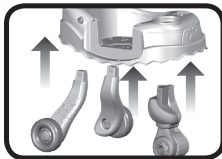


STEP 2 HANDLE

Slide the two sides of the handle into the mounting holes on the back of the basket. You will hear the handle click into place when properly inserted. If the handle is inserted in the wrong direction, it can't slide in.

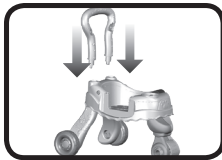


STEP 3 CANOPY

Slide the canopy into the mounting holes on the rear sides of the basket. You will hear it click into place when properly inserted.

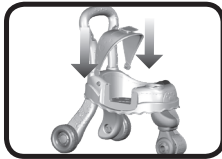

STEP 4 TRAY ON THE HANDLE

Slide the brackets of the tray into the mounting holes on the sides of the handle. You will hear the tray click into place when properly inserted.

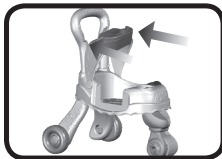



STEP 5 ELECTRONIC PANEL

Slide the electronic panel into the bracket on the right side of the stroller basket.




LABEL APPLICATION

Labels have been added so you can customize your **Cutie Paws Puppy Stroller™**. Please securely adhere the labels to the stroller and accessories as indicated below.

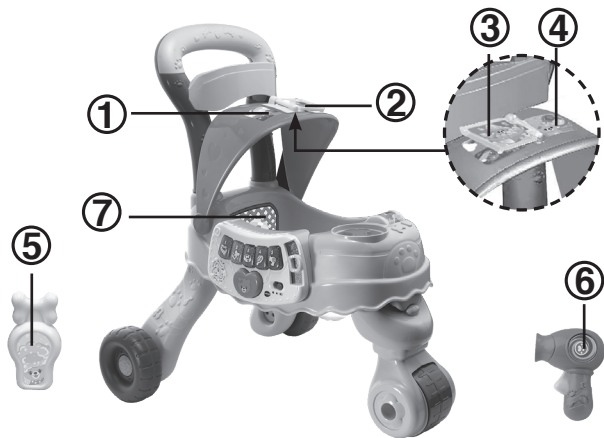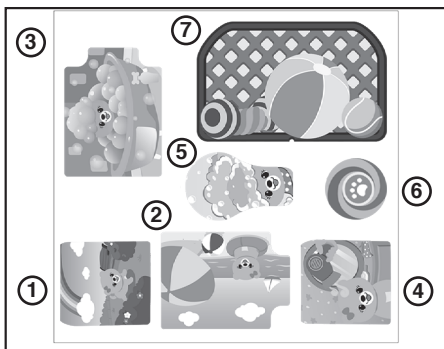


PRODUCT FEATURES - ELECTRONIC PANEL

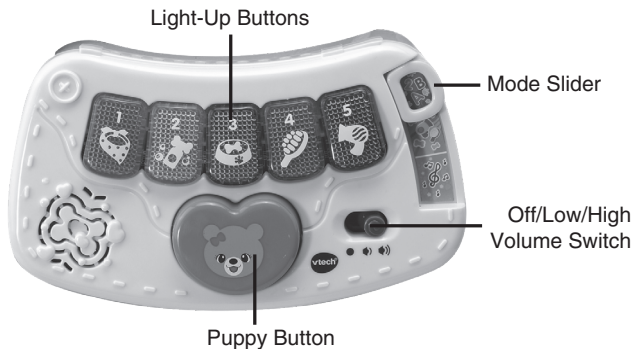

1. Off/Low/High Volume Switch

To turn the unit **ON**, slide the **Off/Low/High Volume Switch** to the **High Volume** (🔊) or **Low Volume** (🔊) position. You will hear a song. To turn the unit **OFF**, slide the **Off/Low/High Volume Switch** to the **Off** (🔇) position.

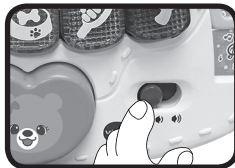

2. Mode Slider

Slide the **Mode Slider** to select one of three modes: Learning Mode, Role-Play Mode or Music Mode.



3. Light-Up Buttons

Press the **Light-Up Buttons** to hear colors, letter sounds, numbers, counting, how to take care of Puppy, or to create your own music.



4. Puppy Button

Press the **Puppy Button** to hear quiz questions in Learning and Role-Play Modes, or to hear sing-along songs in Music Mode.



5. Automatic Shut Off

To preserve battery life, the **Cutie Paws Puppy Stroller™** will automatically power down after several minutes without input. The unit can be turned on again by moving the **Mode Slider** to any mode or by moving the **Off/Low/High Volume Slider** to **Low Volume** or **High Volume** position.

Note: If the unit powers down while playing, we suggest changing the batteries.

MODES:

Mode 1: Learning Mode

Move the **Mode Slider** to the top position to enter this mode. Press one of the **Light-Up Buttons** to learn letter sounds, numbers, counting and colors. Press the **Puppy Button** to quiz yourself about what you heard.

Activity 2: Role-Play Mode



Move the **Mode Slider** to the middle position to enter this mode. Press one of the **Light-Up Buttons** to learn how to take care of the puppy by feeding her or dressing her up. Press the **Puppy Button**, then follow the instructions to choose an accessory to take care of Puppy.

Activity 3: Music Mode



Move the **Mode Slider** to the bottom position to enter this mode. Press the **Light-Up Buttons** to create a song with the puppy. Press the **Puppy Button** to hear sing-along songs. When a sing-along song or a melody is playing, press the **Puppy Button** to hear the puppy sing.

SONG LYRICS

Song 1: Original Tune

We're strolling in the stroller, heading to the park!
Puppy's so excited, she gives a happy bark!
When we're there, we love to play catch!
Puppy is my best friend, we're a perfect match!

Song 2: Original Tune

Scrub, scrub, scrub, wash and dry my Puppy's hair.
Brush her fur and give her lots of care.
When Puppy is hungry, give her food to eat.
We'll have lots of cuddles, Puppy is so sweet!

Song 3: Oh Where, Oh Where Has My Little Dog Gone?

Where oh where should we stroll today?

I know! Some place we can play!

Woof-woof-woof-woof-woof-woof-woof-woof-woof-woof

Yay! That sounds fun, hooray!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CLASS 1
LED PRODUCT



**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

**Read our complete warranty policy online at
*vtechkids.com/warranty***



TM & © 2018 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003536-003 15