 


INTRODUCTION

Thank you for purchasing the Peppa Pig Scribbles & Sounds Doodle Board. This interactive doodle board and its three stencils are a great way to get started with drawing and writing skills. Your child can use the attached stylus to trace letters and objects. Encouraging phrases and interactions with Peppa and George add to the fun. Play with Peppa and learn your letters!

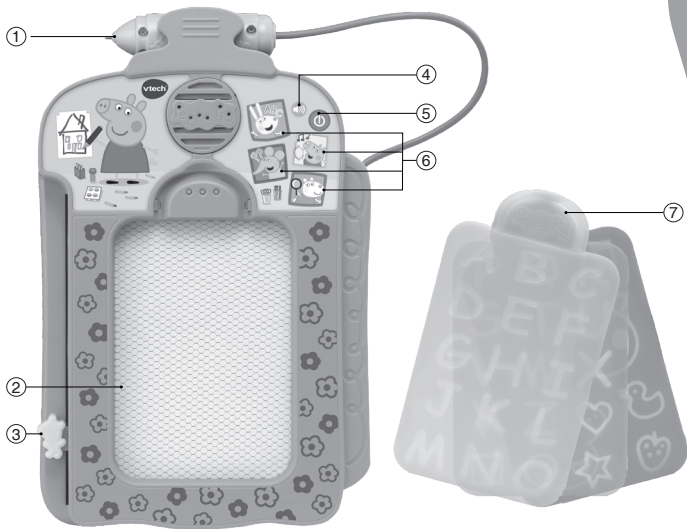

① Stylus

② Write and Erase Board

③ Slide Eraser

④ Volume Button

⑤ On/Off Button

⑥ Four Mode Buttons

⑦ Three Stencils

INCLUDED IN THIS PACKAGE

- One Peppa Pig Scribbles & Sounds Doodle Board
- Three stencils
- One parent's guide

 
WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

ATTENTION : Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

Unlock the packaging locks:

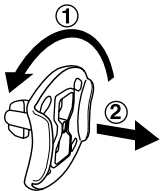


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned OFF
2. Locate the battery cover on the bottom of the unit.
3. Use a screwdriver to open the cover.
4. Install 2 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

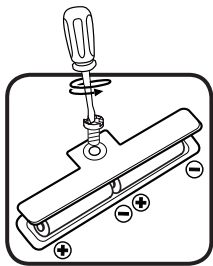

Note: If there is no response when the unit is switched on, please insert new batteries and try switching it on again.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. On/Off Button

Press the **On/Off Button**  to turn the unit **ON** and press it again to turn the unit **OFF**.



2. Volume Button

Press the **Volume Button**  to adjust the volume.



3. Four Mode Buttons

Press any **Mode Button** to choose a game.



4. Stylus

Use the **Stylus** to trace and draw.



5. Three Stencils

Put a **Stencil** in the drawing area to practice tracing letters and shapes.



6. Write and Erase Board

 
Use the **Stylus** to draw on the **Write and Erase Board**.



7. Slide Eraser

Move the **Slide Eraser** on the left side of the board to erase the drawing.

Note: For best results, write slowly on the Writing Board using the **Stylus**. Remove the writing by moving the **Slide Eraser** up and down.

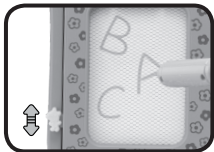

8. Automatic Shut Off

To preserve battery life, the unit will automatically power down after one minute without input. The unit can be turned **ON** again by pressing the **On/Off Button**.

ACTIVITIES

1. Alphabet Game



Peppa and Suzy Sheep love practicing the alphabet. Place a stencil in the drawing area to trace letters and shapes and to hear letter names and sounds.

2. Imagination Game



Play the imagination game with Peppa and George. Trace a letter to hear Peppa imagine a word that starts with that letter. Enjoy fun sound effects as you trace the letters and the shapes!

3. Music Time!



It's music time! Draw to keep the music playing. Music will play while you draw and will stop when you stop drawing.

4. Scavenger Hunt



Peppa and George are having a scavenger hunt. Put a stencil in the drawing area. Trace the correct letters and shapes to answer the questions.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

Trade Name:	VTech®
Model:	1980
Product name:	Scribbles & Sounds Doodle Board
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
Website:	vtechkids.com

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.
CAN ICES-3 (B)/NMB-3(B)

Visit our website for more
information about our products,
downloads, resources and more.

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty

