

**vtech**<sup>®</sup>


# Instruction Manual

## Animal Rhymes Storytime™



# INTRODUCTION

Thank you for purchasing the **Animal Rhymes Storytime™**. With every flip of the easy-to-turn pages, your child can explore forest and farm animals and the sounds they make. With a bright light-up button and colorful music button, your little one will be engaged as they learn about animals.

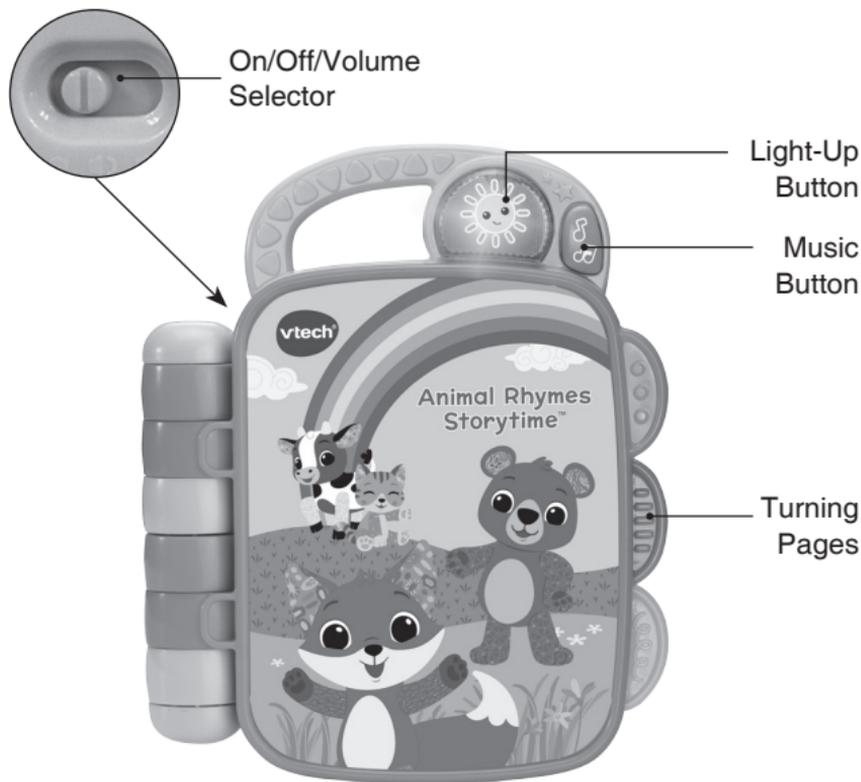

# INCLUDED IN THE PACKAGE

- Animal Rhymes Storytime™
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.


## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

## Unlock the packaging locks:

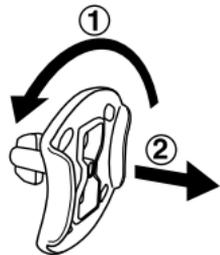


- ① Turn the packaging locks 90 degrees counterclockwise several times.
- ② Pull out and discard the packaging locks.

# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the book, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

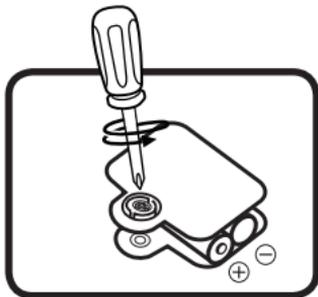

### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.

- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.


### RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## PRODUCT FEATURES

### 1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low volume  or High volume  position. You will hear a sound, a phrase and a song. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off**  position.

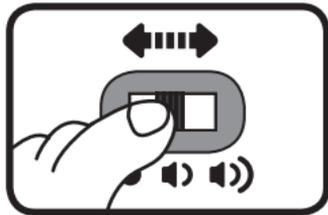

### 2. Automatic Shut-Off

To preserve battery life, the **Animal Rhymes Storytime™** will automatically power down after approximately 35 seconds without input. The unit can be turned on again by pressing any button or turning the book pages.


### NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

# ACTIVITIES


## 1. Light-Up Button

When the book is closed, press the **Light-Up Button** to hear a phrase, a short tune and a sound. When the book is open, learn about animals and hear animal sounds. The light will flash with the sound.

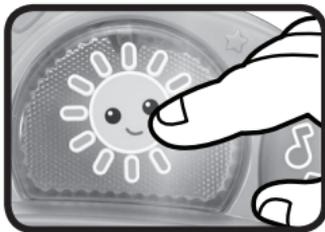

## 2. Music Button

Press the **Music Button** to hear music, fun sounds and short tunes. The light will flash with the sound.

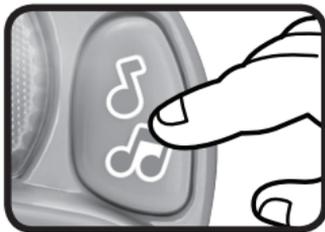

## 3. Turning Book Pages

Turn the **Pages** to hear animal songs related to the graphics on the pages as well as open-ended questions, short tunes and animal sounds. Close the book to hear a rainbow song or a short tune. The light will flash with the sound.



## MELODIES

1. Did You Ever See a Lassie?
2. A-Tisket, A-Tasket
3. Twinkle, Twinkle Little Star
4. Ride a Cockhorse to Banbury Cross
5. Yankee Doodle
6. Sailing, Sailing
7. Teddy Bears' Picnic
8. Boys and Girls Go Out to Play
9. Listen To the Mockingbird
10. Bicycle Built for Two
11. Happy Farmer
12. Old MacDonald Had a Farm
13. Hey, Diddle Diddle
14. Pussy Cat, Pussy Cat
15. Little Bo Peep

## SONG LYRICS

### Song 1

Let's sing the colors of the rainbow,  
Red, orange, yellow, green, blue and purple.

### Song 2

Row, row, row the boat,  
Down the forest stream.  
Look thru the trees, what do you see?  
It's a big brown bear.

### Song 3

Row, row, row the boat,  
Down the forest stream.  
Look thru the trees, what do you see?  
It's a quick red fox.

### **Song 4**

Row, row, row the boat,  
Down the forest stream.  
Look thru the trees, what do you see?  
It's a tall brown fawn.

### **Song 5**

Row, row, row the boat,  
Down the forest stream.  
Look thru the trees, what do you see?  
It's a smart blue owl.

### **Song 6**

There is a farmer who has a dog,  
And Bingo is its name-o.  
Woof-woof-woof-woof-woof,  
Woof-woof-woof-woof-woof,  
Woof-woof-woof-woof-woof,  
And Bingo is its name-o.

### **Song 7**

There is a farmer who has a cow,  
And Bingo is its name-o.  
Moo-moo-moo-moo-moo,  
Moo-moo-moo-moo-moo,  
Moo-moo-moo-moo-moo,  
And Bingo is its name-o.

### **Song 8**

There is a farmer who has a cat,  
And Bingo is its name-o.  
Meow-meow-meow-meow-meow,  
Meow-meow-meow-meow-meow,  
Meow-meow-meow-meow-meow,  
And Bingo is its name-o.

## Song 9

There is a farmer who has a sheep,  
And Bingo is its name-o.  
Baa-baa-baa-baa-baa,  
Baa-baa-baa-baa-baa,  
Baa-baa-baa-baa-baa,  
And Bingo is its name-o.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

**IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

**NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®  
Model: 5678  
Product name: Animal Rhymes Storytime™  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

