

# **User's Manual**



Blast-Off Space Station™



# Dear Parent,

Welcome to the world of **Go! Go! Smart Wheels**®! We're excited you've decided to ride along with us and explore all that **Go! Go! Smart Wheels**® has to offer. These toys have been designed to give your child a thrilling learning experience with hours and hours of fun as well.

Go! Go! Smart Wheels® features vehicles that interact with your child by lighting up, singing and talking, while teaching your child letters and vehicle names (each sold separately). There are other surprises in store, too! With our innovative SmartPoint® technology, available on Go! Go! Smart Wheels® playsets (each sold separately), your child will smile as they hear SmartPoint® vehicles respond to each unique SmartPoint® location with singing, sound effects and fun phrases.

Our Go! Go! Smart Wheels<sup>®</sup> playsets also feature buttons, gears and other mechanical features to encourage the development of your child's fine motor skills. Many of the playsets also have tracks that can be arranged in endless ways, stimulating your child's creativity. In addition, all the Go! Go! Smart Wheels<sup>®</sup> playsets connect to other playsets in the collection, so there's no end to what your child can do!

With Go! Go! Smart Wheels®, it's playtime with miles of learning™!


Sincerely, Your friends at **VTech**®

To learn more about **VTech**® toys, visit vtechkids.com

# INTRODUCTION

Thank you for purchasing the VTech® Go! Go! Smart Wheels® Blast-Off Space Station™ learning toy!

Play and learn with the Go! Go! Smart Wheels® Blast-Off Space Station™. This interactive Blast-Off Space Station™ makes learning fun.

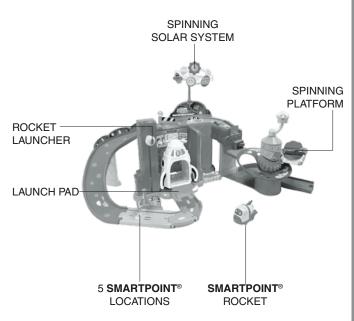

# **INCLUDED IN THIS PACKAGE**



One SmartPoint® rocket



One spiral platform



One space ramp



One **SmartPoint**® spinning tower piece



One star handle



One SmartPoint® exit track



One platform base



One **SmartPoint**® blast-off paltform



One galaxy wheel



One galaxy support One big wall One sun One small wall One switch gate One flag



One ¼ straight track, male One 60-degree track, female

One 60-degree track, male One **SmartPoint**® straight track



One snap-in medium ramp support One snap-in large ramp support One snap-in small ramp support One base support



Two spiral ramp tracks
One SmartPoint® U-shape track



Two label sheets User's manual

#### WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

#### ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

#### NOTE:

Please keep this user's manual as it contains important information.



# **CAUTION:**

Adult assembly required. For your child's safety, do not let your child play with the toy until it is fully assembled.

#### Unlock the packaging locks:

 


- Turn the packaging lock counter-clockwise several times.
- 2 Pull out and discard the packaging lock.

## **GETTING STARTED**

#### **BATTERY INSTALLATION – ROCKET**


- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the rocket. Use a coin or a screwdriver to loosen the screw.
- Install two new "AAA" (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure the battery cover.




#### **BATTERY NOTICE**

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- · Do not short-circuit the battery terminals.
- · Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

# Please adhere the labels to the playset securely as indicated on the following pages below:

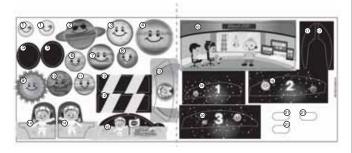

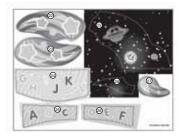

# LABEL INSTRUCTIONS

































































 


















































































8

## **ASSEMBLY INSTRUCTIONS**

With the VTech® Go! Go! Smart Wheels® Blast-Off Space Station™, safety comes first. To ensure your child's safety, adult assembly is required.

 Put the BLAST-OFF PLATFORM on the ground and then insert the BLAST-OFF ROCKET LAUNCHER into the slots on the BLAST-OFF PLATFORM as shown below. You will hear a "click" sound to indicate the pieces are securely connected.



 Insert the SNAP-IN LARGE RAMP SUPPORT into the slots on U-SHAPE TRACK (the side with one slot). Next, insert the SWITCH GATE, BIG WALL and SMALL WALL into the slots on the other side of the U-SHAPE TRACK as shown below. You will hear a "click" sound to indicate the pieces are securely connected.





 Insert the SUN onto the GALAXY WHEEL. Then, insert the GALAXY SUPPORT into the BIG WALL and GALAXY WHEEL. Next, connect the U-SHAPE TRACK to the BLAST-OFF ROCKET LAUNCHER as shown below.







 Insert the SNAP-IN MEDIUM RAMP SUPPORT into the slot on the EXIT TRACK. Next, connect the U-SHAPE TRACK to the EXIT TRACK as shown below.





5. Insert the SPACE RAMP into the slots on the SPIRAL PLATFORM and put the SPINNING TOWER PEICE into the SPACE RAMP. Next, put the STAR CRANK HANDLE on the SPINNING PLATFORM column as shown below. You will hear a "click" sound to indicate the pieces are securely connected.





 Use the BASE SUPPORT to attach the BLAST-OFF PLATFORM and SNAP-IN MEDIUM RAMP SUPPORT as shown below. You will hear a "click" sound to indicate the pieces are securely connected.



Connect the EXIT TRACK to the SPACE RAMP as shown below. You will hear a "click" sound to indicate the pieces are securely connected.



Insert the SNAP-IN SMALL SUPPORT into the slot on the back of the SPIRAL RAMP TRACK. Then connect the two spiral ramp tracks as shown below.





Connect the SPIRAL RAMP TRACK to the U-SHAPE TRACK as shown below. You will hear a "click" sound to indicate the pieces are securely connected.



Once you've completed the above steps, you are ready to play! You
can connect this playset to other Go! Go! Smart Wheels® and Go!
Go! Smart Animals® tracks (each sold separately).



# **EXPAND & EXPLORE**

 
Connect to the Go! Go! Smart Wheels® Deluxe Track Set or other Go! Go! Smart Wheels® and Go! Go! Smart Animals® tracks (each sold separately) to expand the Blast-Off Space Station™ and inspire creativity.



## PRODUCT FEATURES - ROCKET

#### 1. ON/OFF SWITCH

To turn the unit **ON**, slide the **ON**/ **OFF SWITCH** to **ON** ( **( ( ( )** ) position. To turn the unit **OFF**, slide the **ON**/ **OFF SWITCH** to **OFF** ( **( ( ( )** ) position.




#### 2. AUTOMATIC SHUT-OFF

To preserve battery life, the rocket will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing the light-up button or pushing the rocket quickly.

Note: This product is in try-me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play. If the unit repeatedly powers down quickly or the light-up button fades out, we suggest changing the batteries.

## **ACTIVITIES - ROCKET**

  Slide the ON/OFF SWITCH to the ON position to turn the unit ON. You will hear a song, a phrase and sounds. The light will flash with the sounds.



Press the LIGHT-UP BUTTON to hear rocket sounds, songs and phrases. The light will flash with the sounds.



 Push the rocket to hear fun sounds and melodies. While the melody is playing, push the vehicle again to add fun sounds on top of the melody. The light will flash with the sounds.



4. For added fun, the rocket interacts with the Go! Go! Smart Wheels® Blast-Off Space Station™. Simply roll or put the rocket on one of the playset's SmartPoint® locations to hear the rocket play sounds, short tunes and phrases. The rocket even interacts with other Go! Go! Smart Wheels® and Go! Go! Smart Animals® tracks (Each sold separately).



# PRODUCT FEATURES - BLAST-OFF SPACE STATION™

#### 1. SMARTPOINT® LOCATIONS

The Blast-Off Space Station™ includes five SmartPoint® locations that interact with the included rocket or any other Go! Go! Smart Wheels® SmartPoint® vehicle (each sold separately). Simply roll or place the vehicle over a SmartPoint® location to hear fun sounds, phrases and music.



# ACTIVITIES - BLAST-OFF SPACE STATION™

- Place a vehicle on the blast-off rocket launcher and pull the lever on the launcher down to launch the vehicle onto the second floor.
- After launching to the second floor, the vehicle will either descend down the ramp to the base or roll past the galaxy on the second floor platform, depending on the direction of the switch gate.





3. Spiral through the space hole with the vehicle. With the vehicle at the gate, turn the star crank. Once the space hole platform reaches the gate, the gate will open and the vehicle will roll on the platform. Continue to turn the crank and watch as the vehicle spirals towards the hole and down the ramp.



# **CARE & MAINTENANCE**

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

#### **TROUBLESHOOTING**

If for some reason the unit stops working, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

#### **IMPORTANT NOTE:**

Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

#### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)



#### PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service.

against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our web site at www.vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.