

**vtech**<sup>®</sup>  
Baby

# Parent's Guide

 
## On-the-Go Baby Driver™



# INTRODUCTION

Thank you for purchasing the **VTech® On-the-Go Baby Driver™**.

Drive into the fun zone! This bright and colorful baby driver allows little ones to cruise to the music as they pretend they are driving a car like mom and dad. With realistic sounds, a fabric steering wheel, gear shift, turn signal, ignition key, horn and mirror, the driver is sure to stimulate your little one and promote imaginative play. The cute light-up car button plays lots of fun and interactive car sounds. Attach the straps to your stroller for on-the-go fun!

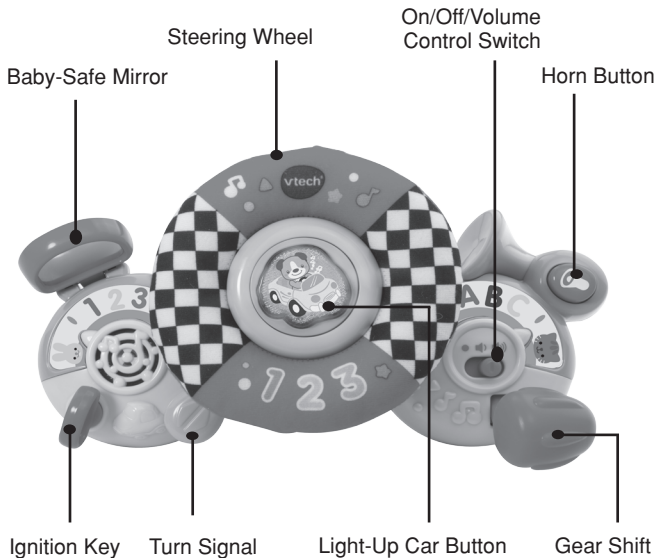

# INCLUDED IN THIS PACKAGE

 
- One **On-the-Go Baby Driver™**
- One parent's guide

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

**ATTENTION:** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

**NOTE:** Please keep this parent's guide as it contains important information.

## Unlock the packaging locks

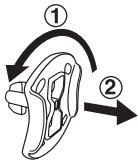


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks.

# GETTING STARTED
 
## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.

3. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

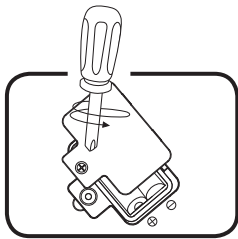

### BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.






### WARNING:

With the **VTech® On-the-Go Baby Driver™** safety comes first. To ensure your child's safety, adult assembly is required. Never use the **On-the-Go Baby Driver™** as a handle. Do not use in moving vehicles. Do not add additional strings or straps. Possible entanglement or strangulation injury when attached to cribs or playpens/play yards. Do not attach to cribs or playpens/play yards.

# PRODUCT FEATURES

## 1. On/Off/Volume Control Switch

To turn the unit **ON**, slide the **On/Off/Volume Control Switch** to the **Low Volume** (  ) or the **High Volume** (  ) position. You will hear a song, phrase and fun sound.

To turn the unit **OFF**, slide the **On/Off/Volume Control Switch** to the **OFF** (  ) position.



## 2. Infant Stroller Attachment

To attach the **On-the-Go Baby Driver™** to a stroller, locate the two straps on the back of the toy. Position the **On-the-Go Baby Driver™** on the baby hand bar. Using the straps on the back of the toy, fasten each side of the toy securely to the baby hand bar using the hook and loop closures, ensuring they are securely fastened.

## 3. Automatic Shut Off

To preserve battery life, the **On-the-Go Baby Driver™** will automatically power down after approximately 60 seconds without input. The unit can be turned on again by triggering any electronic function. Spinning the steering wheel will not turn the unit back on.

**NOTE:** If the unit powers down while playing, we suggest changing the batteries.

# ACTIVITIES

 
1. Spin the **Steering Wheel** to hear realistic car sound effects and imaginative phrases.




2. Press the **Light-Up Car Button** to hear realistic car sound effects mixed with playful dog barks, fun phrases, sing-along songs and melodies.




3. Push or pull the **Gear Shift** to learn about opposites through imaginative phrases, sounds and short tunes.

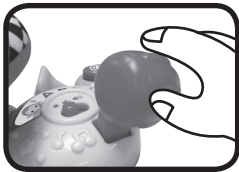

 4. Use the **Turn Signal** lever to hear realistic car sound effects, imaginative phrases and short tunes.

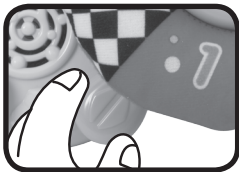

 5. Turn the **Ignition Key** to hear realistic car sound effects and imaginative phrases.
6. Press the **Horn Button** to hear a fun squeaking sound.
7. Flip up or down the **Baby-Safe Mirror** for self-discovery and to develop an awareness of object permanence.

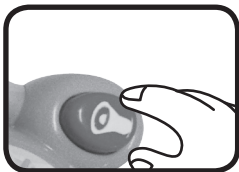

## SONG LIST

### SONG 1

Take the wheel,  
Let's see what you can do!

### SONG 2

Honk, honk,  
Beep, beep,  
Waving at everyone we meet.

### **SONG 3**

Turn right,

Turn left,

Driving around is the best!

### **SONG 4**

Speed up,

Slow down,

Safety first when driving round the town.

## **MELODY LIST**

1. The Alphabet Song
2. Animal Fair
3. BINGO
4. My Bonnie Lies Over the Ocean
5. London Bridge
6. Camptown Races
7. Row, Row, Row Your Boat
8. Pop! Goes the Weasel
9. Skip to My Lou
10. Teddy Bears' Picnic
11. The Farmer in the Dell
12. Three Blind Mice
13. Turkey in the Straw
14. Yankee Doodle
15. Froggie Went a Courtin'
16. Glow Worm
17. Hot Cross Buns



18. Old King Cole
19. Polly Put the Kettle On
20. Ring Around the Rosy

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

**IMPORTANT NOTE:**

Creating and developing **VTech**® products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



## PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our website at [vtechkids.com](http://vtechkids.com), filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***



TM & © 2017 VTech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003294-011 US