

vtech®

User's Manual

**Go!Go!  
Smart Wheels®**  
*Playtime with miles of learning!™*

**Learning Zone Construction Site™**



© 2015 VTech  
Printed in China  
91-003038-002 US



*Dear Parent,*

*Welcome to the world of **Go! Go! Smart Wheels**®! We're excited you've decided to ride along with us and explore all that **Go! Go! Smart Wheels**® has to offer. These toys have been designed to give your child a thrilling learning experience with hours and hours of fun as well.*

***Go! Go! Smart Wheels**® features vehicles that interact with your child by lighting up, singing and talking, while teaching your child letters and vehicle names (each sold separately). There are other surprises in store, too! With our innovative **SmartPoint**® technology, available on **Go! Go! Smart Wheels**® playsets (each sold separately), your child will smile as they hear **SmartPoint**® vehicles respond to each unique **SmartPoint**® location with singing, sound effects and fun phrases.*

*Our **Go! Go! Smart Wheels**® playsets also feature buttons, gears and other mechanical features to encourage the development of your child's fine motor skills. Many of the playsets also have tracks that can be arranged in endless ways, stimulating your child's creativity. In addition, all the **Go! Go! Smart Wheels**® playsets connect to other playsets in the collection, so there's no end to what your child can do!*

*With **Go! Go! Smart Wheels**®, it's playtime with miles of learning!*


*Sincerely,  
Your friends at **VTech**®*

*To learn more about **VTech**® toys, visit [vtechkids.com](http://vtechkids.com)*

# INTRODUCTION

Thank you for purchasing the **VTech® Go! Go! Smart Wheels® Learning Zone Construction Site™!**


Little construction workers will love exploring the **Go! Go! Smart Wheels® Learning Zone Construction Site™!** Pick up, sort and dump the three shape blocks with the excavator, crane tower and rock sorter. The horn has blown and it's time to get to work!

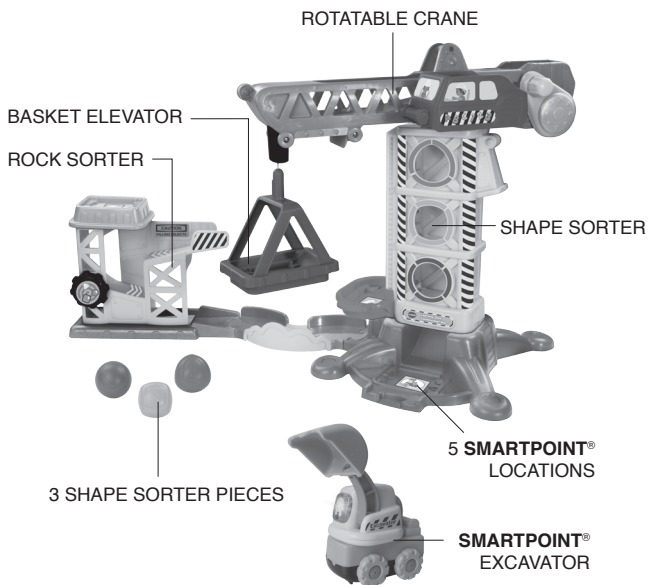

## INCLUDED IN THIS PACKAGE



One **SmartPoint**<sup>®</sup>  
excavator

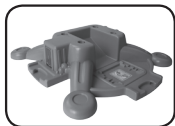


One tower base



One rock  
sorter base




One shape  
sorter tower

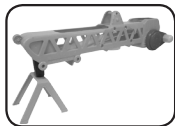

One crane



One rock sorter

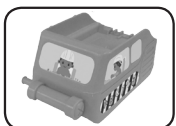

One **SmartPoint**<sup>®</sup>  
control platform



One **SmartPoint**<sup>®</sup>  
basket elevator base




One **SmartPoint**<sup>®</sup>  
tower elevator



One **SmartPoint**<sup>®</sup>  
unload platform



One rock  
sorter wheel

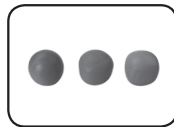

Three shape  
sorter pieces


INCLUDED IN THIS PACKAGE



Two 60-degree  
male track



One 90-degree  
female track

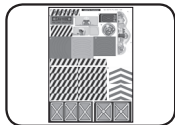

One label sheet

One user's manual

**WARNING:**

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

**ATTENTION:**

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:**


Please keep this user's manual as it contains important information.



**CAUTION:**

Adult assembly required. For your child's safety, do not let your child play with the toy until it is fully assembled.

Unlock the packaging locks:

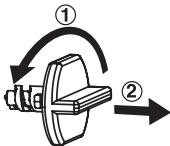


- ① Turn the packaging lock counter-clockwise several times.
- ② Pull out and discard the packaging lock.

INCLUDED IN THIS PACKAGE

# GETTING STARTED

## BATTERY INSTALLATION – EXCAVATOR

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the excavator. Use a screwdriver to loosen the screw.

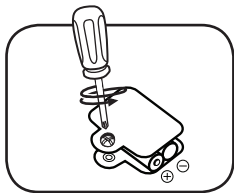


3. Install 2 new “AAA” (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.









## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Please adhere the labels to the playset securely as indicated on the following page:

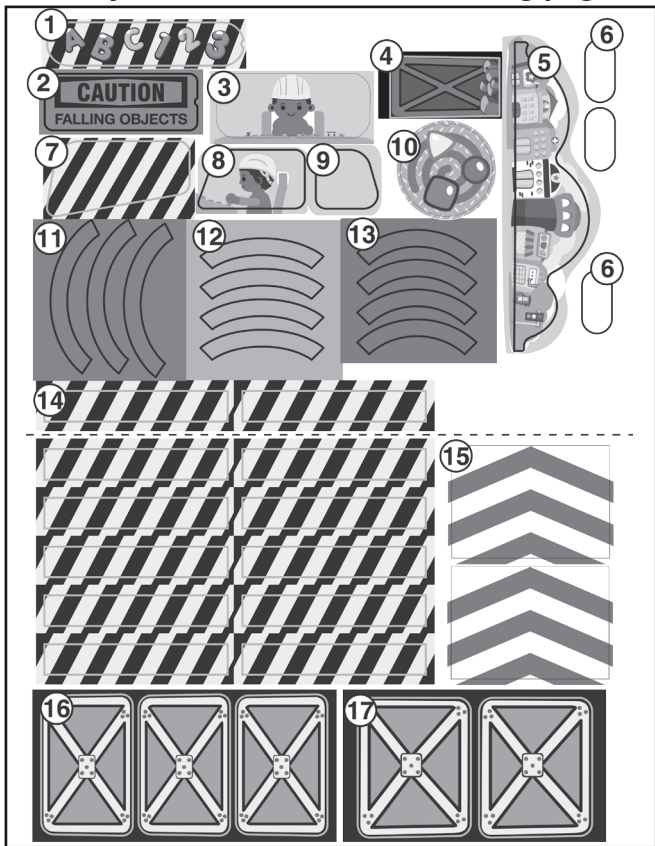

LABEL INSTRUCTIONS

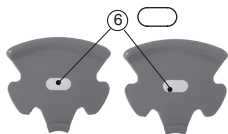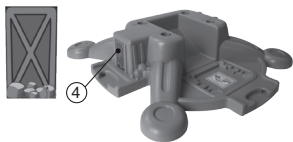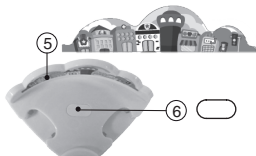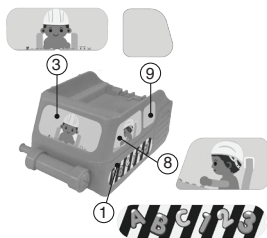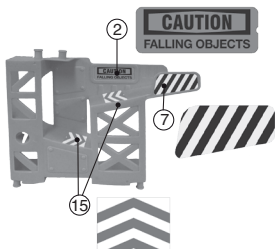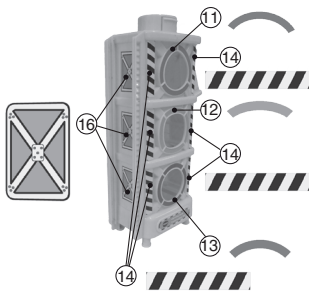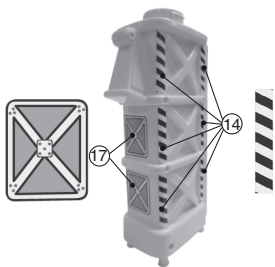

# LABEL INSTRUCTIONS




# ASSEMBLY INSTRUCTIONS

With the VTech® Go! Go! Smart Wheels® Learning Zone Construction Site™, safety comes first. To ensure your child's safety, adult assembly is required.


1. Insert the **SmartPoint®** tower elevator on the grooved side of the shape sorter tower.




2. Attach the shape sorter tower to the tower base as shown below. You will hear a “click” sound to indicate the shape sorter tower is secure. Once the shape sorter tower is connected to the tower base, it cannot be detached.

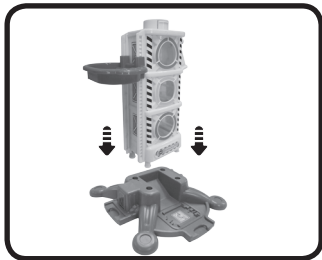


3. Insert the **SmartPoint**<sup>®</sup> control platform to the four open slots on the crane as shown below. You will hear a “click” sound to indicate the **SmartPoint**<sup>®</sup> control platform is secure. Once the **SmartPoint**<sup>®</sup> control platform is connected to the crane, it cannot be detached.

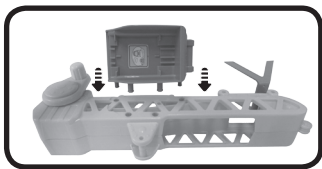


4. Connect the crane to the circular opening on top of the shape sorter tower as shown below. You will hear a “click” sound to indicate the crane is secure. Once the crane is connected to the shape sorter tower, it cannot be detached.

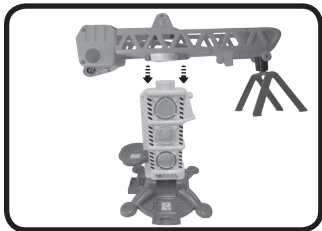


5. Insert the **SmartPoint**<sup>®</sup> basket elevator base into the four basket elevator supports as shown below. You will hear a “click” sound to indicate the **SmartPoint**<sup>®</sup> basket elevator base is secure. Once **SmartPoint**<sup>®</sup> basket elevator base is connected, it cannot be detached.

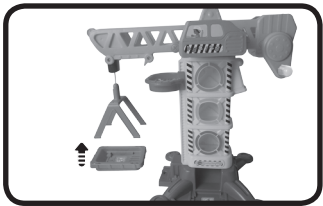


6. Attach the rock sorter to the rock sorter base as shown below. You will hear a “click” sound to indicate the rock sorter is secure. Once the rock sorter is connected to the rock sorter base, it cannot be detached.

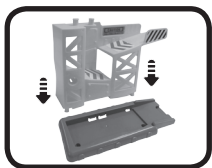

7. With the rock sorter connected to the rock sorter base, attach the **SmartPoint**® unload platform to the rock sorter as shown below. Then, attach the rock sorter wheel to the rock sorter. You will hear a “click” sound when each piece is connected. Once a piece is connected to the rock sorter, it cannot be detached.

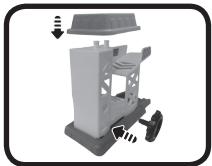


Once you've completed the above steps, you are ready to play! You can connect these pieces to the included track pieces or you can connect this playset to other **Go! Go! Smart Wheels**® and **Go! Go! Smart Animals**® playsets (each sold separately).

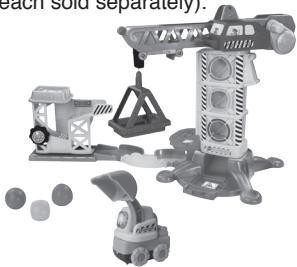

## EXPAND & EXPLORE


Connect to the **Go! Go! Smart Wheels® Deluxe Track Set** (as shown below) or other **Go! Go! Smart Wheels®** and **Go! Go! Smart Animals®** playsets (each sold separately) to expand the **Learning Zone Construction Site™** and inspire creativity.

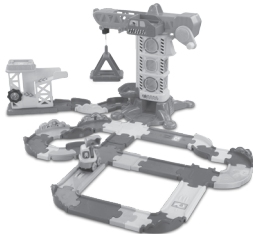

## PRODUCT FEATURES - EXCAVATOR

### 1. ON/OFF SWITCH

To turn the excavator **ON**, slide the **ON/OFF SWITCH** to the **ON** (⏻) position. To turn the excavator **OFF**, slide the **ON/OFF SWITCH** to the **OFF** (●) position.

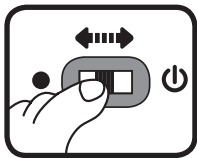


### 2. AUTOMATIC SHUT-OFF

To preserve battery life, the included excavator will automatically power-down after approximately 60 seconds without input. The unit can be turned on again by pressing the light-up driver button, pushing the excavator quickly or triggering a **SmartPoint®** location.


**Note:** This product is in try-me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play.

## ACTIVITIES - EXCAVATOR


1. Slide the **ON/OFF SWITCH** to the **ON** position to turn the excavator **ON**. You will hear excavator sounds, a song and a phrase. The light will flash with the sounds.

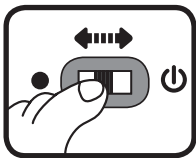

2. Press the **LIGHT-UP DRIVER BUTTON** to hear excavator sounds, songs and phrases. The light will flash with the sounds.

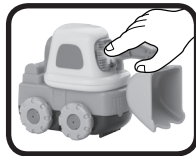

3. Push the excavator to hear fun sounds and melodies. While a melody is playing, push the excavator again to add in fun sounds on top of the melody. The light will flash with the sounds.

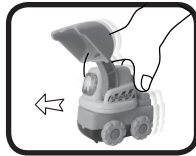


4. Move the excavator bucket and arm up and down. The excavator cab can also rotate back and forth.




5. For added fun, the excavator interacts with the **Go! Go! Smart Wheels® Learning Zone Construction Site™**. Simply place the excavator on one of the construction site's five **SmartPoints®** to see the excavator's light flash and to hear fun sounds, short tunes and phrases. The excavator even interacts with other **Go! Go! Smart Wheels®** and **Go! Go! Smart Animals®** playsets (each playset sold separately).

## ACTIVITIES – CONSTRUCTION SITE


1. Place the excavator or any **SmartPoint**<sup>®</sup> vehicle (each sold separately) on any of the construction site's five **SmartPoint**<sup>®</sup> locations to trigger fun sounds, songs or phrases.

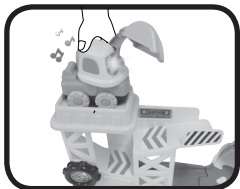


2. Lift objects on the crane basket elevator by turning the crane basket elevator crank.

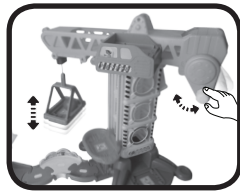


3. Move the crane back and forth to move objects from one area of the job site to another.

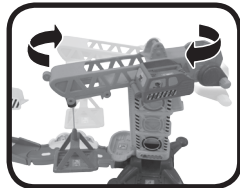


4. Drop objects off at the rock sorter, and watch them drop to the bottom.

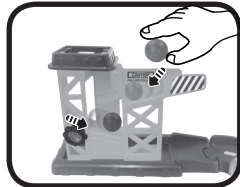


5. Place the excavator on the **SmartPoint**<sup>®</sup> crane tower elevator, and move up and down the crane tower.

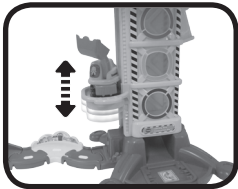

6. Place the excavator in the **SmartPoint**<sup>®</sup> control platform.

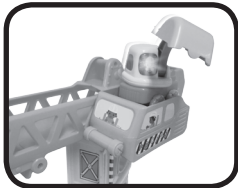

7. Insert the shape sorter pieces into the correct locations on the crane tower.

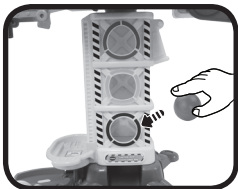

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.



## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you

For information on this product's warranty, please call **VTech**® at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

### IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.



**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIREED OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*



## PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to [vtechkids@vtechkids.com](mailto:vtechkids@vtechkids.com) or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase data and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

**THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.**

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.