BLUEY

vtech®

Instruction Manual

RING RING PHONE

LU DO

BBC STUDIOS

INTRODUCTION

Thank you for purchasing **Ring Ring Phone**! Let's play and chat with Bluey and Bingo. Kids can pretend to call their favorite pups and play games from the show. Let's do this!

On/Off Button

Microphone

10 Number Buttons

5 Activity & Feature Buttons

Left Button

OK Button

Phone Call Button

Bandit

Chilli

Bluey

Bingo

Chloe

Snickers

6 Character Buttons

Right Button

Cancel Call Button

Chat Button (with LED)

INCLUDED IN THE PACKAGE

• **Bluey Ring Ring Phone**

• Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

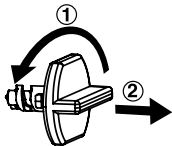Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.
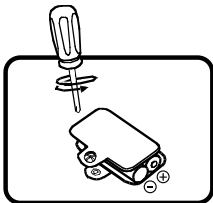
Unlock the Packaging Locks

① Turn the packaging lock counterclockwise several times.

② Pull out and discard the packaging lock.

Getting Started

Battery Removal and Installation

1. Make sure the unit is turned **OFF**.
2. Find the battery cover on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

⚠ WARNING:
Adult assembly required for battery installation.
Keep batteries out of reach of children.

⚠ ATTENTION :
Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en courtcircuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. On/Off Button ⊙

To turn the unit **On**, press the **On/Off Button**. Press the **On/Off Button** again to turn the unit **Off**.

2. Character Buttons

Press one of the six **Character Buttons** (Bandit, Chilli, Bluey, Bingo, Chloe and Snickers) to listen to messages from Bluey and Bingo about their family and friends.

3. Activity & Feature Buttons

Press the **Activity & Feature Buttons** to enter one of the five activities.

4. Number Buttons

1 2 3 4 5 6 7 8 9 0

Press the **Number Buttons** to hear Bluey say them.

5. Chat Button ⊙

Press the **Chat Button** to have a conversation with Bluey and Bingo.

6. OK Button OK

Press the **OK Button** to confirm your choice.

7. Left/Right Buttons ◀ ▶

Press the **Left/Right Buttons** to make a selection in activities or menus.

8. Phone Call Button ✆

Press the **Phone Call Button** to make a pretend phone call. You will hear the phone ringing then will be prompted to leave a message.

9. Cancel Call Button ✆

Press the **Cancel Call Button** at any time to exit the current activity.

10. Microphone ●

The **Microphone** is used for the voice activation feature. Be sure to keep the **Microphone** about 10 cm from your mouth for best results.

11. Automatic Shut-Off

To preserve battery life, the **Bluey Ring Ring Phone** will automatically turn **Off** after several minutes of inactivity. The unit can be turned **On** again by pressing the **On/Off Button**. The unit will also automatically turn **Off** when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

ACTIVITIES

1. Friends & Family

Press any of the **Six Character Buttons** (Bandit, Chilli, Bluey, Bingo, Chloe and Snickers) on the phone to play an animation of that character with a brief introduction or to listen to messages from Bluey and Bingo about their family and friends.

2. Dance Mode

Music Time! Listen to different music and see characters dance by pressing the **Number Buttons.** Press the **Left/Right Buttons** to change the main instrument of a melody.

3. Fruit Bat

Help Bluey catch fruit while pretending to be a fruit bat. Use the **Left/Right Buttons** to move Bluey and eat the fruit to keep flying.

4. Handstand

Bingo is doing handstands! Arrows or an OK icon will drop from the top of the screen. Press the matching **Left/Right Buttons** or **OK Button** when the icons get to the black square to keep Bingo from falling over.

5. Bubbles

Bluey is blowing bubbles. Join in by blowing into the **Microphone** and see how many bubbles you can blow!
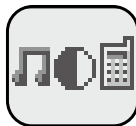
6. Chat

Chat with Bluey and Bingo. Press the **Chat Button** to hear Bluey or Bingo and see fun animations.

7. Settings

Personalize your phone with three ringtones, adjust the screen contrast and background music.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name:	VTech®
Model:	5546
Product Name:	Bluey Ring Ring Phone
Responsible Party:	VTech Electronics North America, L.L.C.
Address:	1156 W. Shure Drive, Suite 200
	Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.
CAN ICES-003(B)/NMB-003(B)

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty